

cybercast™

43" FULL HD DIGITAL SIGNAGE

43KFD20A



QUICK REFERENCE GUIDE


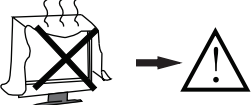

Thank you for purchasing the unit.

Safety Instruction



1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.
5. **Battery** - Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
6. **Earthing Connection** - The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
7. **Water and Moisture** - The appliance should not be used near water.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be located so that it is not likely to be walked on, or pinched by items placed upon it.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
15. **Objects and Liquids** - Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
16. **Conditions Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen on or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
17. This appliance should not be exposed to water and no objects filled with liquids such as a vase should be placed on the unit. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
18. Only for indoor used. (🏠).
19. **Caution** - There is a button cell inside. Place away from the old and kids, avoiding to be eaten by mistake. Once happened, please go to hospital for treating immediately.
20. Keep the key properly. There are high voltage and dangerous live parts inside. It's better to maintain and repair with a professional.
21. **Warning** - Operation of this equipment in a residential environment could cause radio interference.

<p>Warning</p> <p>High voltages are used in the operation of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.</p>	<p>Warning</p> <p>To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.</p>	<p>Warning</p> <p>Do not insert foreign objects into the unit's slots or openings. Never spill any kind of liquid on the unit receiver.</p>
<p>Caution</p> <p>If the unit is placed into a confined space, ensure that the minimum distances are observed as shown. Heat build up can reduce the service life of your unit, and can also be dangerous.</p>	<p>Caution</p> <p>Never stand on, lean on, push or apply force to the product or its stand. You should pay special attention to children.</p>	<p>Caution</p> <p>Do not place the main unit on an unstable cart stand, shelf or table. Serious injury to an individual, and damage to the unit, may result should it fall.</p>

 <p>Caution</p> <p>When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.</p>	 <p>Caution</p> <p>Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position unit receiver directly on other products which give off heat e.g. video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.</p>	 <p>Caution</p> <p>The panel used in this product is made of glass. It can break if the product is dropped or if force is applied to the panel. Individuals should exercise caution when dealing with broken glass should the panel break.</p>
--	--	--

Exemptions

- Cybercast is not liable for any damage caused by fires, natural disaster (such as thunderstorms, earthquake, etc.), acts by the third parties, accidents, owner’s misuse or use in other improper conditions.
- Cybercast is not liable for incidental damages (such as profit loss or interruption in business, modification or erasure of record data, etc.) caused by use or inability to use of product.
- Cybercast is not liable for any damage caused by neglect of the instructions described in the owner’s manual.
- Cybercast is not liable for any damage caused by misuse or malfunction through simultaneous use of this product and the connected equipment.

Introduction

 
Thank you for purchasing the unit. Your unit will bring you years of high-quality viewing enjoyment. The appliance is easy to operate and provides exceptionally high quality image. The manual will explain the operation of the unit, including its functions, features and other important features. Before installing or operating your unit, please take the time to thoroughly read this manual, particularly the sections on safety.

Thanks for purchasing the unit. The latest news, software, utility, driver, product, manual and Q&A will be found at Cybercast website.


[Http://www.cybercast.com.au](http://www.cybercast.com.au)

Mounting instructions for base

1. Remove the whole machine and base components from the packing case;
2. In order to protect the screen of the whole machine, cover the flat surface with soft material (such as blanket), and then put the screen surface of the whole machine Put it down on top;
3. Remove the screw from the accessory bag and fasten the base to the machine according to the following instructions.

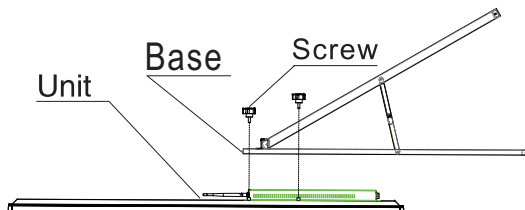


Antenna Assembly Diagram

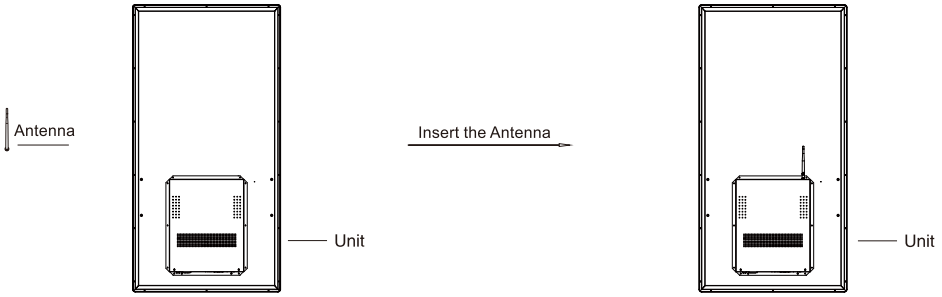 


Connecting the Power Cord

 Connect the power cord directly to the socket.

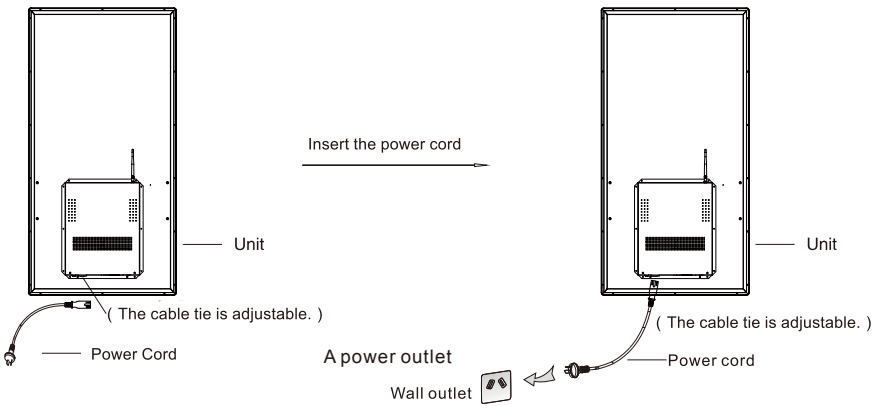

 3. The WIFI Settings

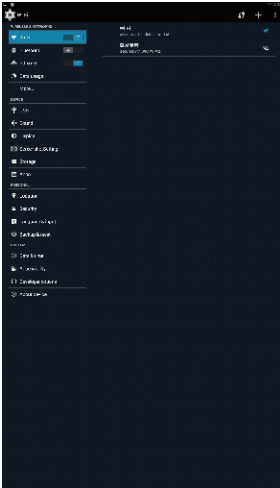

According to the remote control ▼ ▲ ,

 
Select this item and press ► go to Settings.

Wifi-2.4g antenna needs to be added, and the customer shall increase the antenna with corresponding strength according to their own needs, i.e

Can be. As shown on the left, turn on the WIFI switch; Select the WIFI signal to be connected, and enter the corresponding password, You can successfully connect.

Note: the availability and coverage of I WIFI signals depends on the number of signals, antenna performance and external environment

4. Ethernet Settings

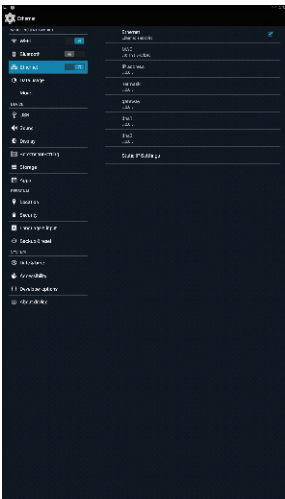


According to the remote control ▼ ▲ ,

Select this item and press ► go to Settings.

Plug in the cable and turn on the Ethernet switch in the Settings page on the wireless and network. The system will automatically get the IP address, as shown in the figure that Ethernet connection is successful.


Note: Ethernet's C MAC address is the system's only permanently valid device ID.

 5. Display Settings

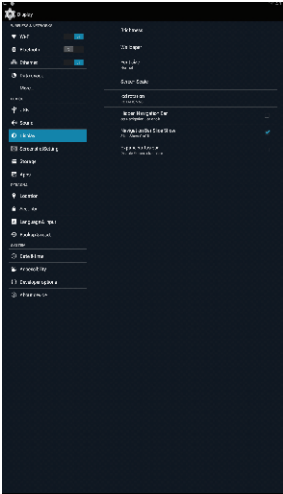

According to the remote control ▼ ▲ ,
 Select this item and press ► go to Settings.

 
5.1 hidden status bar setting interface

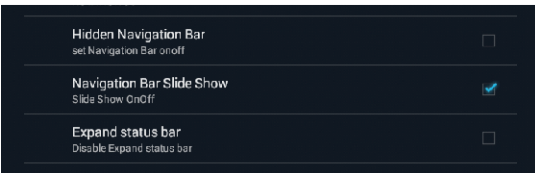

In Settings, select "show" and open "hide status bar", "Navigation bar slide display" can slide up the navigation bar with the mouse or touch the bottom of the screen, highlight 5S and automatically disappear, Hidden;Open the "no drop-down notifications" and the top will no longer be able to pull down notifications..

Note: when using the publishing system, the status bar will cause the publishing system to read resolution error, hidden Status bar is ok.

 6. Language Settings

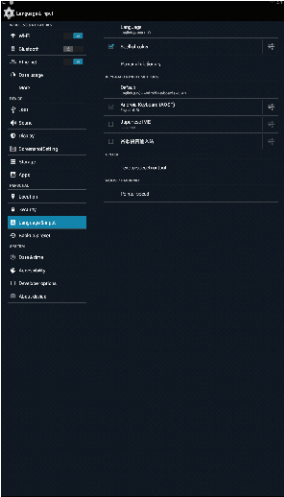


According to the remote control ▼ ▲ ,
Select this item and press ► go to Settings.

7. Device information view



In Settings, select "device information" and go to the image on the left.
Where, "processor type" is the current chip model;
"Android version" is the Android version of the current system;
"Kernel version" is the kernel version of the current system;
Version number is the version number of the current system software.

 9. Document management

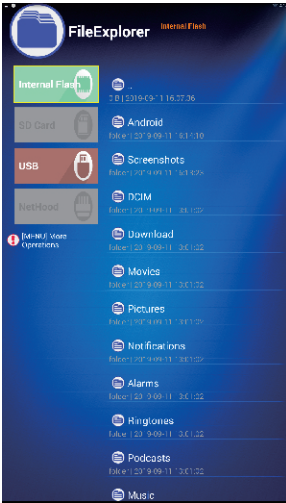

According to the remote control ▼ ▲ , Select this item and press ► go to Settings.

Select the local or usb drive file to play.

Video format:Support RM/RMVB, MKV, TS, FLV, AVI, VOB, MOV, WMV, MP4, etc.

Image format:Support BMP, JPEG, PNG, GIF, etc.

Play mode:Support cycle, timing, plug and other playback modes.

10. Analysis of common faults

1. The machine has a black screen and no backlight. Check whether the 220V voltage is normal and the power cord drawn by the machine is external Whether the connection of the power cord is connected.
2. If there is no sound after starting, check whether the volume is adjusted to the minimum and whether the mute switch is turned on.
3. The remote control does not work, check whether the battery of the remote control is installed or whether the battery is charged.
4. The machine time is not displayed correctly. Connect to the network and turn on the automatic network update time.
5. This advertising machine is an intelligent chip control device, except for the above problems, it still cannot be reconnected to the power Normal operation, please contact supplier or professional repairman.

Remote Control

Power button
Toggles the unit between standby and on.

MUTE button
Press to mute the sound. Press again or press VOL+/- to resume.

Numerical buttons
Press 0-9 to select a unit/channel directly when watching the unit display screen. The channel changes after 2 seconds or press "OK" button to change immediately.

MENU button
Press to display the main menu.
EXIT button
Exit most menu to default status directly. Press to quit all menu.
Navigation keys (▲/▼/◀/▶/OK)
Allows you to navigate the on screen menus and adjust the system settings to your preference.

 
VOL+/-
Press to increase / decrease the sound level.



► Note:

Other buttons are invalid for this unit.

Package Contents

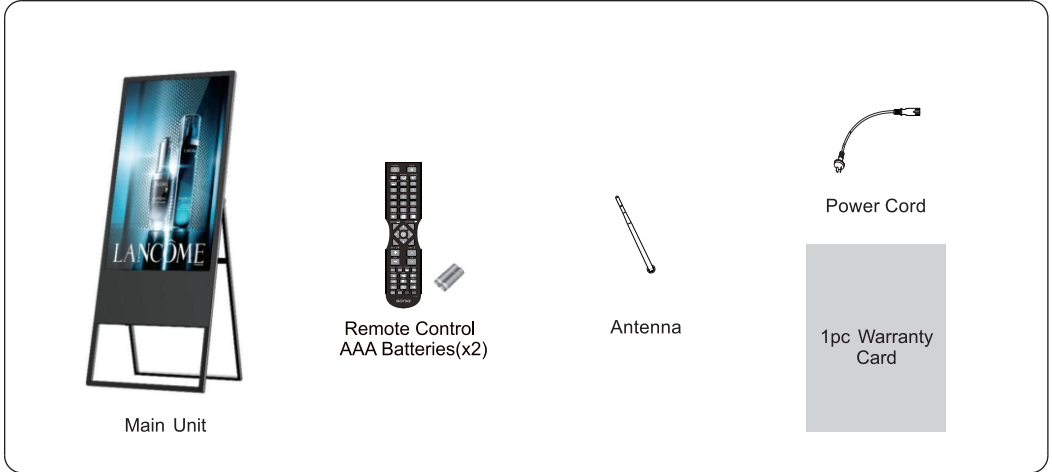

Specification

Power Source	~100-240V AC, 50/60Hz	
Electric Current	1.4A MAX	
Panel Spec	Active Screen Size	42.51inches(1,079.75 mm) diagonal
	Panel Native Resolution	1920 x 1080 pixels
	Brightness	300cd/m ²
	Contrast Ratio	1200 : 1
	Color Depth	8bit, 16.7 Million colors
Input/Output	USB2.0	USB2.0X1
	Micro SD CARD	Micro SD CARD SOCKETx1
	LINE OUT	LINE OUT X1
	LAN	RJ45 x 1
Audio Power	5W+5W	
Unit Dimension	597.2(L)*1532.1(H)*77.8(W)mm	

HOTLINE

- AUSTRALIA : www.soniq.com/au/contact-us
- NEW ZEALAND : www.soniq.com/nz/contact-us