 


Package Contents

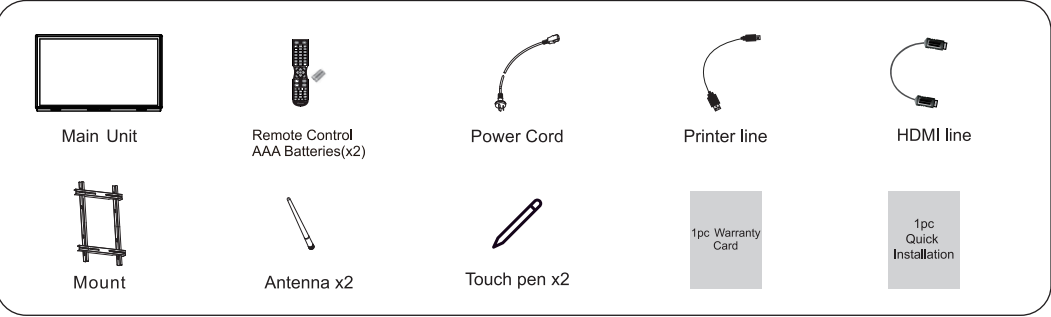


Specification

Power Source	~100-240V AC,50/60Hz	
Electric Current	2.5A(MAX)	
Panel Spec	Active Screen Size	1649.67(H)x927.94(V)mm
	Panel Native Resolution	3840x2160 pixels
	Brightness	350cd/m²(Typ)
	Contrast Ratio	1200:1(Typ)
	Color Depth	1.07Bilion colors
Input Port	Video input	DP IN X1
		VGA IN X1
		HDMI IN X3
		MINI YPBPR IN X1
		MINI AV IN X1
	Audio input	PC AUDIO IN X1
	Other input	USB 2.0 X2
		USB 3.0 X1
		Touch USB Interface X3
		100Mbps network RJ45 X1 (left)
		COAS X1
		RS232 X1
Output Port	Video Output	MINI AV OUT X1
		HDMI OUT X1
	Audio Output	EARPHONE X1
	Network Output	100Mbps network RJ45 x1 (right)
Audio Power	10W + 10W	
Unit Dimension	1773.91(L)X105.4(W)X1072.21(H)mm	



75" UltraHD SMART SIGNAGE

 75EUE70A

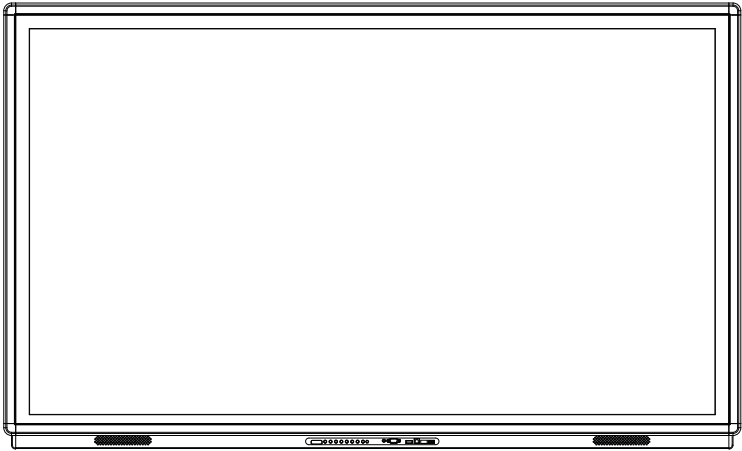

QUICK REFERENCE GUIDE

Thank you for purchasing the unit.

## Safety Instruction



- 1. Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
- 2. Retain Instructions** - The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow Instructions** - All operating instructions should be followed.
- 5. Battery** - Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 6. Earthing Connection** - The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
- 7. Water and Moisture** - The appliance should not be used near water.
- 8. Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
- 9. Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
- 10. Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
- 11. Grounding or Polarization** - Precautions should be taken.
- 12. Power Cord Protection** - Power supply cord should be located so that it is not likely to be walked on, or pinched by items placed upon it.
- 13. Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
- 14. Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
- 15. Objects and Liquids** - Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
- 16. Conditions Requiring Service** - The appliance should be serviced by qualified service personnel when:
  - The power-supply cord or the plug has been damaged.
  - Objects have fallen on or liquid has been spilled into the appliance.
  - The appliance has been exposed to rain.
  - The appliance does not appear to operate normally or exhibits a marked change in performance.
- 17.** This appliance should not be exposed to water and no objects filled with liquids such as a vase should be placed on the unit. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 18.** Only for indoor used. (🏠).
- 19. Caution** - There is a button cell inside. Place away from the old and kids, avoiding to be eaten by mistake. Once happened, please go to hospital for treating immediately.
- 20.** Keep the key properly. There are high voltage and dangerous live parts inside. It's better to maintain and repair with a professional.

<p><b>Warning</b></p> <p>High voltages are used in the operation of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.</p>	<p><b>Warning</b></p> <p>To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.</p>	<p><b>Warning</b></p> <p>Do not insert foreign objects into the television's slots or openings. Never spill any kind of liquid on the television receiver.</p>
<p><b>Caution</b></p> <p>Minimum distances</p> <p>If the television is placed into a confined space, ensure that the minimum distances are observed as shown. Heat build up can reduce the service life of your television, and can also be dangerous.</p>	<p><b>Caution</b></p> <p>Never stand on, lean on, push or apply force to the product or its stand. You should pay special attention to children.</p>	<p><b>Caution</b></p> <p>Do not place the main unit on an unstable cart stand, shelf or table. Serious injury to an individual, and damage to the television, may result should it fall.</p>

## Remote Control

**Power button**  
Toggles the unit between standby and on.

**MUTE button**  
Press to mute the sound. Press again or press VOL+/- to resume.

Press to go back to Home page from other applications, and press OK Button to display all applications.

After the Cybercast log-in interface appears, press the SOURCE Button to display the keyboard

EXIT,  
exit to the front page or exit to the program

**VOL+/-**  
Press to increase / decrease the sound level.

Pause during playing

Fast foward  
Fast rewind while playing multi-media

Previous/Next song or Videos while playing multi-media

 
Exit and return to List while playing

## ► Note:


Other buttons are invalid for this unit.

Main board Port Function Instruction


DownSide Port

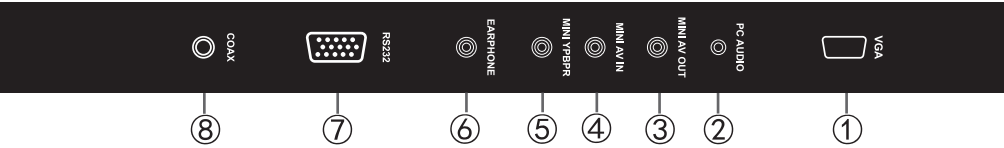


Side Port

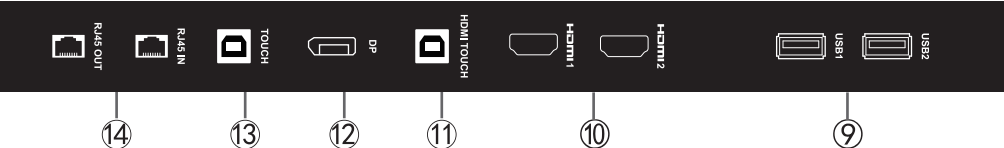 


Serial No.	Name	Description
1	VGA	VGA (AV/Video) Input port
2	PC AUDIO	PC Audio input port
3	MINI AV OUT	Composite port, connect to external (AV/Video) Display unit
4	MINI AV IN	Composite video/audio input port, connect to DVD or STB
5	MINI YPBPR	YPBPR (Video) port, connect to DVD or STB,etc.
6	EARPHONE	Earphone output
7	RS232	RS232 Communication serial port
8	COAX	COAX
9	USB	Connect USB device (mobile disk device)
10	HDMI	HDMI (AV/Video) connect DVD, Computer, STB, etc.
11	HDMI TOUCH	HDMI Touch input port
12	DP	DP
13	TOUCH	Touch input port
14	RJ45	Network port



 **Caution**  
When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.



 **Caution**  
Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat.e.g. video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.



**Caution**  
The panel used in this product is made of glass. It can break if the product is dropped or if force is applied to the panel. Individuals should execute caution when dealing with broken glass should the panel break.

Exemptions

- Cybercast is not liable for any damage caused by fires, natural disaster(such as thunderstorms, earthquake, etc.), acts by the third parties, accidents, owner’s misuse or use in other improper conditions.
- Cybercast is not liable for incidental damages(such as profit loss or interruption in business, modification or erasure of record data, etc.) caused by use or inability to use of product.
- Cybercast is not liable for any damage caused by neglect of the instructions described in the owner’s manual.
- Cybercast is not liable for any damage caused by misuse or malfunction through simultaneous use of this product and the connected equipment.

Introduction

 
Thank you for purchasing the unit. Your unit will bring you years of high-quality viewing enjoyment. The appliance is easy to operate and provides exceptionally high quality image. The manual will explain the operation of the unit, including its functions, features and other important features. Before installing or operating your unit, please take the time to thoroughly read this manual, particularly the sections on safety.

Thanks for purchasing the unit. The latest news, software, utility, driver, product, manual and Q&A will be found at Cybercast website.

[Http://www.cybercast.com.au](http://www.cybercast.com.au)


Wall-mount Installation

1. Install the mount, as shown in figure(1). Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
  2. Install the bracket, as shown in figure(2).
  3. Place the TV with bracket on the mount, as shown in figure(3).
- The above installation methods are for reference only! Installation methods may be different depending on the actual mounting situation.**  
**Highly recommend consult or ask the professionals to install!**

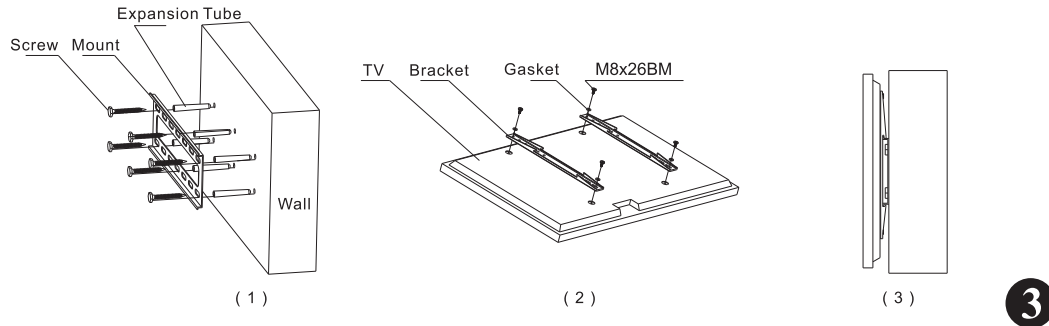


Wall Mounting Instruction

 This TV is equipped with mounting holes of 600x400mm.  
If the thickness of the wall mount is 2mm, 4PCS of type M8x26BM screws are required (the length of the screws fixed in the interior of the TV should not be longer than 30 mm).  
Recommend to use SONIQ wall mount and install by professional people (do not operate while the TV is on).

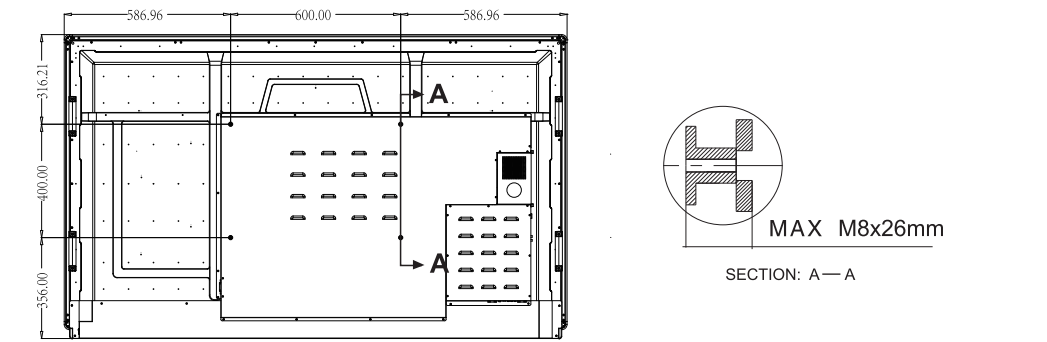


Connecting the Power Cord

 
Connect the power cord directly to the wall outlet.

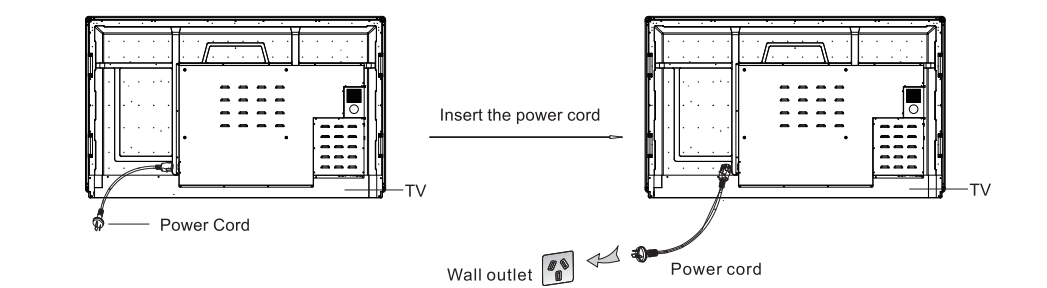

Front-end Key Instruction:

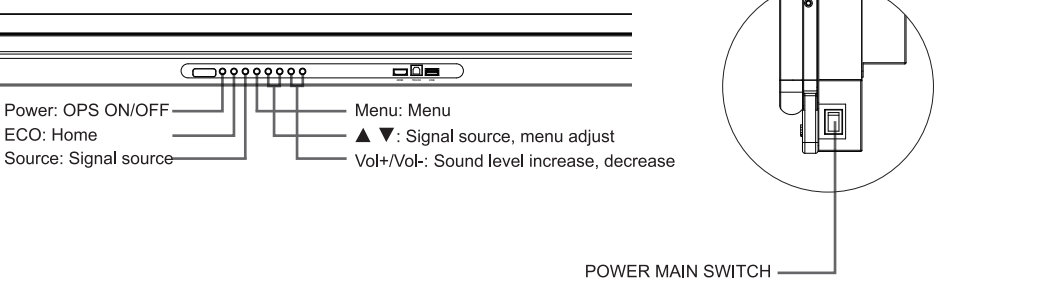 

Side Port Diagram

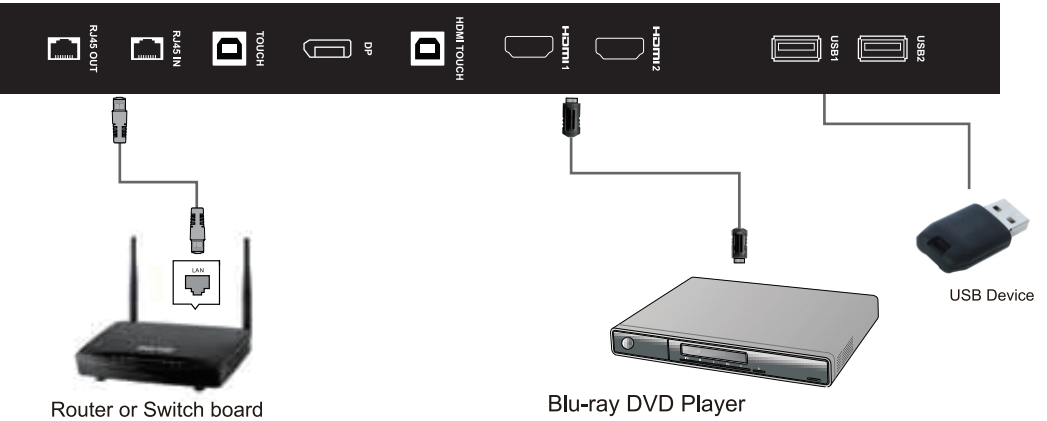 

Downside Port Instruction

