



65" UltraHD DIGITAL SIGNAGE TV
ASU6517A-GA



QUICK REFERENCE GUIDE

Thank you for purchasing the unit.

Safety Instruction



1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.
5. **Battery** - Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
6. **Earthing Connection** - The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
7. **Water and Moisture** - The appliance should not be used near water.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be located so that it is not likely to be walked on, or pinched by items placed upon it.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
15. **Objects and Liquids** - Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
16. **Conditions Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen on or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
17. This appliance should not be exposed to water and no objects filled with liquids such as a vase should be placed on the unit. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
18. Only for indoor used. (🏠).
19. **Caution** - There is a button cell inside. Place away from the old and kids, avoiding to be eaten by mistake. Once happened, please go to hospital for treating immediately.
20. Keep the key properly. There are high voltage and dangerous live parts inside. It's better to maintain and repair with a professional.

<p>Warning High voltages are used in the operation of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.</p>	<p>Warning To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.</p>	<p>Warning Do not insert foreign objects into the television's slots or openings. Never spill any kind of liquid on the television receiver.</p>
<p>Caution If the television is placed into a confined space, ensure that the minimum distances are observed as shown. Heat build up can reduce the service life of your television, and can also be dangerous.</p>	<p>Caution Never stand on, lean on, push or apply force to the product or its stand. You should pay special attention to children.</p>	<p>Caution Do not place the main unit on an unstable cart stand, shelf or table. Serious injury to an individual, and damage to the television, may result should it fall.</p>

<p>Caution When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.</p>	<p>Caution Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat.e.g. video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.</p>	<p>Caution The panel used in this product is made of glass. It can break if the product is dropped or if force is applied to the panel. Individuals should execute caution when dealing with broken glass should the panel break.</p>
--	---	--

Exemptions

- Cybercast is not liable for any damage caused by fires, natural disaster(such as thunderstorms, earthquake, etc.), acts by the third parties, accidents, owner’s misuse or use in other improper conditions.
- Cybercast is not liable for incidental damages(such as profit loss or interruption in business, modification or erasure of record data, etc.) caused by use or inability to use of product.
- Cybercast is not liable for any damage caused by neglect of the instructions described in the owner’s manual.
- Cybercast is not liable for any damage caused by misuse or malfunction through simultaneous use of this product and the connected equipment.

Introduction

Thank you for purchasing the unit. Your unit will bring you years of high-quality viewing enjoyment. The appliance is easy to operate and provides exceptionally high quality image. The manual will explain the operation of the unit, including its functions, features and other important features. Before installing or operating your unit, please take the time to thoroughly read this manual, particularly the sections on safety.

Thanks for purchasing the unit. The latest news, software, utility, driver, product, manual and Q&A will be found at Cybercast website.

 
 
 
[Http://www.cybercast.com.au](http://www.cybercast.com.au)

Wall-mount Installation

1. Install the mount, as shown in figure(1). Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
2. Install the bracket, as shown in figure(2).
3. Place the TV with bracket on the mount, as shown in figure(3).

The above installation methods are for reference only! Installation methods may be different depending on the actual mounting situation.

Highly recommend consult or ask the professionals to install!

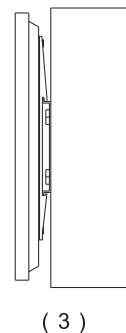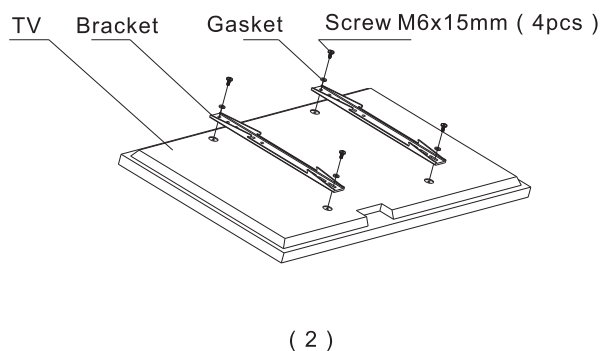
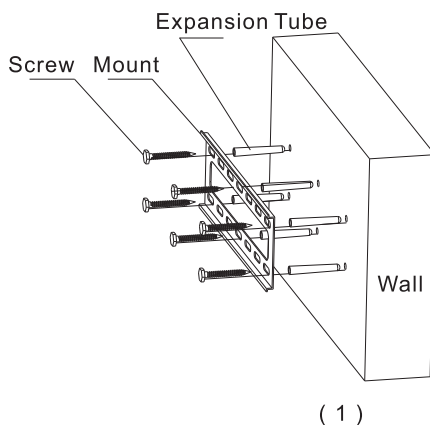


Wall Mounting Instruction


This TV is equipped with mounting holes of 400x400mm.

If the thickness of the wall mount is 2mm, 4PCS of type M6 x 12mm screws are required (the length of the screws fixed in the interior of the TV should not be longer than 12mm).

  Recommend to use SONIQ wall mount and install by professional people (do not operate while the TV is on).

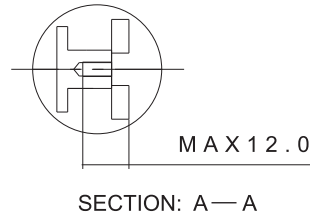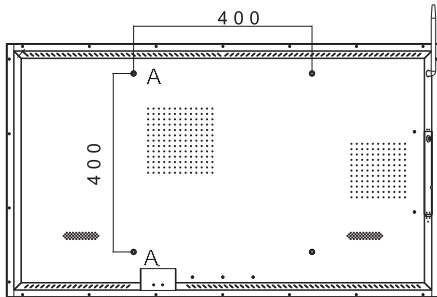


Antenna Assembly Diagram

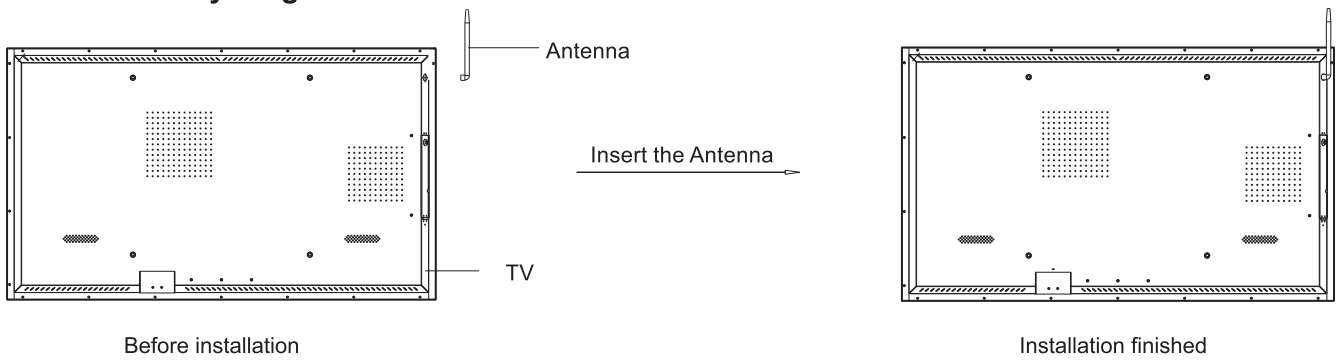 

Connecting the Power Cord

 
Connect the power cord directly to the wall outlet.

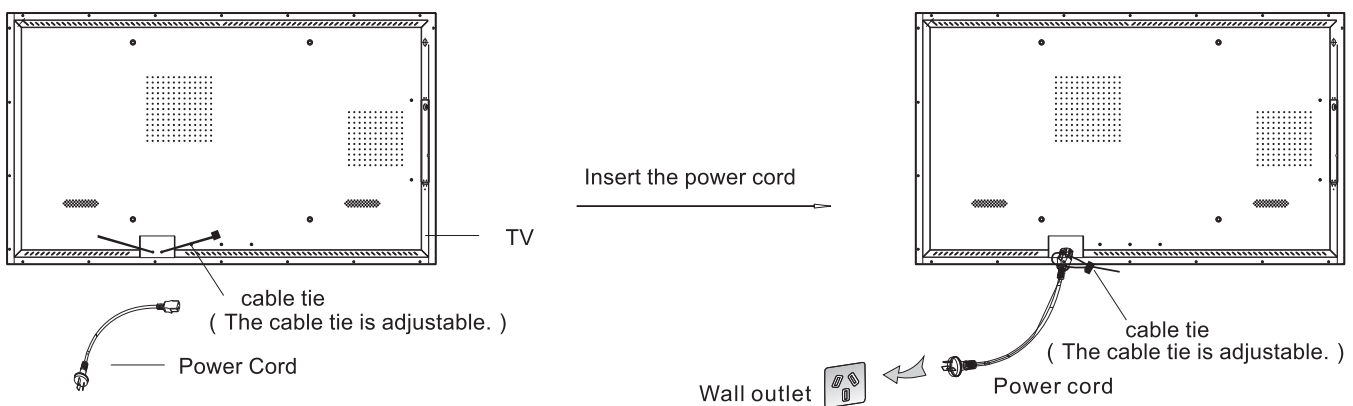

Network Connection

It will prompt to connect to a network when you turn on the TV for the first time.

 If there is no available network, press NEXT Button to exit. And press Home Button on the remote control to access Home Page.

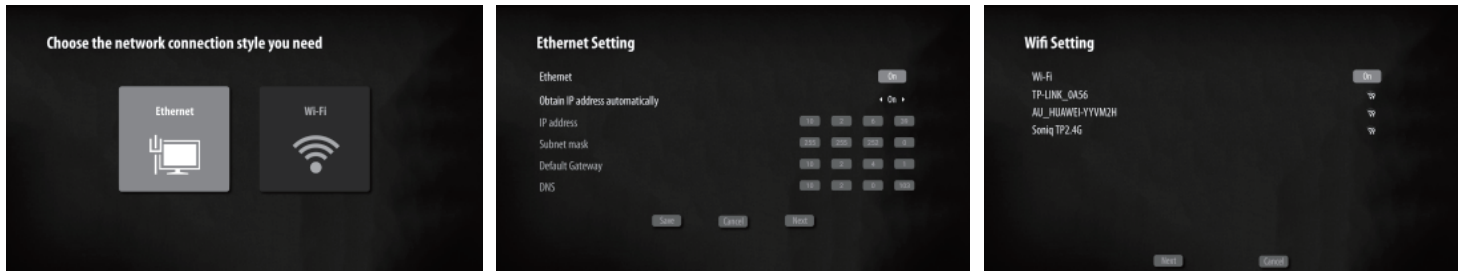

DTV Tuning

Press Source Button on the remote control to select DTV Mode, and press OK Button to enter.

1. Auto Tuning

Press Menu Button on the remote control to access Channel Search, and to select Full Band Search.



2. Manual Tuning

Press Menu Button on the remote control to access Channel Search, and to select Manual Search.



Source Setting

1. Select available Source Input by pressing the SOURCE Button on the remote control.



2. Use ▲/▼ Buttons to select and press “OK” Button to confirm.

Logging in

Login with your provided Cybercast account information. That includes a username and password.

Please login using your username and password

Username:

Password:

Device Manager

This is where you will manage your new or unassigned devices and create locations for them.

Add Location

Location name

Assigned Devices	Unassigned Devices
Devices assigned to this location	<ul style="list-style-type: none">Kd1officedeskKTDongle

Start by entering a suitable name for the location of your digital display. Then press **Save**.

Device Manager

This list will allow you to organise and edit a

Locations ^① All Devices ^④

▶ KT Office ^①

Your new location will now display under the **Device Manager** section.

 
Click on the tab called - All Devices. Your digital displays should appear here. Simply click assign. Then simply select your location and apply.

You have now assigned your digital display to your location.


Please proceed to Media Manager on the left-hand side menu.

Media Manager


This is where you will manage your media files, such as an image or video file.

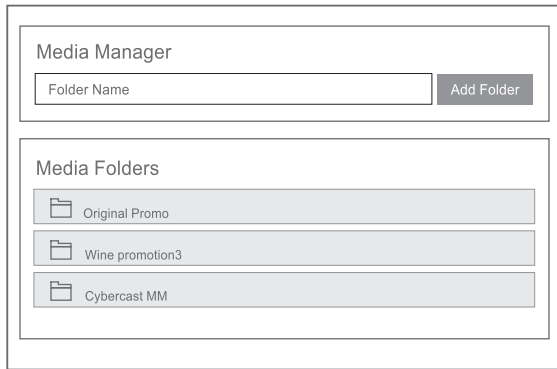

 Start by entering a name for the Folder you wish to import your media to.
Click **Add Folder**.

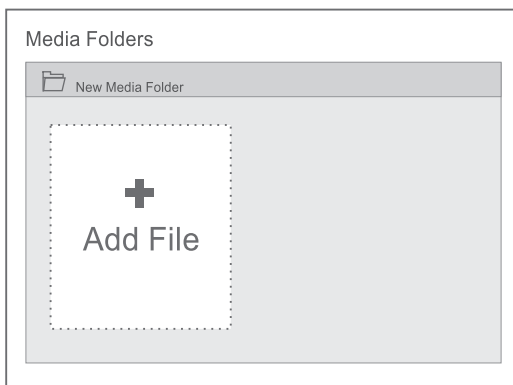

 
Select the files you want to import using the **Browse** button.
Select the Folder in the Folder view.
To add files to the folder click **Add File**.

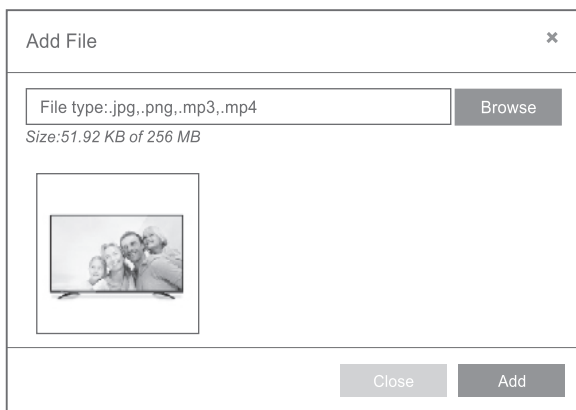

To add files to the folder click **Add**.

Campaign Manager

 This is where you will choose a template and attach media files to the template for your ads.

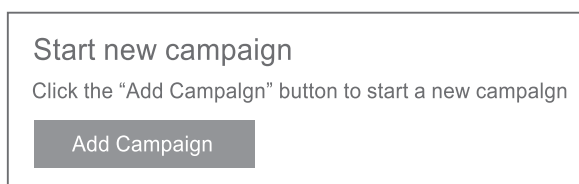


To start a new campaign, simply click on **Add Campaign**.

Campaign Creator

Campaign Name

 Type in a name for your campaign in the field provided.

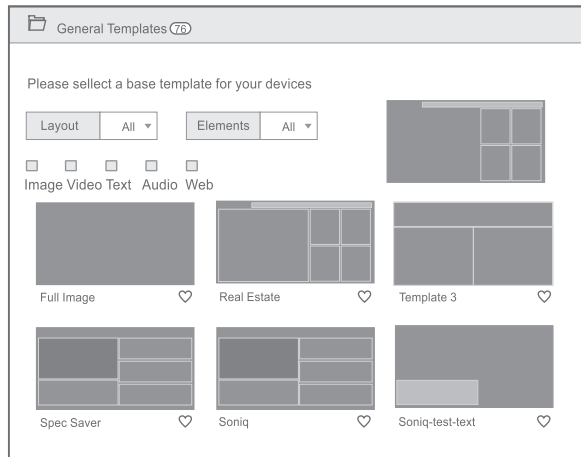


Then choose the template that best suits your advertisement.

Some templates can have sections allocated for videos or even scrolling text.


You can simply use the filter template options to find a suitable template.

* Be aware that you have the right artwork dimensions when adding media files to your Template.

 Campaign Manager

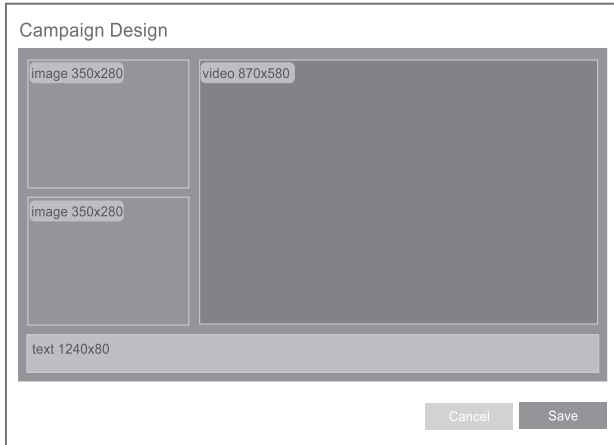


 Click on the template. You will now have the ability to upload files to the template. Click on the section you want to upload the media file.


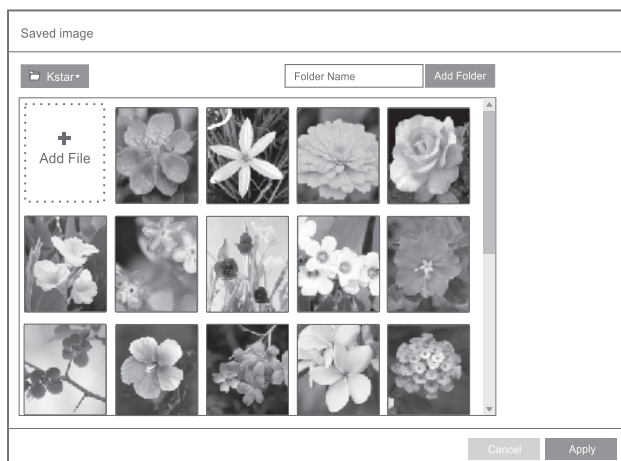


A popup will appear, where you'll be able to select your media files you have uploaded in Media Manager.

 
Campaign Manager

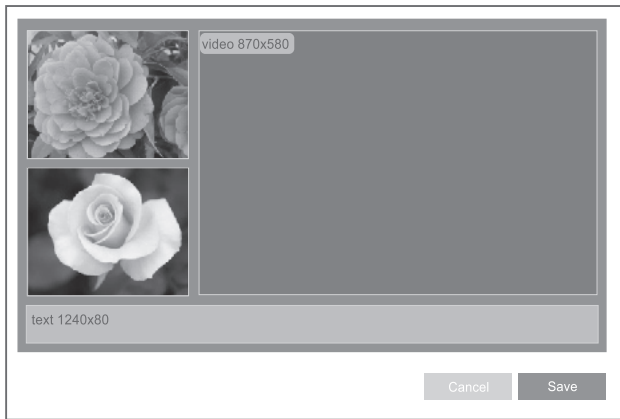

  Complete the rest of the sections and when you're done, press **Save**.
Or press **Cancel** if you want to choose another Template.

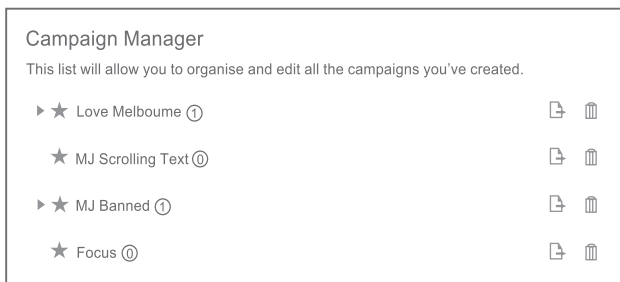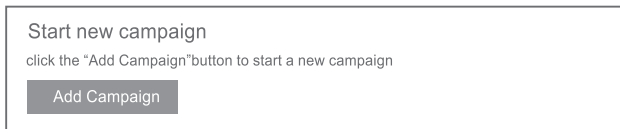

 Once saved, your campaign will be listed under **Campaign Manager**.

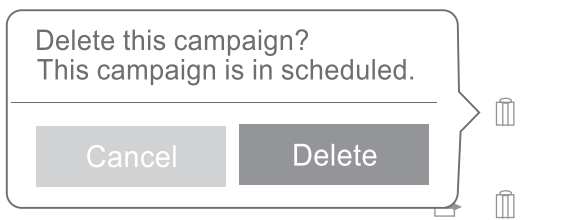

If you need to remove your campaign, click the bin icon to remove.

Schedule Campaign

After completing your first campaign, proceed to Schedule Manager on the left-hand side menu.

Remote Control

Power button
Toggles the unit between standby and on.

MUTE button
Press to mute the sound. Press again or press VOL+/- to resume.

Numerical buttons
Press 0-9 to select a TV channel directly when watching TV. The channel changes after 2 seconds or press "OK" button to change immediately.

Home button
Press to go back to Home page from other applications, and press OK Button to display all applications.

MENU button
Press to display the main menu.

SOURCE button
When logging on Cybercast, press Menu Button to popup logon interface. Input user name and press Exit Button, the cursor will skip to Password. Press Source Button to popup keyboard and input the password.

EXIT button
Exit most menu to default status directly. Press to quit all menu.

Navigation keys (▲/▼/◀/▶/OK)
Allows you to navigate the on screen menus and adjust the system settings to your preference.

VOL+/-
Press to increase / decrease the sound level.

Play/ Pause
When playing the multimedia video or music, press this button to stop playing and exit to the previous step.

 
◀◀/▶▶
When playing the multimedia video or music, press these buttons to play last and next track.

◀◀/▶▶
When playing the multimedia video or music, press these buttons to fast forward and fast backward.


► **Note:**

Other buttons are invalid for this unit.

Connection

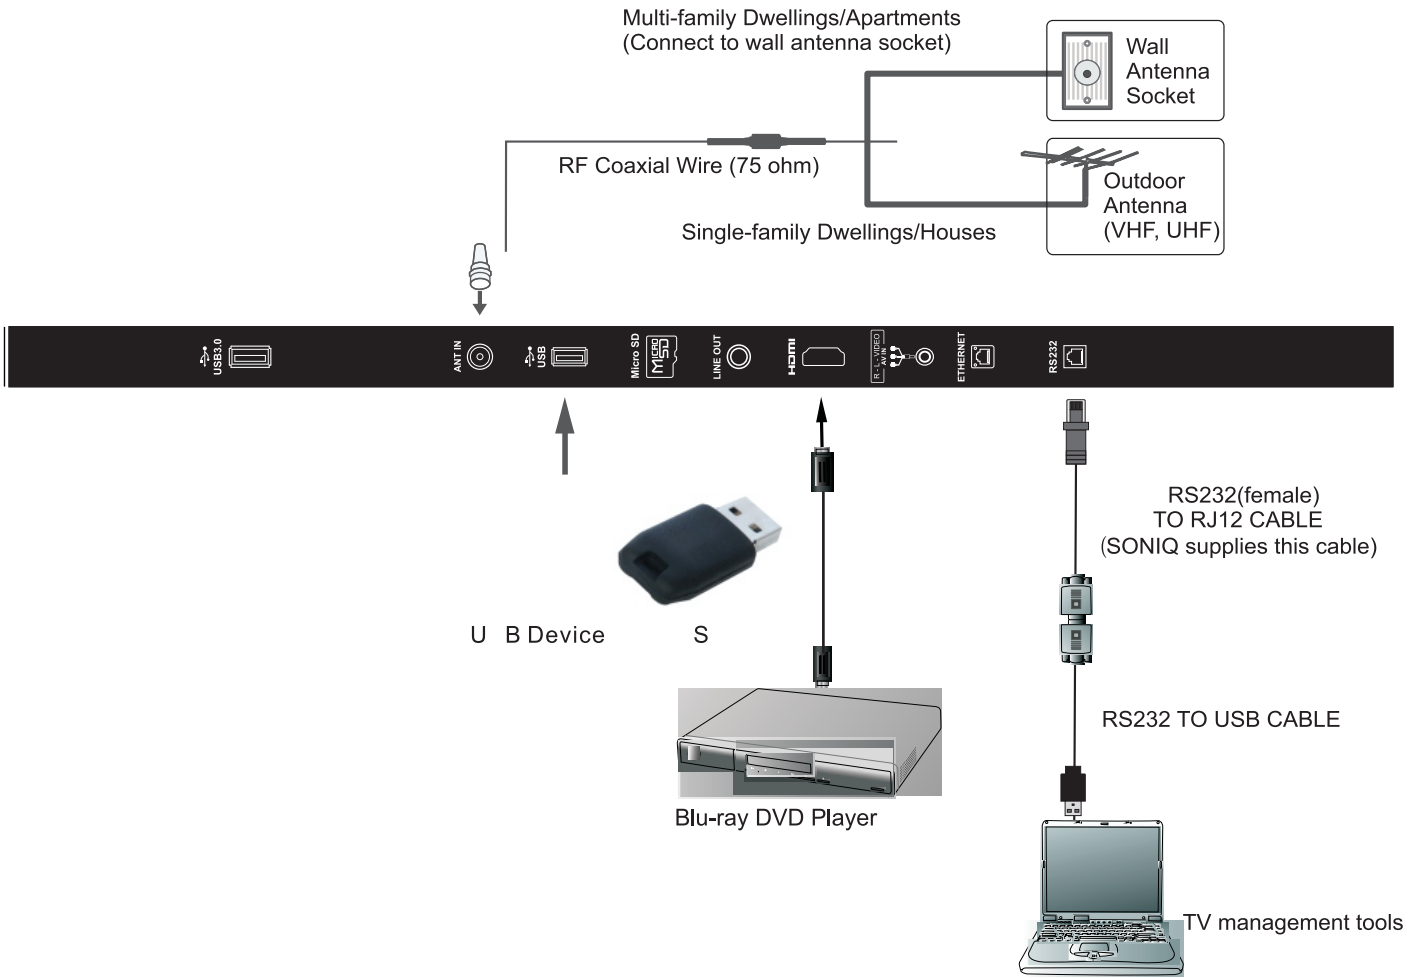

Package Contents

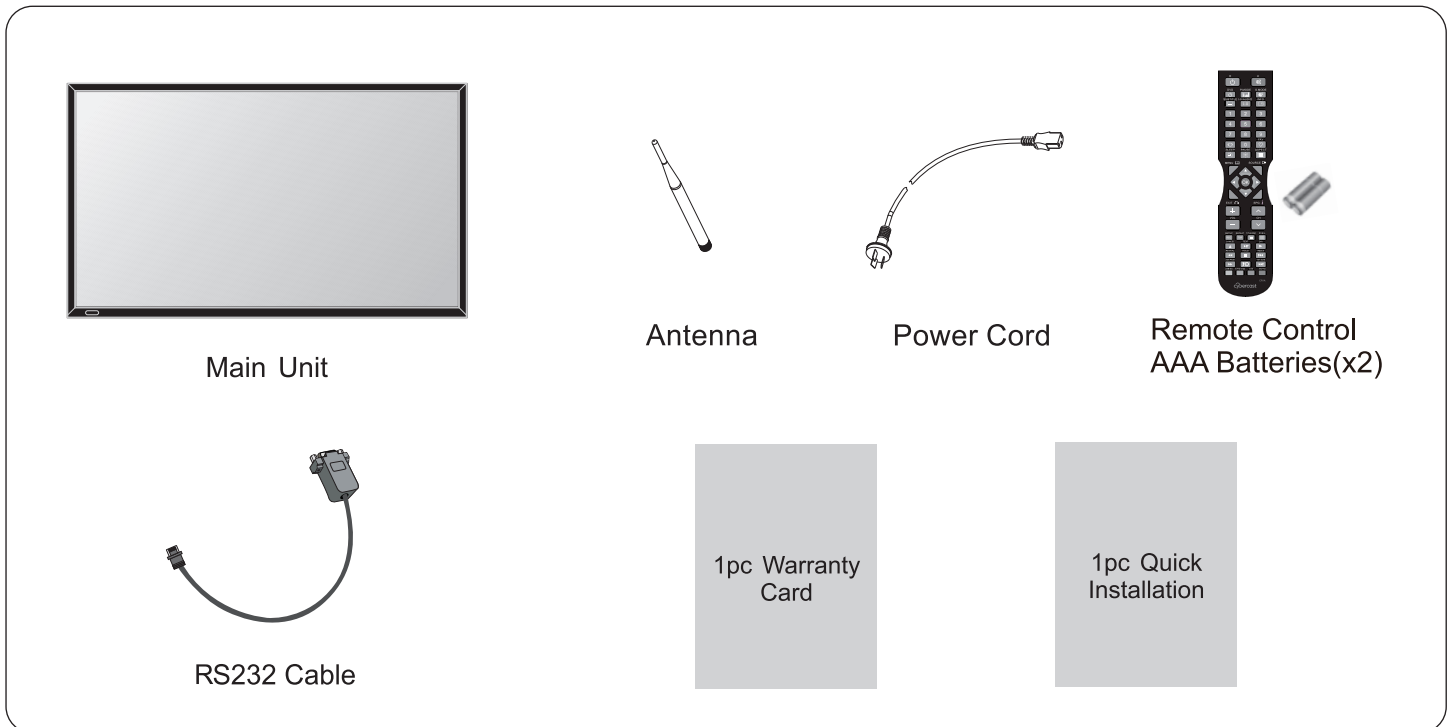 

Specification

Power Source	~100-240V AC, 50/60Hz	
Power Consumption	215W	
Panel Spec	Effective Display Area	1428.48mm x 803.52mm
	Panel Native Resolution	3840 x 2160pixels
	Brightness	450cd/m ²
	Contrast Ratio	1400 : 1
	Color Depth	10bit(D), 1.06Billion colors
Input/Output	USB2.0	USB2.0 X 1
	USB3.0	USB3.0 X 1
	AV	AV IN X 1
	LINE OUT	LINE OUT X 1
	RS232	RS232 X 1
	ANT	ANT IN X 1
	LAN	RJ45 X 1
	SD CARD	SD CARD SOCKET X 1
	HDMI	HDMI IN X 1
Audio Power	5W + 5W	
Unit Dimension	1469(L) x 55(W) x 850(H)mm	

HOTLINE

- AUSTRALIA : 1300 765 663
- NEW ZEALAND : 0800 100 236