

The BEXA logo is located in the top left corner. It features the word "BEXA" in a bold, black, sans-serif font. The letter "B" is stylized with a horizontal bar that extends to the left, creating a unique graphic element.

 
 
 
 
 
 
BEXA


Instruction Manual

Safety Instruction



- 1. Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
- 2. Retain Instructions** - The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow Instructions** - All operating instructions should be followed.
- 5. Battery** - Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 6. Earthing Connection** - The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
- 7. Water and Moisture** - The appliance should not be used near water.
- 8. Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
- 9. Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 10. Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
- 11. Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
- 12. Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
- 13. Grounding or Polarization** - Precautions should be taken.
- 14. Power Cord Protection** - Power supply cord should be located so that it is not likely to be walked on, or pinched by items placed upon it.
- 15. Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
- 16. Power Lines** - An outdoor antenna should be located away from power lines.
- 17. Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
- 18. Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
- 19. Objects and Liquids** - Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
- 20. Conditions Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen on or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
- 21.** This appliance should not be exposed to water and no objects filled with liquids such as a vase should be placed on the unit. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

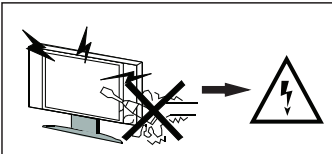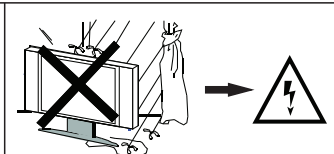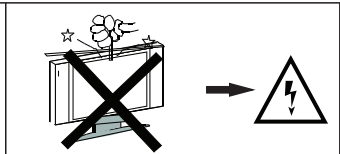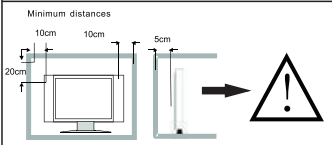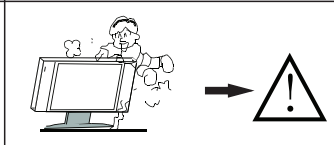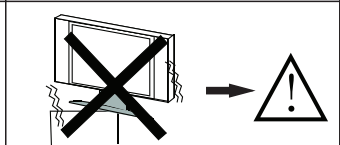 <p>Warning</p> <p>High voltages are used in the operation of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.</p>	 <p>Warning</p> <p>To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.</p>	 <p>Warning</p> <p>Do not insert foreign objects into the television's slots or openings. Never spill any kind of liquid on the television receiver.</p>
 <p>Caution</p> <p>If the television is placed into a confined space, ensure that the minimum distances are observed as shown. Heat build up can reduce the service life of your television, and can also be dangerous.</p>	 <p>Caution</p> <p>Never stand on, lean on, push or apply force to the product or its stand. You should pay special attention to children.</p>	 <p>Caution</p> <p>Do not place the main unit on an unstable cart stand, shelf or table. Serious injury to an individual, and damage to the television, may result should it fall.</p>

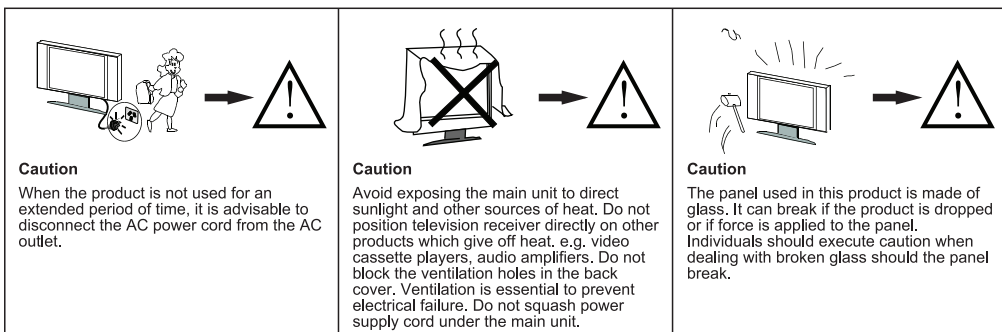 


Exemptions

- BEXA is not liable for any damage caused by fires, natural disaster (such as thunderstorms, earthquake, etc.), asts by the third parties, accidents, owner’s misuse or use in other improper conditions.
- BEXA is not liable for incidental damages (such as profit loss or interruption in business, modification or erasure of record data, etc.) caused by use or inability to use of product.
- BEXA is not liable for any damage caused by neglect of the instructions described in the owner’s manual.
- BEXA is not liable for any damage caused by misuse or malfunction through simultaneous use of this product and the connected equipment.

Introduction

Thank you for purchasing the unit. Your unit will bring you years of high-quality viewing enjoyment. The television is easy to operate and provides exceptionally high quality image. The manual will explain the operation of the unit, including its functions, features and other important features. Before installing or operating your unit, please take the time to thoroughly read this manual, particularly the sections on safety.

 
Package Contents

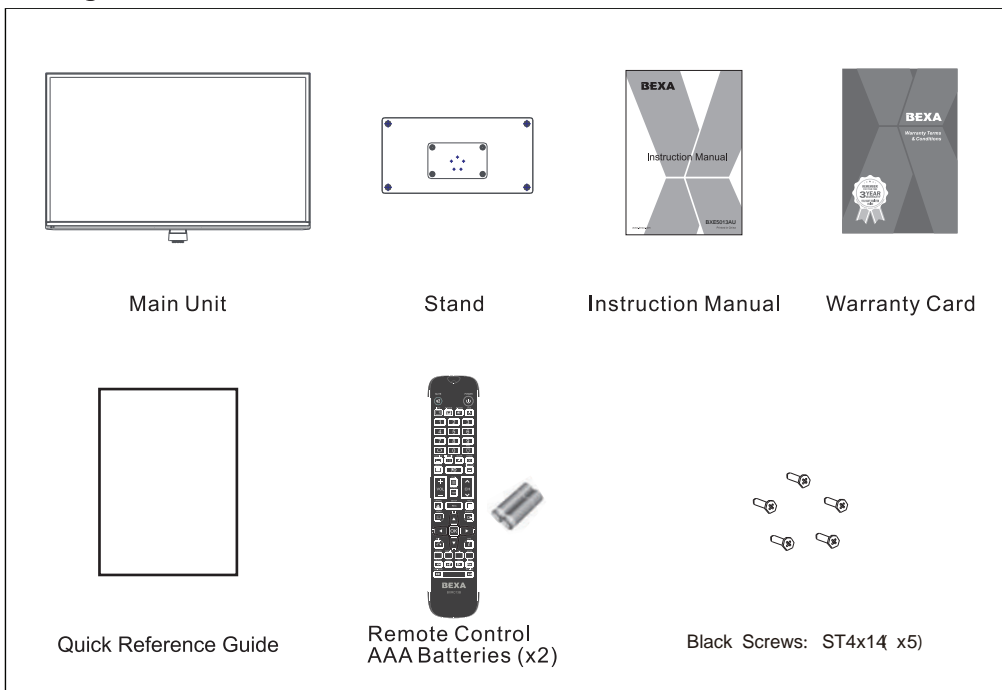


Stand Installation

Before performing work please lay the TV on the stand to prevent it from being damaged. Assemble the stand and unit with (5) screws. To remove the stand, reverse instruction as above.

 Black Screws: ST4x14 x5)

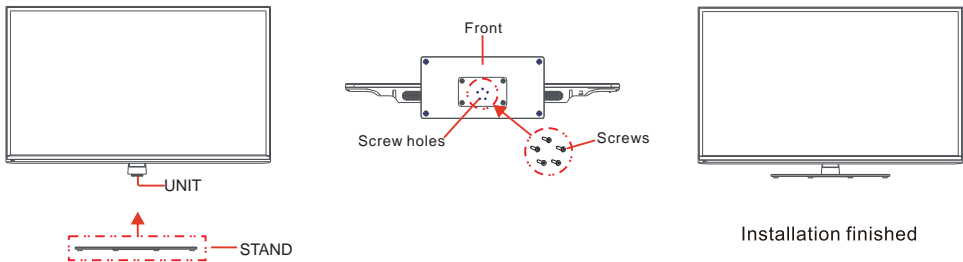


Front Panel

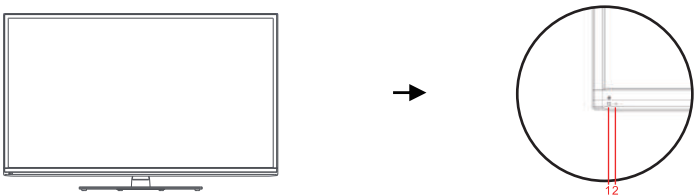 


No.	Name	Description
1	Remote Control Sensor Window	Receives the signal from the remote control. Do not put any objects in front of the window in order not to hinder the reception of signals.
2	Power Indicator	Lights up colorless when the unit is powered on; Lights up red when the unit is in standby mode.

Connecting the Power Cord

 Connect the power cord directly to the wall outlet.

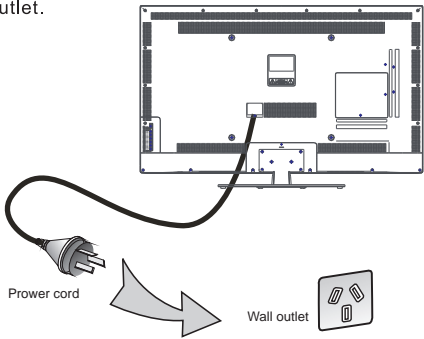

Connection

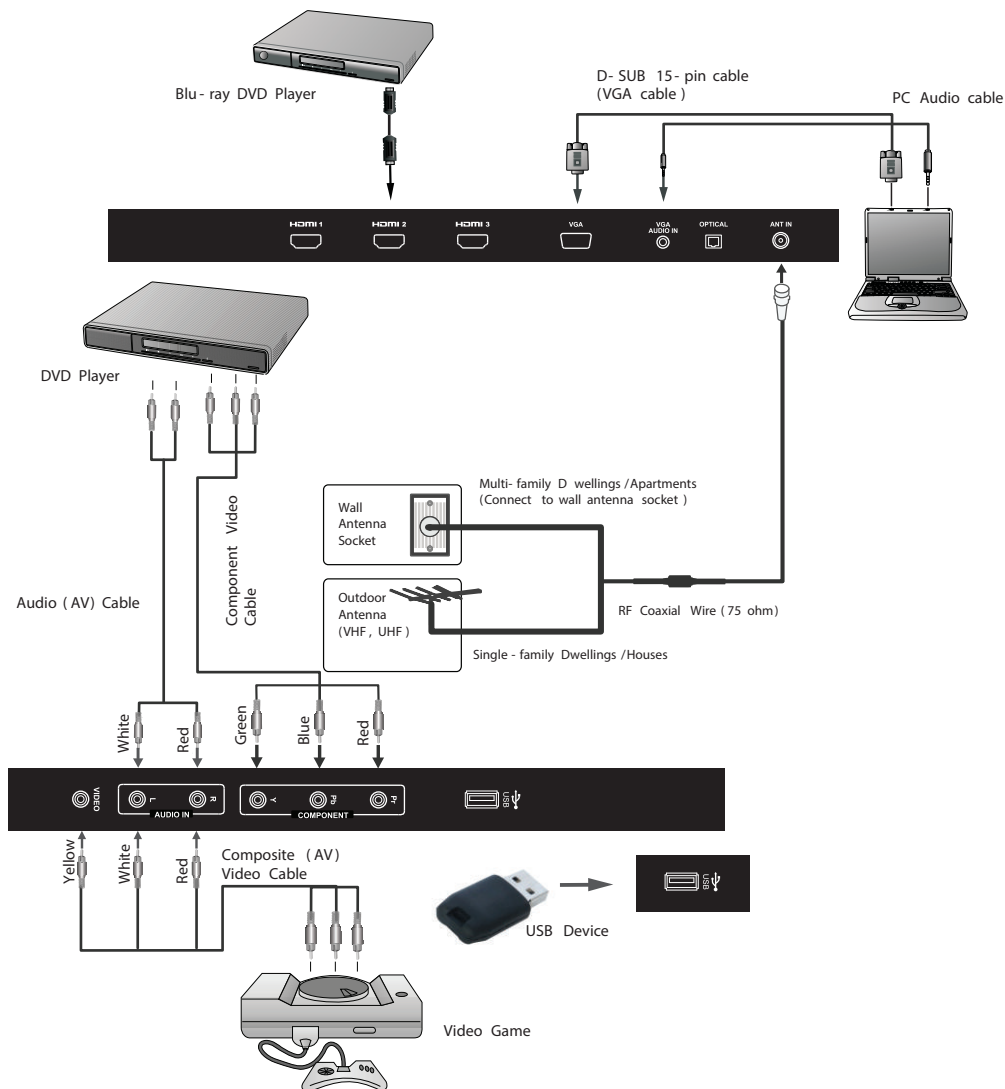 

Connection and Setup

Connecting the USB Device

Insert USB device directly to unit.

1. Please do not turn off the TV or unplug the USB device when connected USB storage device is working. When such device is suddenly separated or unplugged, the stored files or the USB storage device may be damaged.
2. Please use only a USB storage device which was formatted as a FAT32 file system, NTFS file system provided with the Windows operating system. In case of a storage device formatted as a different utility programmer which is not supported by Windows, it may not be recognized.
3. Please connect power to a USB storage device (over 500ma) which requires an external power supply. If not, the device may not be recognized.
4. If the USB HDD does not have an external power source, the USB device may not be detected. So be sure to connect the external power source.
5. The recommended capacity is 1TB or less for a USB external hard disk and 32GB or less for USB memory.
6. Only English is supported in USB mode. Other languages such as Chinese, Japanese, etc. Will not be displayed or display an error.

Remote Control

Remote Control Key Functions



MUTE button

Press to mute the sound. Press again or press VOL+/- to resume.

Numerical buttons

Press 0-9 to select a TV channel directly when watching TV. The channel changes after 2 seconds or press "OK" button to change immediately.



Press to return to previous channel.



FAV button

In TV mode, press FAV button to display your favorite programs.

SUBTITLE button

In DTV mode, press to change subtitle on / off. Has related functions under MEDIA mode.

I.I / AUDIO button

Press to select sound output mode.

SLEEP button

Press to activate sleep timer.

PAUSE button

Press to pause the current picture, press again to resume.

ASPECT button

Press to change the aspect ratio of the TV display.

MENU button

Press to display the main menu.

SOURCE button

Press to display the Source menu.

EXIT button

Exit most menu to default status directly. Press to quit all menu.

EPG button

Open or close EPG menu.

Navigation keys (▲/▼/◀/▶/OK)

Allows you to navigate the on screen menus and adjust the system settings to your preference.

Press OK in DTV mode to display channel list.

SUB. PAGE button

Prompt the user to enter a subcode for the Text page.

▶▶ button

Press to fast forward playback.

TXT. Size button

Toggles the text size display between half top page, half bottom page and normal.

▶▶▶ button

Press to skip to next chapter or track.



Power button

Toggles the unit between standby and on.

INFO button

Press to display the information of current system programme.

P.MODE button

Press to select preset picture mode.

S.MODE button

Press to select preset sound mode.

VOL+/-

Press to increase / decrease the sound level.

CH ▲ / V

Selects a programme in DTV / ATV mode.

PVR.L button

Press to display the recorded program list.

REPEAT button

In media source, press to repeat 1 / All or off.

TSR button

Press to delay the process of program broadcasting.

Has the function of timeshift under DTV mode.

CANCEL button

Only available in interactive application, TEXT menu and Music source.

HOLD button

Stop refurbish Text current page.

REC button

Press to record program to memory storage.

■ button

Press to stop media playback.

T/R button

In DTV mode, press to switch between radio and DTV channels.

A-B button

Enables you to repeat a selected section during Media video playback or DTV recording file playback.

GOTO button

Set play time in MEDIA mode.

REVEAL button

Display hidden Text characters.

◀◀ button

Press to fast reverse playback.

TEXT button

On / Off the teletext.

▶▶ button

Press to playback or pause the program.

D / A button

Switch directly between ATV and DTV.

INDEX button

Teletext index page.

◀◀ button

Press to return to previous chapter or track.

Note:

USB / SD / 3D / DVD / TITLE / PBC / SETUP / D.DIS / ▶▶ / ▲ are invalid.

Reminder

Your unit has integrated HD digital and analog tuner in the same unit. You can enjoy both digital and analog broadcasting under following set-up easily.
The latest news, software, utility, driver, product, manual and Q&A will be found at BEXA website
<http://www.bexa.com>


TV Auto Scan

you can perform digital and analog TV auto search program at below two methods.

Method 1




 - 1. Initial Setup window will be appeared when you first start to use.
This system is available in Australia or New Zealand.
- 2. Press “OK” button to enter the next step.



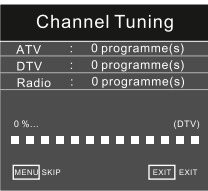


- 3. Use ◀/▶ ▲/▼ to choose the living area where you are located in this section. Press “OK” to start channel searching.

 Method 2

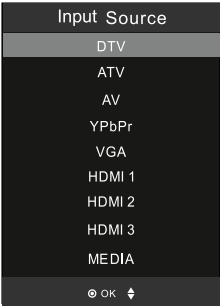

   - 1. Press SOURCE button on remote control to display Input Source.
- 2. Use ▲/▼ button to highlight DTV or ATV and press “OK” button to confirm.

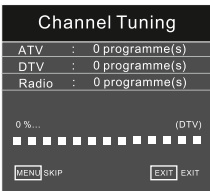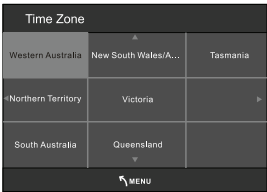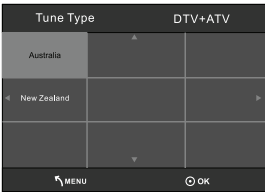

- 1. Press MENU button to display the main menu.
- 2. Use ◀/▶ button to select CHANNEL in the main menu, it will highlight the first option.
- 3. Press ▲/▼ button to select Auto Tuning, then press “OK” button to enter the next step.
- 4. Press ▲/▼ button to select Country, then press “OK” button to enter the next step.
- 5. Use ◀/▶ ▲/▼ to choose the living area where you are located in this section.
Press “OK” to start channel searching.

Supported PC Input Signal

Your unit can use as PC monitor, it supports below RGB-PC, HDMI mode INPUT.

RGB- PC, HDMI mode INPUT SPEC				
VGA/ HDMI 1/HDMI 2 Input				
INPUT FORMAT	Resolution	Horizontal frequency (KHz)	Vertical frequency (HZ)	Standard
	640x480	31.5	60	VGA
	640x480	37.86	72.809	VESA
	640x480	37.5	75	VESA
	720x400	31.5	70	VGA- T
	800x600	37.9	60	VESA Guidelines
	800x600	48.077	72.19	VESA
	800x600	46.9	75	VESA
	832x624	49.7	75	Mac
	1024x768	48.4	60	VESA Guidelines
	1024x768	60	75	VESA
	1152x870	68.68	75	Mac
	1280x800	47.8	59.8	Mac
	1280x960	60.0	60	VESA
	1360x768	47.7	60	VESA
	1366x768	47.712	59.79	VESA
	1920x1080	66.6	60.0	VESA

Specification

Operating Voltage	~ 220- 240V AC, 50Hz	
Power Consumption	130W~ 0.5 W (Standby)	
Video Format Supporting	COMPONENT	480i, 480p, 576i, 576p, 720p (50Hz/60Hz),
		1080i (50Hz/60Hz), 1080p (50Hz/60Hz).
	HDMI	480p, 576p, 720p (50Hz/60Hz),
		1080i (50Hz/60Hz), 1080p (50Hz/60Hz).
Digital TV	Programme Coverage	Australia
		VHF- H: 174 to 230MHz
		UHF: 522.5MHz to 816.5MHz
	Channel Bandwidth	7MHZ
	Video Decode	1080i, 720p, 576p, 576i
Analog TV	Audio	MPEG- 1; MPEG- 2; AC- 3
	TV System	PAL B/G; D/K; I
Panel Spec	Active Area	1095 .84 (H)x616 .41 (V)
		50inches
	Pixel Format	1920xR.G.Bx1080
		RGB vertical stripe
	Luminance White	250cd/m ²
	Contrast Ratio	5000:1
	Color Depth	8bit (D), 16.7M colors
Input & Output	Expected Life Time	about 30,000 hours
	ANT IN	ANT IN X 1
	HDMI input	HDMI X 3
	USB input	USB X 1
	YPbPr input	YPbPr X 1
	VGA input	VGA X 1
	VGA AUDIO input	VGA AUDIO X 1
	VIDEO/ AUDIO input	VIDEO/ AUDIO X 1
Audio Power	DIGITAL AUDIO OUT OPTICAL	DIGITAL AUDIO OUT OPTICAL X 1
Unit Dimension	1135(L) x 255(W) x 730(H)mm	

Design and specifications are subject to change without prior notice .

HOTLINE

- AUSTRALIA : 1300 765 663
- NEW ZEALAND : 0800 100 236