

The BEXA logo is rendered in a bold, black, sans-serif typeface. The letter 'B' is stylized with a horizontal bar that extends to the left, creating a distinctive graphic element. The letters 'E', 'X', and 'A' are also in a bold, sans-serif font, with the 'X' having a slightly irregular, hand-drawn appearance.

BEXA

Instruction Manual

Distinguished customer,

Thank you for choosing our speaker. Before operating this unit, please take the time to thoroughly read this manual, particularly the sections on safety. With stylish outer appearance, compact structure, high fidelity sound and multi-functionality, it has obtained patents concerning its outer appearance and adopted advanced electric and sound technology in the industry, ultimately making itself the best choice to hook up with your devices such as tablet, cell phone and digital music player etc. Perfectly by presenting you exceptional stereo effect either you are at home, on vacation or at work.

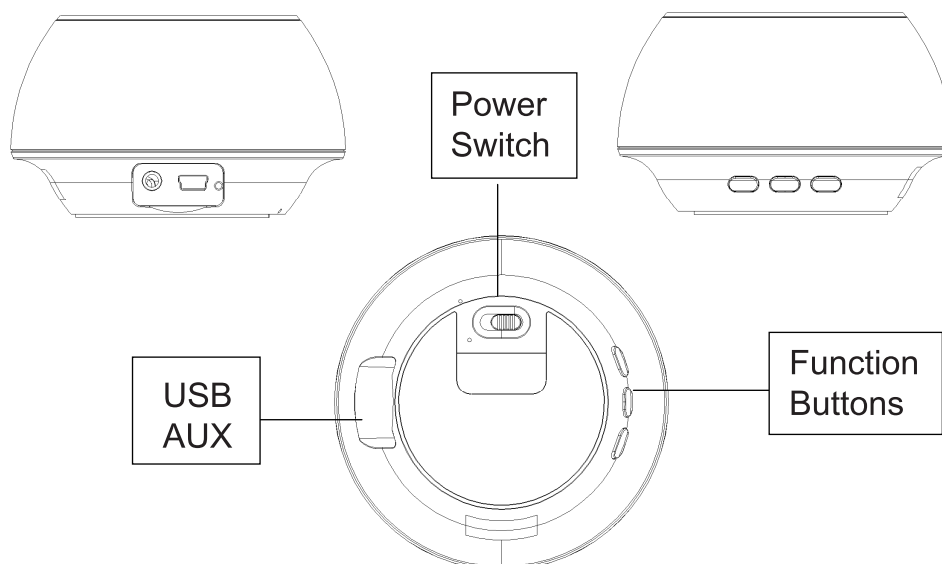
I. Precautions

- Please store and use this product at the ambient temperature;
- Do not expose this product to the rain or damp surroundings;
- Prevent this product from falling that could result in serious damage;
- Do not dismantle, repair or modify this product on your own;
- In order to avoid any risk, do not dispose this product inappropriately or toss it into the fire as there is a built-in lithium battery inside.

II. Considerate Hints



1. Do not turn up the volume to a fair high level constantly as this could shorten the service life of this product or impair your hearing.
2. When encountering any fault during operation, please cut off the power supply and disconnect the USB cable to prevent further damage to the speaker or other components.
3. The Bluetooth transmission range or connectivity could be affected by low battery power. In that case, please recharge immediately.

III. Outer Appearance and Function Buttons



1.  : play/pause/ mode.

During music playing, press it to pause; if it's pause, press it for playing; press and hold it for 3 seconds to change mode TF, BLUETOOTH, FM, AUX alternatively, press it to pause under AUX and re-press to play press it to pause under BLUETOOTH and TF mode and re-press to play, under BLUETOOTH mode, press it to answer the call when call comes, re-press to hang off.

2. —: Press it for a long time for volume decrease during music playing; short time press for last song. Under BLUETOOTH, it's only for volume decrease.
3. +: Press it for a long time for volume increase during music playing; short time press for next song. Under BLUETOOTH, it's only for volume increase.

IV. Features

1. Play MP3 format music from TF card directly
2. With built-in Li battery, can be powered by DC 5V USB cable
3. With power failure recovery function: automatically start from power off point when it's powered again
4. 3.5mm Aux cable, easy to connect with computer/MP3/MP4/IPOD/IPHONE...
5. Play music through bluetooth connection

V. Product Parameters

Product Model: BXM001

Bluetooth Specifications: Bluetooth 3.0

Transmission Distance: ≤10M(depending on operation environment and devices to which it connects.

Impedence: 4Ω

Frequency Response: 90Hz-20kHz

Sensitivity: 80db ± 2db

Signal to Noise Ratio (SNR): ≥75dB

Output Power: 3W x 1

Powered by Built-in Li battery/ USB DC 5V

Product size: φ62 × 76MM

VI. System Composition

- | | |
|--------------------|---------|
| 1. Speaker | 1 set |
| 2. 3.5 Audio Cable | 1 piece |
| 3. USB cable | 1 piece |
| 4. User's manual | 1 copy |
| 5. Warranty Card | 1 copy |

VII. Function Introduction

1. TF Mode

Plug in TF card with MP3 format music. During playing, press — for last song,

▶▶/+ for next song; press MODE and hold it for 3 seconds to change mode alternatively; press ▶▶ to pause or play again; press — for 3 seconds to decrease volume, + for volume increase.

2. AUX mode

Connect the speaker with audio device like computer/MP3/MP4/IPOD/IPHONE, press ◀◀/— for 3 seconds to decrease volume, ▶▶/+ for volume increase. Under AUX mode, press ▶▶ for pause or play.

3. BLUETOOTH mode

Change the mode into BLUETOOTH, blue light of the speaker will keep glistering. Switch on other bluetooth device like mobile, Laptop, etc to search for the speaker. When the bluetooth searching model default as SP-B200 is found by the bluetooth device, match the two devices. If they're successfully matched, the speaker will beep. Bluetooth device also displays information concerning successful connection. As the speaker is able to memorize the last paired device, it will automatically pair up with the device to which it connected successfully last time when turned on. If no bluetooth device is available after the speaker is shifted to BLUETOOTH mode for 5 minutes, bluetooth function of the speaker will close. For 2nd connection, please turn off the speaker, shift to BLUETOOTH mode and re-connect.

Remark: When connection fails, please double check if power is enough for the speaker; or turn off the speaker and switch on for trying again.

4. FM mode

Plug in AUX cable as signal antenna under FM mode. Press ▶▶ for 3 seconds to search, save and delete channels. Press ◀◀/— for last channel, ▶▶/+ for next channel. Press ▶▶/+ for 3 seconds to increase volume, ◀◀/— to decrease volume.

5. Music playing under BLUETOOTH mode

During music playing under BLUETOOTH mode, press ◀◀/— for a long time for volume decrease, ▶▶/+ for volume increase.

Remark: When the speaker plays music through bluetooth connection, music choosing or pausing is done on bluetooth device like mobile, Laptop. You can't choose music or pause by the speaker.

6. Hands-free call answering

When the speaker is playing music from mobile through bluetooth, the speaker will beep if somebody calls your mobile. Press 📞 on the speaker to answer the call with the speaker, repress to hang off. In bluetooth connection, press 📞 twice, the speaker can dial the last cell phone Number you called.

7. Recharge

Connect the speaker with computer through Mini USB, red light on the speaker will indicate it's been recharged. When red light is off, it's been 100% recharged.

VIII. Compatibility

Wireless: Devices configured with Bluetooth 3.0 or higher version such as IPAD, IPHONE (at least the second generation IPHONE installed the IPHONE software

3.1), IPOD TOUCH and MAC as well as a majority of intelligent phones or computers that support Bluetooth.

BLUETOOTH: V3.0 consists of protocols like: A2DP, AVRCP, HFP.

IX. Troubleshooting

Faults	Solutions
TF card does not work	(1) Check whether there're some quality problems with the TF card (2) Check if music from TF card is in MP3 format
No signal under FM mode	(1) Check whether signal is available around (2) Check if Aux cable is plugged in as antenna
If signal around is not good how to improve	(1) Plug Aux cable as outer antenna

BEXA

HOTLINE

- AUSTRALIA: 1300 765 663
- NEW ZEALAND: 0800 100 236
- HONG KONG: 00852-26909889