


















Caused by software update, please follow below instruction for alarm setting.

Alarm Setting

This device can set 2 sets of alarms, operations are as follows:

1. Short press  button to clock mode, long press  button for 3 seconds for alarm setting, display panel flashes  or  , then rotate knob to select alarm  or  .
2. Short press  , HOUR digits on display panel flash, rotate knob to change alarm hour. Short press  , MINUTE digits flash, rotate knob to change minute.
3. Short press  to ON/OFF alarm, then long press  or  to exit alarm setting. If without any operations within 10 seconds, it will exit alarm setting automatically.
4. When short press  to ON,  or  will light after exit alarm setting, which means alarm setting is activated. When to OFF, the alarm setting is not activated.
5. When alarm setting is ON, in any mode, when alarm clock arrives, device will ring for 1 minute, press any button/key on device/remote control, alarm clock will be stopped; each alarm clock rings every 5 minutes, alarm clock will stop after ringing for 3 times in one day.
6. Short press  button to clock mode, long press  button for 3 seconds, short press  to OFF, the activated alarm will be canceled.