 




# Instruction Manual

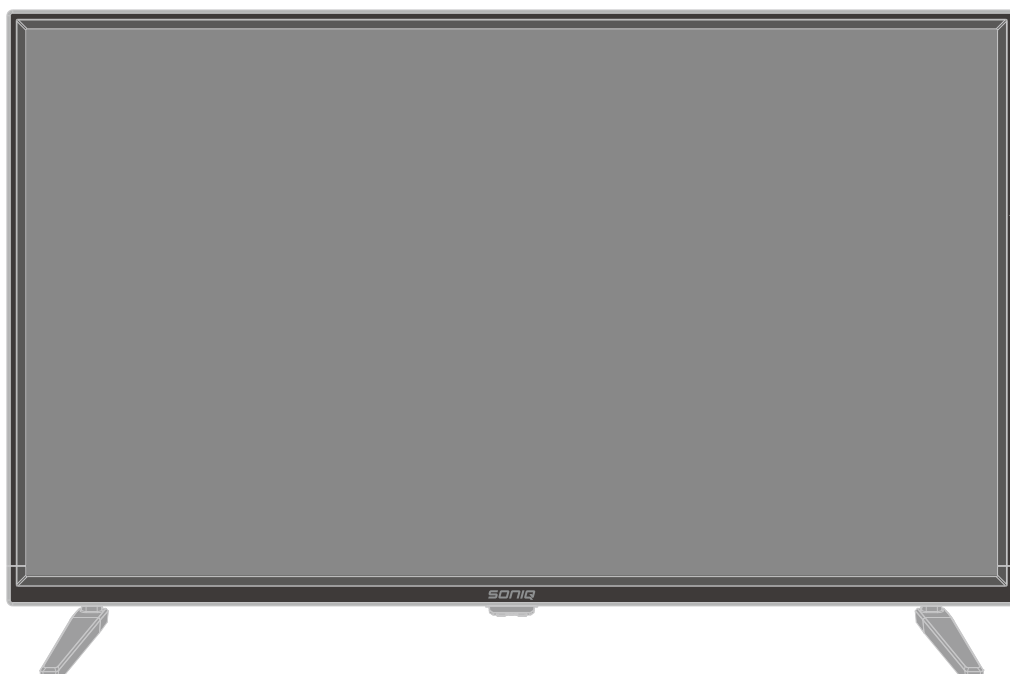

## **E32HV18A-AU REV.A**

# Safety Instruction



1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.
5. **Battery** - Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
6. **Earthing Connection** - The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
7. **Water and Moisture** - The appliance should not be used near water.
8. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
9. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
10. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
11. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
12. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
13. **Grounding or Polarization** - Precautions should be taken.
14. **Power Cord Protection** - Power supply cord should be located so that it is not likely to be walked on, or pinched by items placed upon it.
15. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
16. **Power Lines** - An outdoor antenna should be located away from power lines.
17. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
18. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
19. **Objects and Liquids** - Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
20. **Conditions Requiring Service** - The appliance should be serviced by qualified service personnel when:
  - The power-supply cord or the plug has been damaged.
  - Objects have fallen on or liquid has been spilled into the appliance.
  - The appliance has been exposed to rain.
  - The appliance does not appear to operate normally or exhibits a marked change in performance.
21. This appliance should not be exposed to water and no objects filled with liquids such as a vase should be placed on the unit. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

<p><b>Warning</b> High voltages are used in the operation of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.</p>	<p><b>Warning</b> To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.</p>	<p><b>Warning</b> Do not insert foreign objects into the television's slots or openings. Never spill any kind of liquid on the television receiver.</p>
<p><b>Caution</b> If the television is placed into a confined space, ensure that the minimum distances are observed as shown. Heat build up can reduce the service life of your television, and can also be dangerous.</p>	<p><b>Caution</b> Never stand on, lean on, push or apply force to the product or its stand. You should pay special attention to children.</p>	<p><b>Caution</b> Do not place the main unit on an unstable cart stand, shelf or table. Serious injury to an individual, and damage to the television, may result should it fall.</p>
<p><b>Caution</b> When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.</p>	<p><b>Caution</b> Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat e.g. video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.</p>	<p><b>Caution</b> The panel used in this product is made of glass. It can break if the product is dropped or if force is applied to the panel. Individuals should execute caution when dealing with broken glass should the panel break.</p>

 
## Exemptions

- SONIQ is not liable for any damage caused by fires, natural disaster(such as thunderstorms, earthquake, etc.), acts by the third parties, accidents, owner's misuse or use in other improper conditions.
- SONIQ is not liable for incidental damages(such as profit loss or interruption in business, modification or erasure of record data, etc.) caused by use or inability to use of product.
- SONIQ is not liable for any damage caused by neglect of the instructions described in the owner's manual.
- SONIQ is not liable for any damage caused by misuse or malfunction through simultaneous use of this product and the connected equipment.

## Introduction

Thank you for purchasing the unit. Your unit will bring you years of high-quality viewing enjoyment. The television is easy to operate and provides exceptionally high quality image. The manual will explain the operation of the unit, including its functions, features and other important features. Before installing or operating your unit, please take the time to thoroughly read this manual, particularly the sections on safety.


## Package Contents

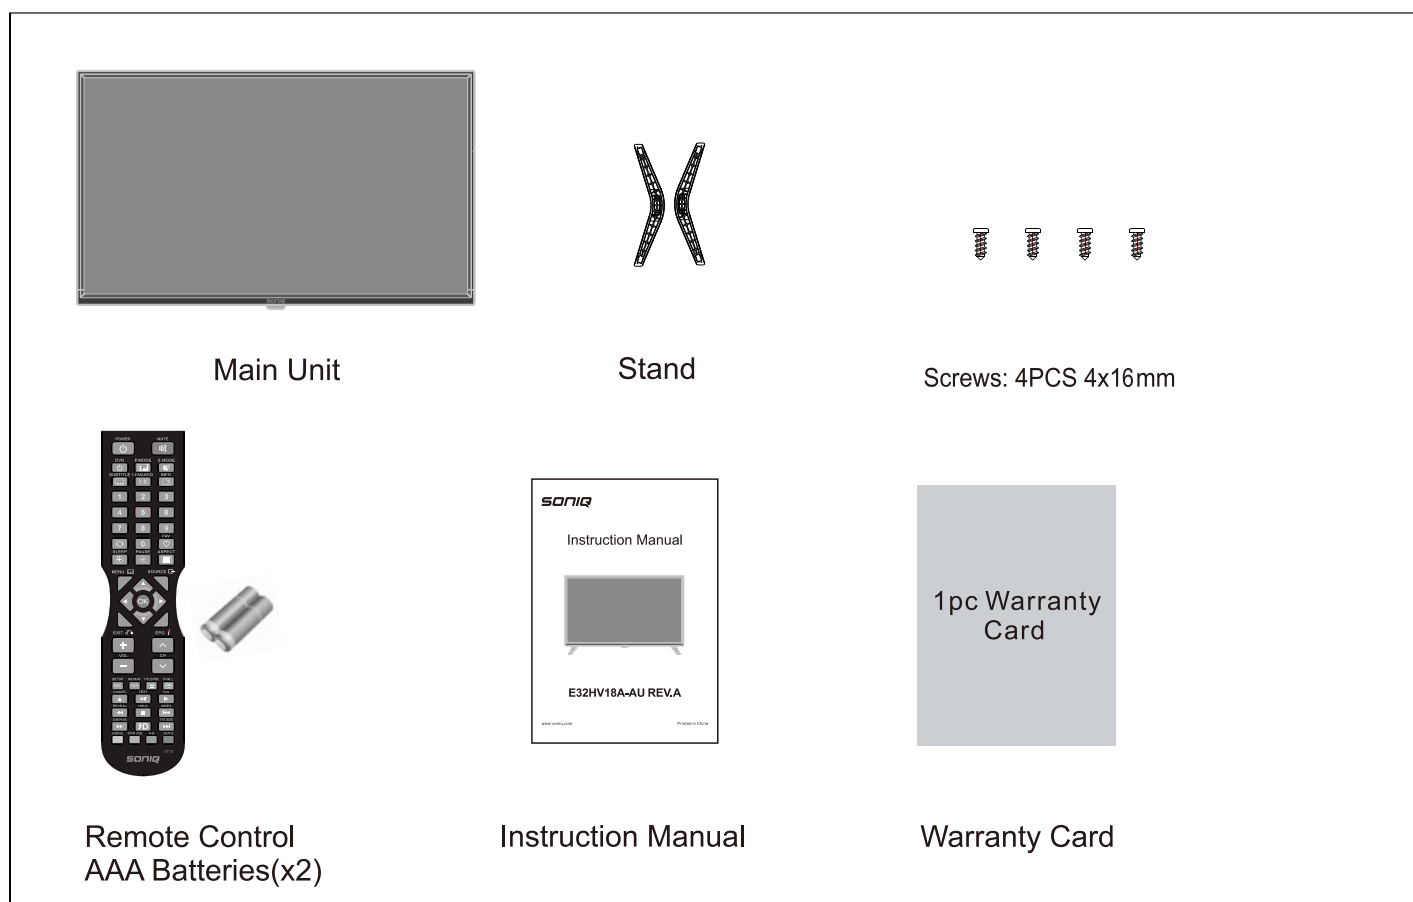

## Stand Installation


Before performing work, please lay the TV on the platform to prevent it from being damaged. Assemble the stand and unit with (4) screws, then fix the TV set. To remove the stand & platform, reverse instruction as above.

 Screws: 4X16 mm (x4)

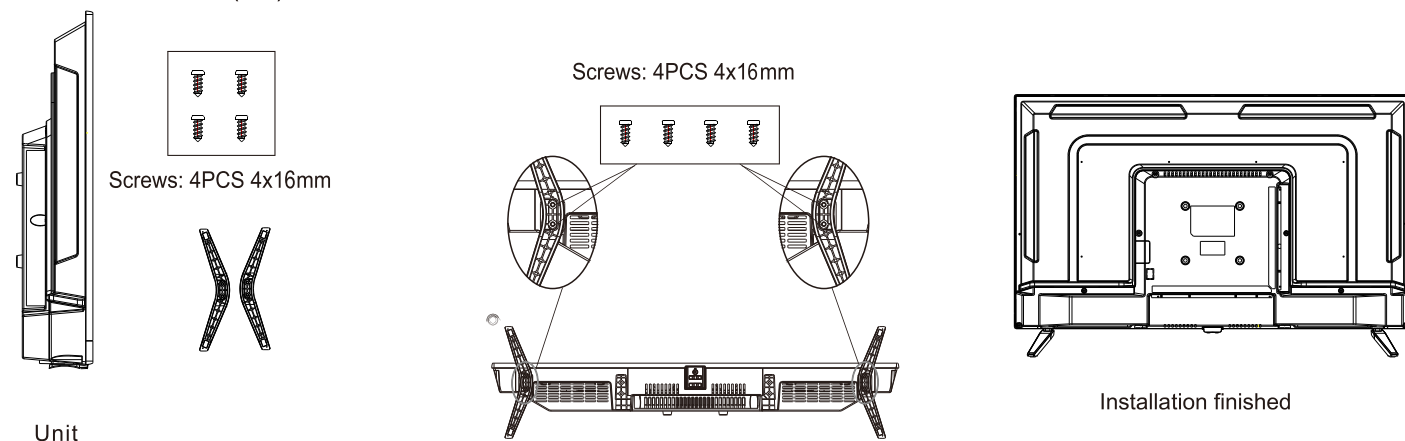

# Keypad Buttons

 
If you cannot locate your remote, you can use the side keypad buttons on your TV to operate many TV features.

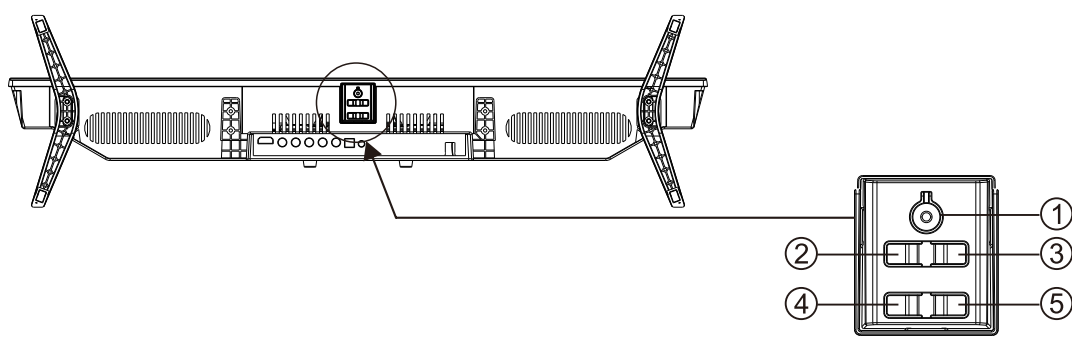


- 1. **POWER (⏻)**: Turns the TV on and off.
- 2. **VOL-**: Decreases the volume. In the TV menu system, it acts like the left arrow on the remote control and can be used to select menu options.
- 3. **VOL+**: Increases the volume. In the TV menu system, it acts like the right arrow on the remote control and can be used to select menu options.
- 4. **CH-**: Scans down through the channel list. In the TV menu system, it acts like the down arrow on the remote control and can be used to select menu options.
- 5. **CH+**: Scans up through the channel list. In the TV menu system, it acts like the up arrow on the remote control and can be used to select menu options.


## Connecting the Power Cord

 Connect the power cord directly to the wall outlet.

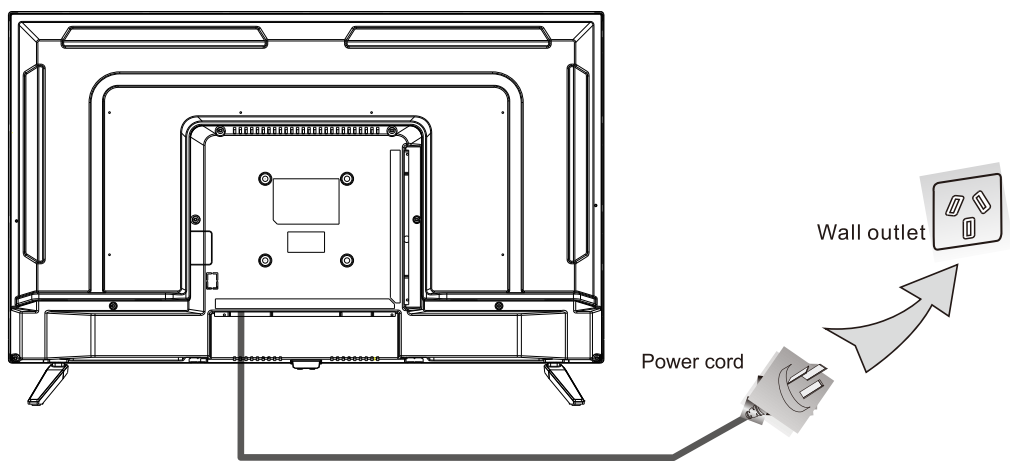

## Connection

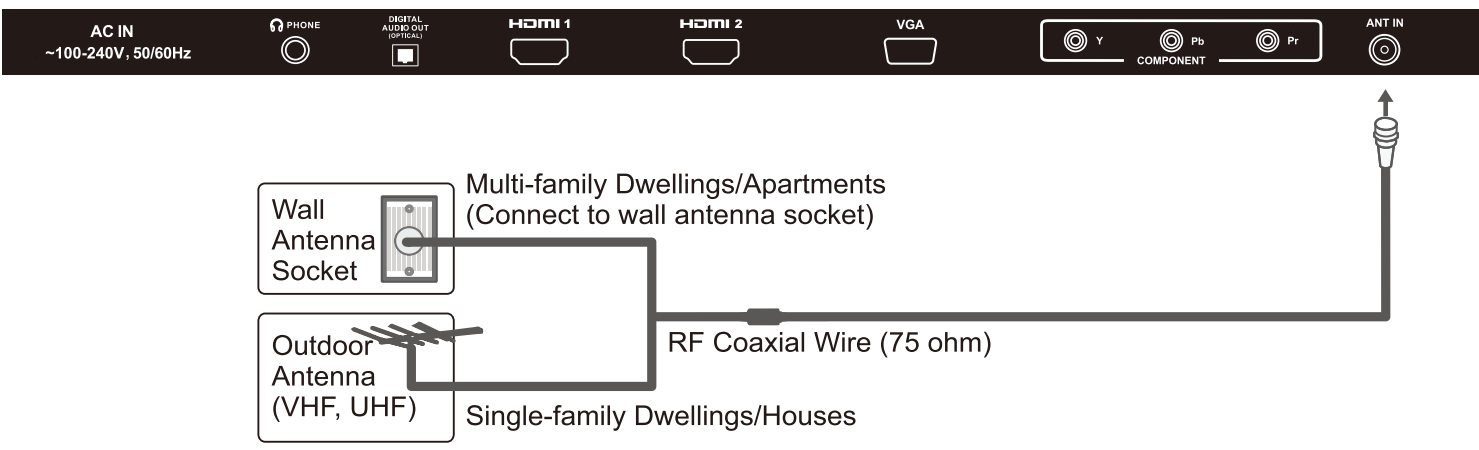 

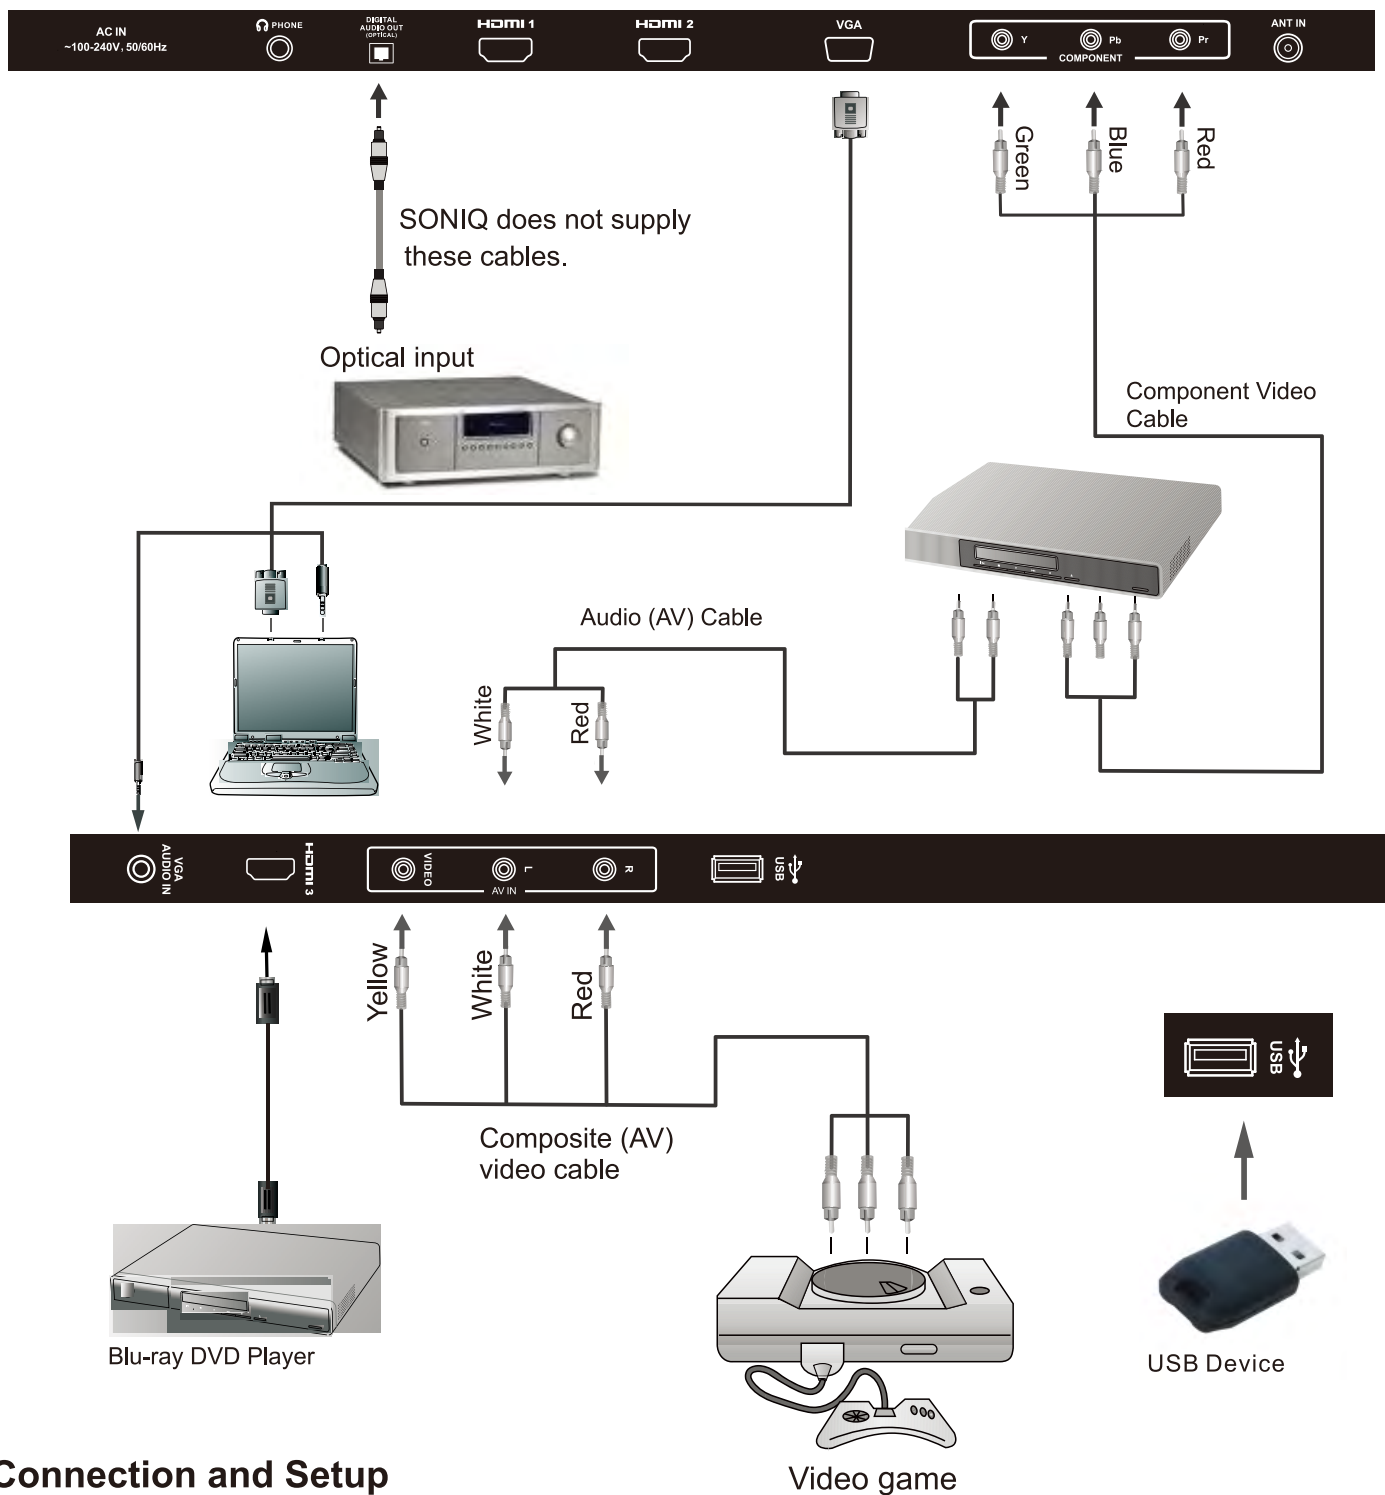 

## Connection and Setup

### Connecting the USB Device

Insert USB device directly to unit.

1. Please do not turn off the TV or unplug the USB device when connected USB storage device is working. When such device is suddenly separated or unplugged, the stored files or the USB storage device may be damaged.
2. Please use only a USB storage device which was formatted as a FAT32 file system, NTFS file system provided with the Windows operating system. In case of a storage device formatted as a different utility programmer which is not supported by Windows, it may not be recognized.
3. Please connect power to a USB storage device(over 500ma) which requires an external power supply. If not, the device may not be recognized.
4. If the USB HDD does not have an external power source, the USB device may not be detected. So be sure to connect the external power source.
5. The recommended capacity is 1TB or less for a USB external hard disk and 32GB or less for USB memory.
6. Only English is supported in USB mode. Other languages such as Chinese, Japanese, etc. Will not be displayed or display an error.

## Reminder

Your unit has integrated HD digital and analog tuner in the same unit. You can enjoy both digital and analog broadcasting under following set-up easily.

The latest news, software, utility, driver, product, manual and Q&A will be found at SONIQ website

# Remote Control

## Remote Control Key Functions

**Power button**  
Toggles the unit between standby and on.

**Numerical buttons**  
Press 0-9 to select a TV channel directly when watching TV. The channel changes after 2 seconds or press "OK" button to change immediately.

**Return button**  
Press to return to previous channel.

**FAV button**  
In TV mode, press FAV button to display your favorite programs.

**SLEEP button**  
Press to activate sleep timer.

**PAUSE button**  
Press to pause the current picture, press again to resume.

**ASPECT button**  
Press to change the aspect ratio of the TV display.

**MENU button**  
Press to display the main menu.

**SOURCE button**  
Press to display the Source menu.

**EXIT button**  
Exit most menu to default status directly. Press to quit all menu.

**EPG button**  
Open or close EPG menu.

**Navigation keys (▲/▼/◀/▶/OK)**  
Allows you to navigate the on screen menus and adjust the system settings to your preference. Press OK in DTV mode to display channel list.

**REC button**  
Press to record program to memory storage.

**REPEAT**  
In media source, press to repeat 1 / All or off.

**TSR**  
Press to delay the process of program broadcasting. Has the function of timeshift under DTV mode.

**T/R button**  
In DTV mode, press to switch between radio and DTV channels.

**A-B button**  
Enables you to repeat a selected section during Media video playback or DTV recording file playback.

**GOTO button**  
MEDIA mode.

**MUTE button**  
Press to mute the sound. Press again or press VOL +/- to resume.

**P.MODE button**  
Press to select preset picture mode.

**S.MODE button**  
Press to select preset sound mode.

**SUBTITLE button**  
In DTV mode, press to change subtitle on / off. Has related functions under MEDIA mode.

**I-II / AUDIO button**  
Press to select sound output mode.

**INFO button**  
Press to display the information of current system programme.

**VOL +/-**  
Press to increase / decrease the sound level.

**CH ▲ / ▼**  
Selects a programme in DTV / ATV mode.

**PVR.L**  
Press to display the recorded program list.

**CANCEL button**  
Only available in interactive application, TEXT menu and Music source.

**TEXT button**  
On / Off the teletext.

**▶|| button**  
Press to playback or pause the program.

**D / A button**  
Switch directly between ATV and DTV.

**REVEAL**  
Display hidden Text characters.

**◀◀ button**  
Press to fast reverse playback.

**SUB. PAGE**  
Prompt the user to enter a subcode for the Text page.

**▶▶ button**  
Press to fast forward playback.

**HOLD button**  
Stop refurbish Text current page.

**■ button**  
Press to stop media playback.

**Under DTV mode, press it to stop program recording.**

**INDEX button**  
Teletext index page.

**I◀◀ button**  
Press to return to previous chapter or track.

**TXT. Size**  
Toggles the text size display between half top page, half bottom page and normal.

 
**▶▶I button**  
Press to skip to next chapter or track.

**Note:**  
USB/SD/3D/DVD/TITLE/PBC/D.DIS are invalid.

# TV Auto Scan


There are two methods for performing an automatic digital TV channel search.

## Method 1

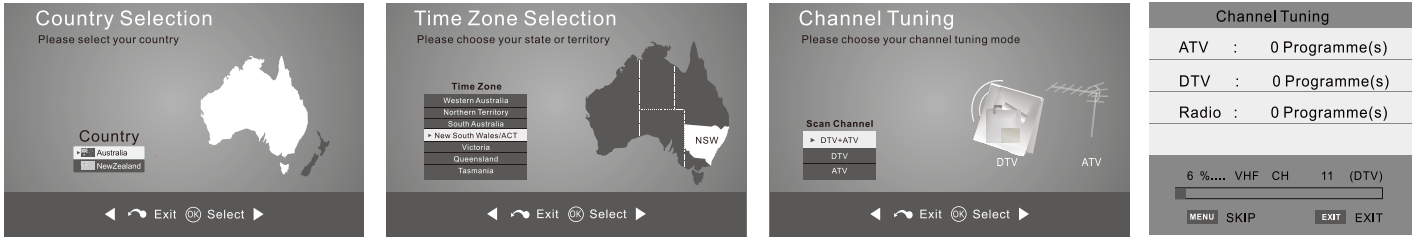

1. The Initial Setup window will appear when you begin. This system is available in Australia and New Zealand.
2. Press “OK” button to proceed to the next step.
3. Use ▲/▼ to choose your location and press “OK” to confirm.  
Use ▲/▼ to choose the scan type, then press “OK” button to start channel tuning.



## Method 2

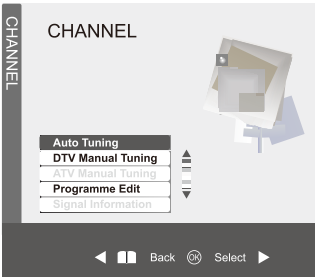 

Press MENU button to enter the CHANNEL page as follows:

### A. Auto Tuning

  1. Auto Tuning will be highlighted on entering this screen.  
Press “OK” button to continue.
2. Press ▲/▼ to select country, Press “OK” button to continue.
3. Press ▲/▼ to select your location and press “OK” to continue.  
Then use ▲/▼ to choose the tuning type.
4. Press “OK” to start auto search.

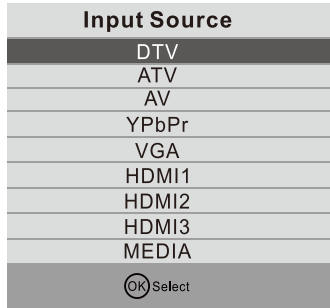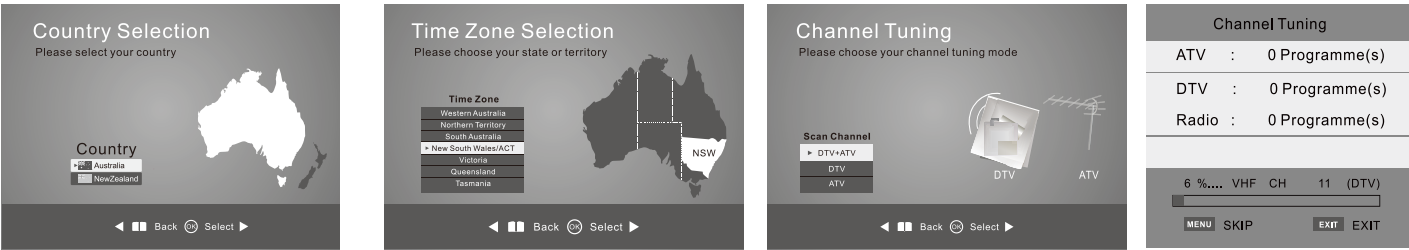


1. Press SOURCE button on remote control to display Input Source.
2. Use ▲/▼ button to highlight TV and press “OK” button to confirm.

## Wall Mounting(if available)

 Warnings:

1. Do not set up the wall mount by yourself. Please contact qualified professionals for installation.
2. The TV should not be mounted on walls or surfaces which have an angle more than 10 degrees with vertical direction. Otherwise the TV set may fall.
3. The walls for mounting must have enough strength to hold the whole weight of TV set. For example, concrete wall and brickwork are eligible. Do not place the mount on soft walls such as earth walls and plasterboard.
4. If spare parts of different specifications (such as screws) are used during mounting, consult with qualified professionals to make sure these parts are safe and effective.
5. Before attaching the base to wall, ensure the holes for anchors are in keeping with the installing rules. Otherwise there may exist some potential problems.
6. Do not place any heating source under your television. Or else, it can cause fire.
7. Do not place the TV near anything dripping. Transducers and high voltage wires should be kept far away from the apparatus too. Or else, it may cause creepage, electric shock or bad resonance.
8. Do not place TV in a location where collision or vibration is liable to happen.
9. In order to avoid unexpected falling of the TV set, do not put any strong force on TV or wall mount after installing.
10. Be sure to unplug the TV before installing. Keep anything hard or sharp away from the screen panel to prevent the scuffing.
11. After installing, if there is any need to move the cabinet, please contact the qualified professionals.

Unit Dimension (unit:mm)	Screws
VESA 100 x 100	M4x6mm, 4pcs
<b>ote:</b> The length of the screw specified is only a recommendation; actual length required n vary depending on the type of wall mount used.	

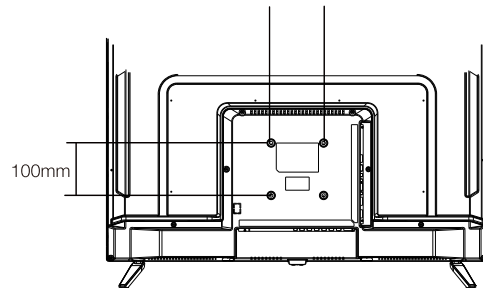

## Supported PC Input Signal

Your unit can use as PC monitor, it supports below RGB-PC, HDMI mode INPUT.

RGB-PC, HDMI mode INPUT SPEC				
VGA / HDMI Input				
PUT ORMAT	Resolution	Horizontal frequency ( KHz)	Vertical frequency (HZ)	Standard
	640x480	31.5	60	VGA
	640x480	37.86	72.809	VESA
	640x480	37.5	75	VESA
	720x400	31.5	70	VGA-T
	800x600	37.9	60	VESA Guidelines
	800x600	48.077	72.19	VESA
	800x600	46.9	75	VESA
	832x624	49.7	75	Mac
	1024x768	48.4	60	VESA Guidelines
	1024x768	60	75	VESA
	1152x870	68.68	75	Mac
	1280x800	47.8	59.8	—
	1280x960	60.0	60	VESA
	1360x768	47.7	60	VESA
	1366x768	47.712	59.79	VESA

## Specification

Operating Voltage	~100-240V AC, 50/60Hz	
Power Consumption	55W, < 1W (Standby)	
Video Format Supporting	COMPONENT	480i, 480p, 576i, 576p, 720p (50Hz/60Hz),
		1080i (50Hz/60Hz), 1080p (50Hz/60Hz).
	HDMI	480p, 576p, 720p (50Hz/60Hz),
		1080i (50Hz/60Hz), 1080p (50Hz/60Hz).
Digital TV	Programme Coverage	Australia
		VHF-H: 177.5 to 226.5MHz
		UHF: 522.5MHz to 816.5MHz
	Channel Bandwidth	7MHz
	Video Decode	1080i, 720p, 576p, 576i
Analog TV	Audio	MPEG -1; MPEG-2; AC-3
	TV System	PAL B/G; D/K; I
Panel Spec	Active Area	31.5 inches
		697.68mm x 392.25mm pixel
	Pixel Format	1366 horiz.by 768vert.
		RGB Vertical Stripe
	Luminance White	200cd/m <sup>2</sup> (typ)
	Contrast Ratio	3000:1 (typ)
nput & Output	Color Depth	8bit(D), 16.7M colors
	ANT IN	ANT IN X 1
	HDMI input	HDMI X 3
	USB input	USB X 1
	YPbPr input	YPbPr X 1
	VGA input	VGA X 1
	VGA AUDIO input	VGA AUDIO X 1
	DIGITAL AUDIO OUT OPTICAL	DIGITAL AUDIO OUT OPTICAL X 1
	VIDEO input	VIDEO X 1
	EARPHONE output	EARPHONE X 1
Audio Power	8W+ 8W	
Unit Dimension	728(L) x 200(W) x 482(H)mm	

Design and specifications are subject to change without prior notice.

### HOTLINE

- AUSTRALIA : 1300 765 663
- NEW ZEALAND : 0800 100 236