

40" Full HD LED LCD TV

Instruction Manual

freeview 

SONIQ

Safety Instruction

Important Safety Instructions

WARNING

- TO PREVENT FIRE OR SHOCK HAZARD. DO NOT USE AN EXTENSION CORD.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
- TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT FULLY INSERTED.



The lightning flash with arrowhead symbol in a triangle indicates the presence of uninsulated dangerous voltage within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation mark within the triangle alerts users to the presence of important operating and maintenance (servicing) instructions for the appliance.

The appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

Important Information

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous if it falls. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- No placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.
- Figures and illustrations in this user manual are provided for reference only and may differ from actual product appearance. Product design & specification may be changed without notice.

Safety Instruction

1. **Read Instructions** - All the safety and operating instructions should be read before operating.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.
5. **Earthing Connection** - The TV shall be connected to a MAINS socket outlet with a protective earthing connection.
6. **Water and Moisture** - The appliance should not be used near water.
7. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
8. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
9. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
10. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
11. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions as marked on the appliance.
12. **Power Cord Protection** - Power supply cord should be routed so that it is not likely to be walked on, pinched by item placed upon it against the cord and its end.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Lines** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods** - The mains plug is used as disconnect device, the disconnect device shall remain readily operable. The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Conditions Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen on or liquid has been spilled into the appliance.



 
Safety Instruction

- The appliance has been exposed to rain.
- The appliance does not appear to operate normally or exhibits a marked change in performance.


18. This appliance should not be exposed to water and no objects filled with liquids such as a vase should be placed on the unit.


WARNING


High voltages are used in the operation of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.


CAUTION

 Do not place the main unit on an unstable cart stand, shelf or table.


WARNING

 To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.


CAUTION

 
When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.


WARNING

Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.


CAUTION

The panel used in this product is made of glass. It can break when the product is dropped or applied with force.


CAUTION

If the television is to be built into a compartment or similarly enclosed space the minimum distance must be maintained. Heat build up can reduce the service life of your television, and can also be dangerous.


CAUTION

 
 
Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.









CAUTION

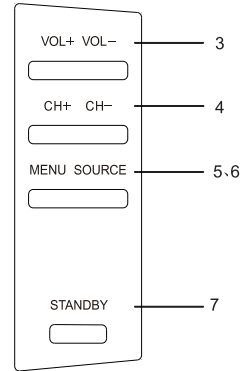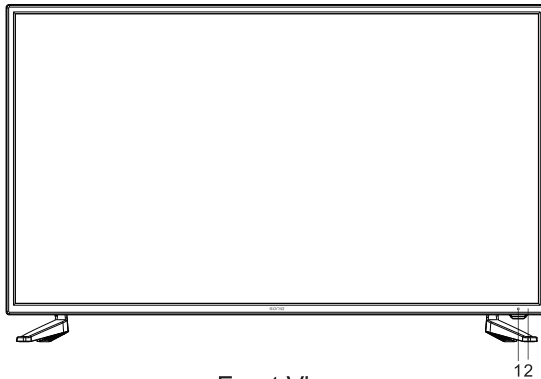 Never stand or lean on product or its stand or push suddenly. Always pay special attention when children are near product to avoid harm.



Main Unit Control



1		Remote Control Sensor Window	Receives signal from Remote Control. Do not put any objects in front of the window to hinder the reception of signal.
2		Power Indicator	Flashes red when the unit is powered on; Lights up red when the unit is in standby mode.
3		VOL +/-	Press VOL- to decrease volume, or VOL+ to increase. At the OSD menu, press these buttons to move the selection focus left and right to change settings.
4		CH +/-	Press these buttons to sequentially select channels. When the OSD menu is on, press these buttons to move the selection focus up or down to change settings.
5		MENU	Press this button to display the OSD menu. When the OSD menu is on, press this button to exit the menu.
6		SOURCE	Press to display all available input signal sources. Press to cycle through various sources.
7		STANDBY	Press this button to turn the unit on when it is in standby mode. Press this button once more to put it to standby mode.

Note:

Please use the above instructions according to the actual keys showed on TV.

Remote Control Overview



Model No.: QT1F

Note:

TITLE/PBC, CANCEL, D/A, USB/SD, T/RD.DIS, A-B keys are invalid.
If you don't update the software through network timely, some other buttons may also be invalid.

Remote Control

Model No.: QT1F



Power button

Toggles the unit between standby and on.



MUTE button

Press to mute the sound. Press again or press VOL+/- to resume.

Numerical buttons

Press 0-9 to select a TV channel directly when watching TV. The channel will switch after 2 seconds or press "OK" button to change immediately.

SLEEP button

Press to activate sleep timer.



FAV buttons

In TV mode, press FAV button to display your favorite programs.

REC button

Press to record program to memory storage.

REPEAT

In media source, press to repeat 1/ALL or off.

TSR

Press to delay the process of program broadcasting. Has the function of timeshift under DTV mode.



APPS button

Press to display all applications.

HOME button

Access to SONIQ store.

SOURCE button

Press to display the Source menu.

MENU button

Press to display the main menu.

EPG button

Open or close EPG menu.

EXIT button

Exit most menu to default status directly.

Press to quit all menu.

RETURN button

Back to previous.

Navigation keys(▲/▼/◀/▶/OK)

Allows you to navigate the on screen menus and adjust the system settings to your preference. Press OK in DTV mode to display channel list.

T/RD button

In DTV mode, press to switch between radio and DTV channels.

A-B button

Enables you to repeat a selected section during Media video playback or DTV recording file playback.

GOTO button

Skip to the specified place to continue playing under Media Mode.

Model No.: QT1F

CANCEL button

Only available in interactive application, TEXT menu and Music source.

TEXT button

On/Off the teletext.

▶|| button

Press to playback or pause the program.

D/A button

Switch directly between ATV and DTV.

REVEAL

Display the hidden Text characters.

◀◀ button

Press to fast backward playback.

SUB.PAGE

Prompt the user to enter a subcode for the Text page.

▶▶ button

Press to fast forward playback.

HOLD button

Stop refurbish Text current page.

■ button

Press to stop media playback.
Under DTV mode, press it to stop program recording.

INDEX button

Teletext index page.

I◀◀ button

Press to return to previous chapter or track.

TXT.Size

Toggles the text size display between half top page, half bottom page and normal.

▶▶▶ button

Press to skip to next chapter or track.

YouTube button

Access to YouTube.



ASPECT button

Press to change the aspect ratio of the TV display.

P.MODE button

Press to select preset picture mode.

S.MODE button

Press to select preset sound mode.

SUBTITLE button

In DTV mode, press to turn subtitle on/off.

Has related functions under MEDIA mode.

I-II/AUDIO button

Press to select sound output mode.

INFO button

Press to display the information of current system programme.

VOL +/-

Press to increase/decrease the sound level.

CH A/V

 
Selects a programme in DTV/ATV mode.

PVR.L







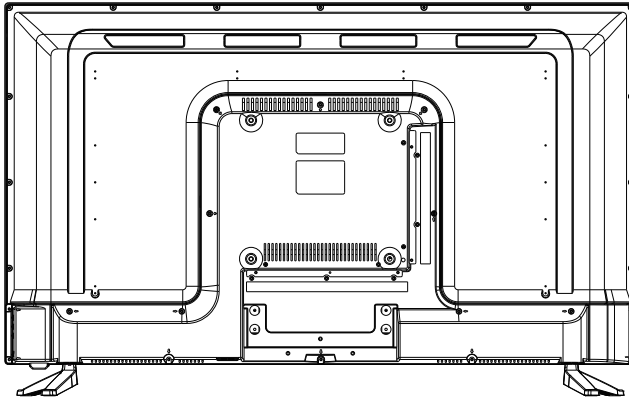




Press to display the recorded program list.

Connection and Setup

Terminals on TV



Back View

Icon	Name	Description
	ETHERNET	Connect the RJ45 Interface Ethernet.
	ANT IN	Connect to External Antenna.
	Qlink LOU	Connect to SONIQ Soundbar with Qlink function.
	Digital Audio Out (OPTICAL)	Connect to Digital Audio Amplifier OPTICAL Input.
	VGA	Connect the PC VGA Signal.
	VGA Audio In	Connect the DVI or VGA Audio Signal.
	AV IN	Connect Composite Video and Audio Signal.
	YPBPR IN	Connect the Component Video and Audio Signal (AV IN).
	PHONE	Connect to your external headphones.
	USB	Connect for media files playback and program recording.
	HDMI	Connect to HDMI signal.

Note:

Above listed is the universal version of SONIQ TV. Some terminals may not contained in some models.

 
 
Connecting to a Network

Connecting the TV to a network gives you access to online services, such as YouTube, as well as software updates.

Network Connection – Wireless

Connect TV to the Internet using a standard router or modem.

1. Press Menu Button to select NETWORK, then to press Down button to Network Type.
2. Press Left / Right navigation key to select Wi-Fi.
3. The TV will automatically begin searching for nearby Wi-Fi Access Points (WAP).
4. Press the UP/Down buttons to select your home WAP, and press OK.
5. If the WAP has a security password, enter the password using the remote control, and then press Up/Down Buttons to move the cursor to "Connect" and press OK.

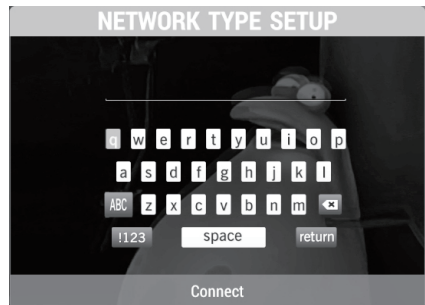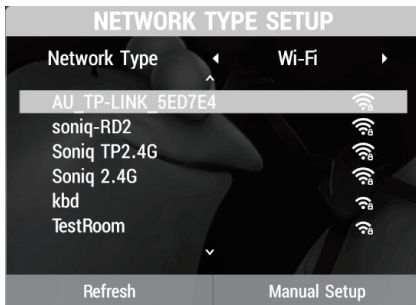

All Apps

Press APP button on the remote control to show all available apps once your TV is connected to network.

Press Left / Right Buttons to move the cursor, and press OK button to launch a selected app.



 
All Applications

- CINAVISION
- YouTube
- SONIQ TV Store
- Web Browser

Note: Above listed apps is the universal version of SONIQ TV and may be subject to change.

YouTube:


1. After connecting to network, you can press the YouTube hotkey on remote control to access YouTube directly.
2. Use your mobile phone to activate YouTube.

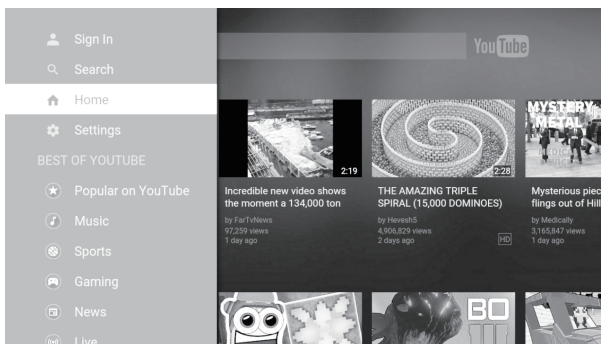

- (1) Download YouTube App on your smartphone. Connect your smart phone to the same Wi-Fi network as your SONIQ TV.
- (2) a. When the SONIQ TV is in playing mode, open YouTube app on your mobile phone and tap Cast icon on the top right corner of the phone screen.
b. When the SONIQ TV is in Stand By mode, open YouTube app on your mobile phone and tap Cast icon on the top right corner of the phone screen. The SONIQ TV can be turned on and directly access to YouTube interface.



 Web Browser

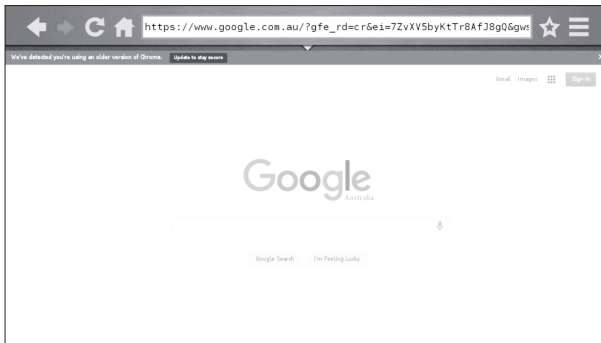

Using the web browser, you can surf the Internet on the TV similar to how you would do on a PC.

Tip: Use a wired keyboard and mouse (not provided) for an easier web browsing experience.

Note:

The images shown here are for illustrative purposes only and may be subject to change.

The actual on-screen image and text may vary, depending on the model.

Freeview Plus



Freeview Plus is a television service provided by Freeview Australia, which provides a state of the art Electronic Program Guide (EPG) and seamless access to catch-up TV across the free-to-air networks.

Once the TV is connected to the internet, press the:
GREEN button on your remote to launch Freeview Plus.

RED button on your remote to launch broadcast network content and services.

Then follow the on-screen instructions to navigate through the applications.

Note:

 
- Catch Up TV provided by the Freeview networks may vary by region.
Please go to www.freeview.com.au/freeview-plus/ to check the availability of services in your area.
- Your home network must have broadband Internet access. Contact your Internet Service Provider (ISP) if you have problems maintaining a fast connection that is reliable.
- Accessing Internet content may incur access or data fees from third parties such as your ISP.
- Since all content is downloaded over the internet, there may be a delay in loading the content.
- If any of your other network connected devices such as computers, gaming consoles and network hard drives are transferring large amounts of data across your network (such as a file transfer, online gaming, or other instances of video streaming), loading times of interactive applications, sound and picture quality may be compromised.

OSD Menu Operation

(Before operating OSD menu, please switch to full screen playback).
OSD menu can only be operated by using remote control.

CHANNEL MENU



Press MENU Button to access the main menu, use Left and Right Button to select CHANNEL.

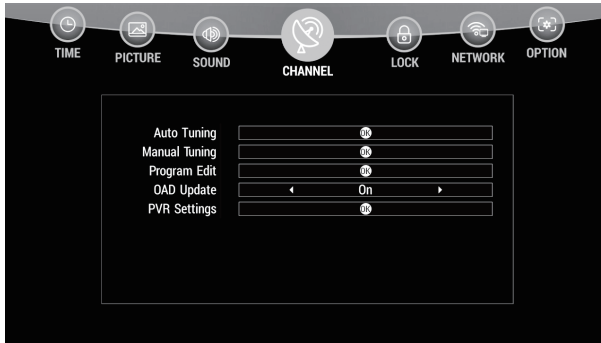

Auto Tuning

Press **Down** button and Auto Tuning will be highlighted, press OK Button to enter.

  1. Press **Left/Right** to select country, press **Down** Button to enter the next step.
2. Press **Left/Right** to select Time Zone, press **Down** Button to enter the next step.
3. Press **Left/Right** to select Mode, press **Down** Button to enter the next step.
4. Press **OK** button to Auto Start.

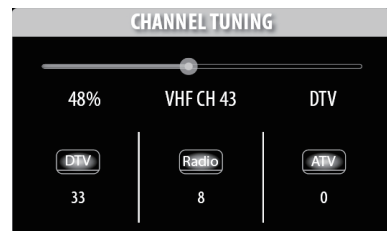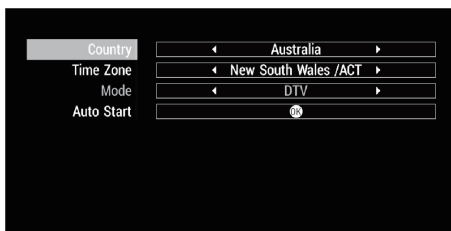


Manual Tuning

Press **Up /Down** Button to highlight Manual Tuning, then press **OK** to enter

OSD Menu Operation

sub-menu.

 1. Digital Scan: Press Left/Right Button to select.
2. Frequency: Frequency will be changed as you switch the Digital Scan.
3. Searching: Press OK to search.

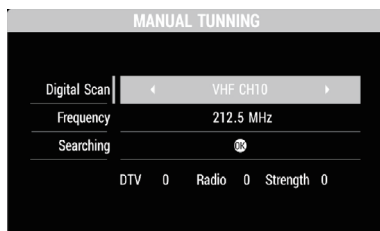

Program Edit

Press Up/Down to select Program Edit, then press OK Button to enter sub-menu.



Color Function Buttons

1. Press Blue Button to skip the selected channel.
2. Press the ♥ button to add a channel to your Favorite List; press the ♥ button again to remove the channel from the Favorite List.

OAD Update

Press Up and Down button to select OAD Update, press Left and Right button to choose On/Off.

PICTURE MENU

Press MENU Button to bring up the main menu, then press Left/Right to select PICTURE MENU.

 
1. Picture Mode:

Use Up / Down Button to highlight Picture Mode, and press Left / Right to adjust the mode by Standard, Dynamic, Mild and User Mode.

Contrast, Brightness, Color, Sharpness can be adjusted only under User

OSD Menu Operation


mode, press Back Button to return to the main menu.

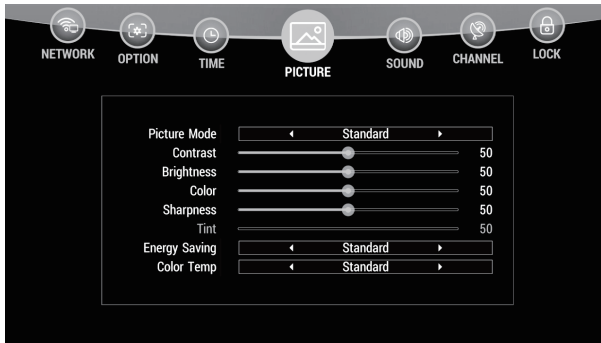

2. Tint: Only available on NTSC system.
3. Energy Saving: Adjust the brightness of your TV to reduce power consumption. Press Up/Down to select Energy Saving, and press Left/Right Buttons to select Standard or High.
4. Color Temp: Press Up/Down to choose Color Temp. Press Left/Right Button to select Cool, Standard, Warm mode.
5. Aspect Ratio: Press Up/Down to choose Aspect Mode. Press Left/Right to select Full, 4:3 or Auto.
6. Noise Reduction: Press Up/Down to choose Noise Reduction. Press Left/Right to select On/Off.
7. VGA Settings: Available under VGA mode.
8. Screen Mode: HDMI mode only.
9. Color Space: Available under HDMI mode.

SOUND MENU

 Press MENU Button to display the main menu. Press Left/Right to access SOUND menu.

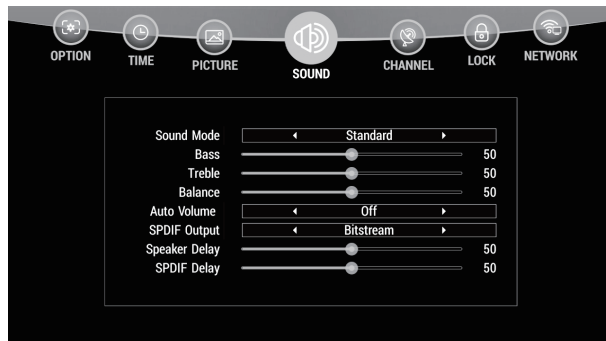

OSD Menu Operation

1. Sound Mode:

Press Down button to set Sound Mode, and press Left/Right Button to pick Sound Mode among Standard, Music, Movie, Sport, User Mode. You can adjust the value of Treble, Bass and Balance under User Mode.

2. Auto Volume:

Press Up/Down to choose Auto Volume, Press Left/Right to select On/Off.

3. SPDIF Output:

Press Up/Down to select SPDIF Mode, then to press Left and Right Button to select Bitstream, Off or PCM.

4. Speaker Delay:

Adjust the setting to fix any lip sync issues.

Use Up/Down to select Speaker Delay, and click Left and Right Button to adjust the delay time.

5. SPDIF Delay:

 
Adjust the setting to fix any lip sync issues when the TV is connected to an external amplifier.

Use Up/Down to select SPDIF Delay, and click Left and Right Button to adjust the delay time.

6. Default Speaker: Select the default speaker of your TV. When the TV is connected with a Soundbar, the default speaker is Soundbar, otherwise, this setting is Built in Speaker.

TIME MENU

Press MENU Button to display the main menu. Use Left/Right to access TIME menu.

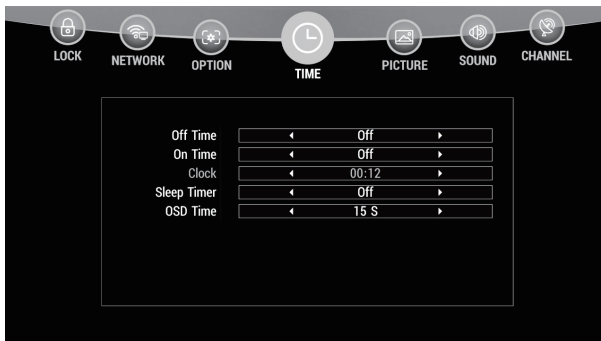

1. Off Time: Automatically turn off the TV on specified days and time.

 
Press Up / Down Button to select Off Time, and press Left or Right Button to sub-menu.

OSD Menu Operation

- (1) Mode Setting: Press Left / Right Button to select modes from Off / Once / Every Day / Mon. ~ Fri. / Mon. ~ Sat. / Sat. ~ Sun. / Sun
- (2) Off Time: Press Up / Down to set the time.
2. On Time: Automatically turn on the TV on specified days, time, Input source, Channel and Volume.
Press Up / Down Button to select On Time, and press Left or Right Button to sub-menu.
3. Clock: Displays the current time information.
4. Sleep Timer: Set the timer in minutes for when you would like the TV to turn off.
Press Up / Down Button to select Sleep Timer, and press Left or Right Button to set the time.
5. OSD Time: Set the timer in seconds for how long you would like the TV menu to be displayed.
Press Up / Down Button to select OSD Time, and press Left or Right Button to set the time.
If you set it Off, the OSD Menu interface won't disappear unless you press the EXIT Button on the remote control.

OPTION MENU

Press MENU Button to display the main menu. Use Left/Right to access OPTION menu.

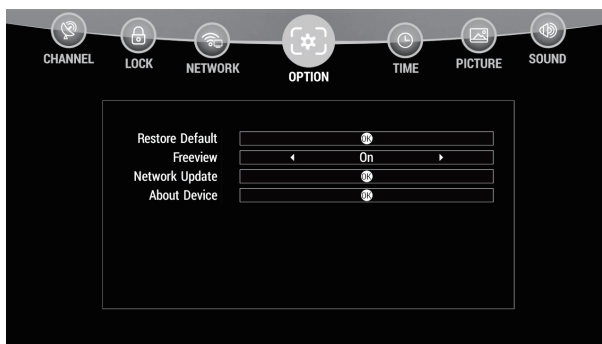

1. Restore Default: Press **Down** Button to highlight Restore Default, and press OK to confirm.
2. Freeview: Press **Up/Down** Button to highlight Freeview. Press Left/Right Button to set it On/Off.
3. Network Update: press **Down** Button to highlight Network Update, then press OK to confirm.

OSD Menu Operation

 
4. About Device: press **Down** Button to highlight About Device, then press OK to see information of the device.

LOCK MENU

Press MENU Button to bring up the main menu, then press Left/Right to select Lock Menu. (This function is only available in TV Mode).

You are required to input the password (default is 0000).

1. System Lock: Press Left / Right Button to select On or Off.
2. Set Password: Highlight this menu and press OK button to set personal password.
3. Parental Lock: Set parental guidance. Parent can set age limit level by this function (System Lock should be switched On). Press Up and Down to select Parental Lock, then press OK to enter the setting.

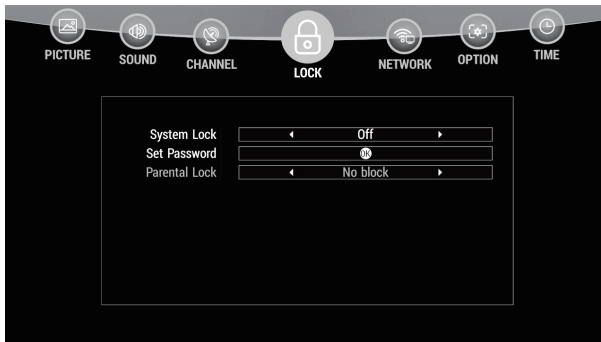

EPG (Electronic Program Guide)

EPG TV Guide (for DTV mode only)

EPG stands for Electronic Program Guide. It is supplied by the program providers and offers information about the programs to be broadcast. You can access it in DTV mode by pressing the EPG button on the remote control.



 
Programme, Information and Progress list can be carried out by operating this function. The EPG displays the program details for next 7 days. Press Navigation keys to switch between PROGRAMME, INFORMATION, and PROGRESS. Press OK to activate the column.

PVR Function


(This feature is only available under DTV mode.)

Please plug in the USB device before executing recording function and as well do the following settings to save the file recording.

1. Press PVR.L Key on the remote control to quickly enter to PVR settings.
Or you can follow MENU->CHANNEL MENU->PVR SETTINGS->OK
->DEVICE LIST.

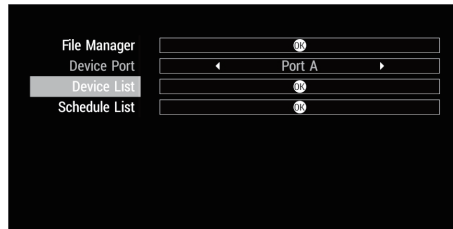

 2. Select a USB storage device formatted as FAT, press OK to confirm.
3. If a USB storage device formatted as a different format, press the red button on the remote to format as FAT, recording can be carried out by this time EXFAT is not supported by the system, format of NTFS is just available for reading, and can not be applied for recording.

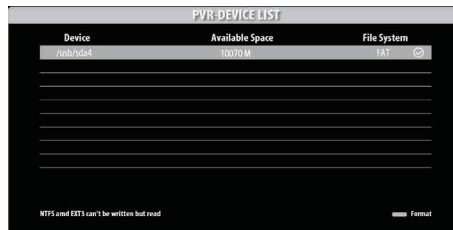


Precautions when using the USB device

1. Please do not turn off the TV or unplug the USB device when the connected USB storage device is working.
When such device is suddenly separated or unplugged, the stored files or the USB storage device may be damaged.
2. Please use only USB storage device that are formatted as a FAT32 file system, otherwise it may not be recognized.
3. Every USB only supplies 500mA electric current, if the user's device requirement is over the specification, users need to choose to connect to the external power supply, otherwise the device may not be recognized.
4. If the USB HDD does not have an external power supply, the USB device may not be detected. So be sure to connect the external power supply.

5. The recommended capacity is 2TB or less for USB external hard disk and 32GB or less for USB flash memory.
6. The recognition speed of a USB storage device may depend on each device.
7. Please connect a USB storage device with the cable offered by the device maker.
8. Be sure to back up important files since data stored in a USB memory device may be damaged. We will not be responsible for any data loss.
9. If your USB memory device has multiple partitions, or if you use a USB multi-card reader, you can use up to 4 partitions or USB memory devices.
10. If the USB memory device does not work properly, disconnect and reconnect it. How fast a USB memory device is detected differs from device to device.
11. If the USB is connected in Standby Mode, specific hard disk will automatically be loaded when the TV is turned on.
12. Any device with more than the recommended capacity may not work properly.


In-Time Recording

 You can record the program you are watching. Press REC on the remote control to start the recording. Recording time will appear at the right bottom of the Screen.



Stop Recording

 1. Press STOP button to stop the recording.
2. Press Navigation buttons to scroll to Yes, and press OK button.

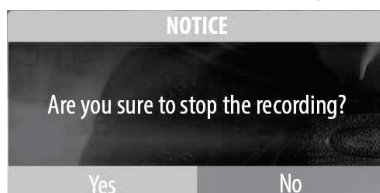



Pre-recording

1. Press PVR.L Key on the remote control to quickly enter to PVR settings.

PVR Function


Or you can Press Menu Button on the remote control and choose CHANNEL MENU to PVR settings.

  2. Press OK button and use Up / Down button to Schedule List, then to press OK again to enter.
3. Press Blue Key on your remote control to SCHEDULED RECORD GROUP.

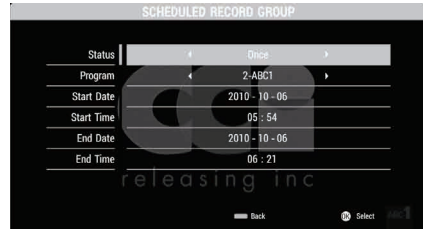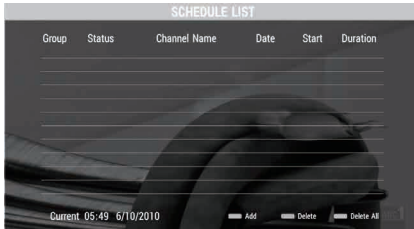

Play the Recorded Program

 1. Press PVR.L Key on the remote control to quickly enter to PVR settings or follow MENU->CHANNEL MENU->PVR SETTINGS->FILE MANAGER->OK
2. Press Up / Down to highlight which program you want to play.
Press OK Button or Blue Key to play it in full screen.
Press RETURN Button to exit full screen playback.
Press Green Key to Delete One selected program.
Press Yellow Key to Delete All programs.
3. The current program and device information will be displayed underneath the playing program.

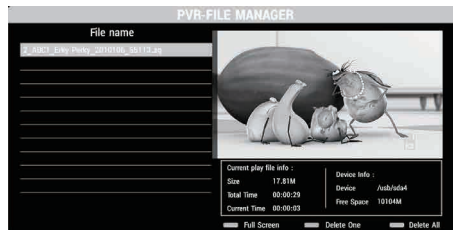


Media function can allow you to view the shared media from the memory storage.

Note:

Before operating Media function, insert a USB memory device into the USB port.

 SOURCR->MEDIA

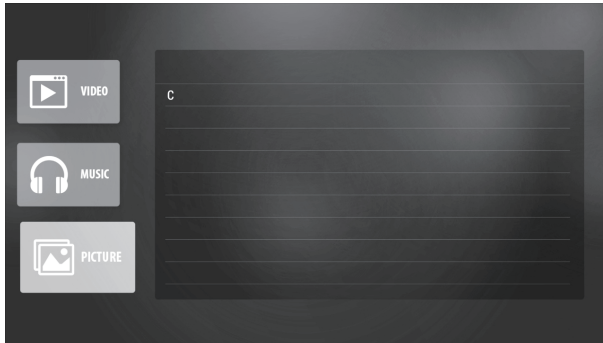

Press Navigation Button to move the cursor.

View the shared media in the category and press OK button to playback the selected content.

Video Playback

Enter this function by SOURCE->Media->VIDEO, then select your favourite video for playing. Press OK to play the video or Exit to exit.



When Playing Video Files:

 
- Press the MENU button on the remote control to hide/display the tool bar.
- Press the Left/Right buttons to select the preferred function, then press OK to confirm. The functions available are: Previous, Next, Playlist, Play Mode

MEDIA

(sequent/circle/random), Play Settings.

Music Playback

Enter this function by SOURCE->Media->MUSIC, then select your favourite song for playing. Press OK to play the music and Exit to exit playback.

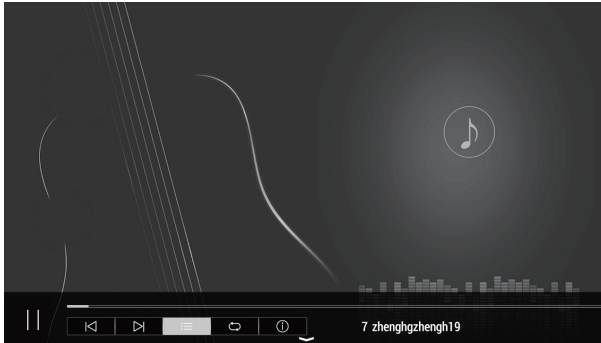

When Playing Music Files:

- Press the MENU button on the remote control to hide/display the tool bar.
- Press the Left/Right buttons to select the preferred function, then press OK to confirm. The functions available are: Previous, Next, Playlist, Play Mode (sequent/circle/random), Music Info.

Picture Playback

Enter this function by SOURCE->Media->PICTURE, then press navigation buttons to select the desired folder or file and press OK button to playback the desired picture to play in full screen.



When Playing Picture Files:

- Press the MENU button on the remote control to hide/display the tool bar.

- Press the Left/Right buttons to select the preferred function, then press then press OK to select a function such as Enlarge, Previous, Slideshow, Next, Rotate and Play settings from the on-screen tool bar.

Note: Some keys may not function in Media Mode.

Troubleshooting

If you experience any problems with your TV, check the list below and take any necessary steps before calling for service. If none of the solutions help you solve the problem, turn the power off and contact the after sales support line for advice.

Before calling a service center, attempt the following steps to diagnose the problem.

1. There is no power.

Ensure the power plug is securely inserted into the unit and wall outlet.

2. There is no picture or sound.

Try a different input source to check whether the source is at fault.

Check for mis-connection of cables or for wrong input source.

3. There are spots on the screen.

Your unit is being affected by interference from automobiles, trains, high-voltage transmission lines, neon signs or another sources of interference. Try redirecting or relocating your antenna to reduce the affects of the interference.

4. Degraded colors or tints.

Check whether all the picture adjustments have been properly performed.

5. Improper Screen position or size.

Try selecting a different aspect ratio by pressing the <ASPECT> Button on the remote control.

6. The image appears distorted.

Ensure the display aspect ratio is correctedly set to suit the program source.

7. The image appears too bright, and there is a loss of definition in the brightest areas of the image.

Reduce the contrast settings. The AV video signal has not been terminated properly somewhere in the external AV equipment.

8. The image appears too washed out, or the darkest areas of the image appear too bright.

Reduce the brightness level till the black areas of the picture appear as black.

9. Remote Control does not function properly.

Check for incorrect battery orientation.

Check for dead batteries.

Check your distance and angle from display.

Check whether remote control is pointing at sensor window;

Check for any obstacle between the Remote Control and Remote Control sensor.

Check that the Remote Control sensor window is not under strong

fluorescent lighting.

Check for any devices (PC or personal digital assistant, PDA) nearby that transmit infrared signal which may cause interference to signal transmission between the Remote Control and the unit.

Turn off the infrared function of these devices.

10. There is no picture or sound, just noise.

Make sure the antenna cable is properly connected.

Change channels to confirm if the symptom is still present.

11. Picture is not clear.

Make sure the antenna cable is properly connected.

Change channels to confirm if the symptom is still present.

If PC (VGA) is selected as the input signal source, use the Auto Sync Function in the Set Up Menu (In VGA Mode) to let the display adjust picture automatically.

12. No sound.

Check whether you have selected the Mute function.

Make sure the volume is not set to minimum.

Check the AV cables for disconnection.

Antenna

1. The picture is not sharp.

The reception may be weak.

Change channels to confirm if the symptom is still present.

Make sure the outside antenna is not disconnected.

Make sure the antenna is facing the right direction.

2. The picture is doubled or tripled.

Make sure the antenna is facing the right direction.

Picture ghosting is caused by reflections from buildings, large metal structures and mountains.

Carefully realign your antenna to minimize the ghost images. Ultimately a higher quality antenna professionally installed may be necessary to reduce the ghosting.

3. The picture is spotted.

There may be interference from automobiles, trains, high voltage lines, neon lights, etc.

There may be interference between the antenna cable and power cable, try positioning them further apart.

4. There are stripes on the screen or colors fade.

Is the television receiving interference from other devices? Transmission

Troubleshooting

antennas of radio broadcasting stations and transmission antennas of amateur radios and cellular phones may also cause interference. Use the television as far away as possible from devices that may cause possible interference.

Supported PC Input Signal

Your SONIQ TV unit can also be used as a PC monitor, which supports below modes:

RGB-PC, HDMI/DVI-PC mode INPUT SPEC				
PC/HDMI/1/2/3 input				
INPUT FORMAT	Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Standard
	640 X 480	31.5	60	VGA
	640 X 480	37.861	72.809	VESA
	640 X 480	37.5	75	VESA
	720 X 400	31.5	70	VGA-T
	800 X 600	37.9	60	VESA Guidelines
	800 X 600	48.077	72.19	VESA
	800 X 600	46.9	75	VESA
	832 X 624	49.7	75	Mac
	1024 X 768	48.4	60	VESA Guidelines
	1024 X 768	60	75	VESA
	1125 X 870	68.68	75	Mac
	1280 X 800	47.8	59.8
	1280 X 960	60.0	60	VESA
	1360 X 768	47.7	60	VESA
	1280 X 1024	63.595	60	VESA
	1440 X 900	55.9	59.9	VESA
	1680 X 1050	65.3	60
	1920 X 1080 (RGB-PC)	66.587	59.93	VESA
	1920 X 1080 (HDMI-PC)	67.5	60	VESA

Specification

Power Source	~100-240V AC , 50/60Hz	
Power Consumption	85W (Standby<1W)	
Video Format Supporting	HDMI	480p, 576p, 720p (50/60Hz), 1080i (50/60Hz), 1080p (23.97/24/25/29.97/50/59.94/60Hz)
Digital TV	Programme Coverage	VHF 06 to 12 UHF 27 to 69
	Video Decode	1080i ,720p ,576p,576i
	Audio	MPEG,AC3
Panel Spec	Display Area HxV(mm)	878.112(H) x 485.352(V)
	Panel Native Resolution	1920 x 1080 pixels
	Brightness	250 cd/m ²
	Contrast Ratio	5000:1(typ)
	Color Depth	16.7M colors (8-bit)
Input/Output	ANT IN	ANT IN x 1
	HDMI IN	HDMI x 3
	USB IN	USB x 2
	VGA IN	VGA x 1
	VGA AUDIO IN	VGA AUDIO x 1
	Composite In (AV)	AV x 1
	Component In (Y/Pb/Pr)	Y/Pb/Pr x 1
	Digital Audio Out (Optical)	Digital Audio Optical Out x 1
	LAN	RJ45 x 1
	Qlink Lou	Qlink x 1
	Earphone Out	Earphone x 1
Audio Power	8W + 8W	
Unit Dimension with Stand	910.8(L) x 211.5(W) x 567(H)mm	
Wireless LAN Specification	Standard	802.11b/g/n
	Frequency Band	2.4-2.4835 GHz ISM Band
	Output Power	<13dBm @11n,<18dBm @11b,<14dBm @11g



HOTLINE

AUSTRALIA :1300 765 663
NEW ZEALAND :0800 100 236

MD170904-01
Printed in China

www.soniq.com