

# ***SONIQ***

## **55" FullHD DIGITAL SIGNAGE**

### **S55A15A-XX**



 
 
 
 
 
 
## **QUICK REFERENCE GUIDE**


Thank you for purchasing the unit.  
Your unit integrates digital and analog tuner in the same unit.

## Safety Instruction



1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.
5. **Battery** - Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
6. **Earthing Connection** - The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
7. **Water and Moisture** - The appliance should not be used near water.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be located so that it is not likely to be walked on, or pinched by items placed upon it.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
15. **Objects and Liquids** - Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
16. **Conditions Requiring Service** - The appliance should be serviced by qualified service personnel when:
  - The power-supply cord or the plug has been damaged.
  - Objects have fallen on or liquid has been spilled into the appliance.
  - The appliance has been exposed to rain.
  - The appliance does not appear to operate normally or exhibits a marked change in performance.
17. This appliance should not be exposed to water and no objects filled with liquids such as a vase should be placed on the unit. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
18. Only for indoor used. (🏠).
19. **Caution** - There is a button cell inside. Place away from the old and kids, avoiding to be eaten by mistake. Once happened, please go to hospital for treating immediately.
20. Keep the key properly. There are high voltage and dangerous live parts inside. It's better to maintain and repair with a professional.
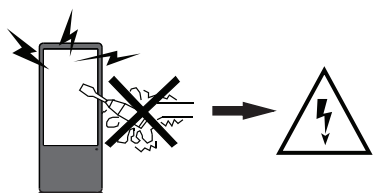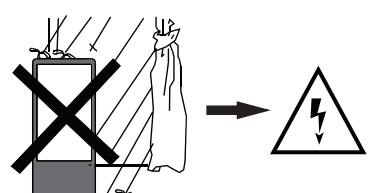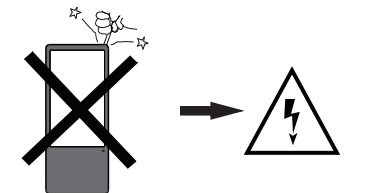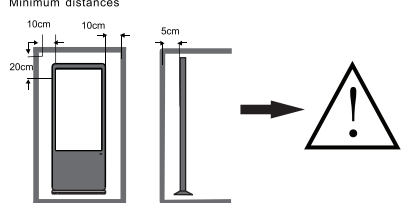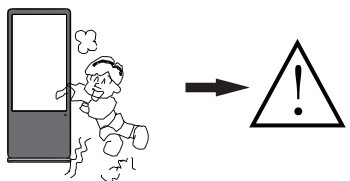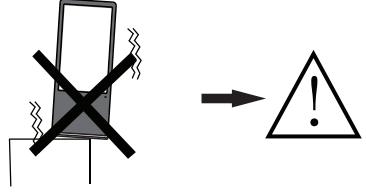
|   |  |  |
|---|--|--|
|  <p><b>Warning</b></p> <p>High voltages are used in the operation of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.</p>  |  <p><b>Warning</b></p> <p>To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.</p>                            |  <p><b>Warning</b></p> <p>Do not insert foreign objects into the appliance slots or openings. Never spill any kind of liquid on the appliance receiver.</p>                           |
|  <p><b>Caution</b></p> <p>If the appliance is placed into a confined space, ensure that the minimum distances are observed as shown. Heat build up can reduce the service life of your appliance, and can also be dangerous.</p> |  <p><b>Caution</b></p> <p>Never stand on, lean on, push or apply force to the product or its stand. You should pay special attention to children.</p> |  <p><b>Caution</b></p> <p>Do not place the main unit on an unstable cart stand or shelf. Serious injury to an individual, and damage to the appliance, may result should it fall.</p> |

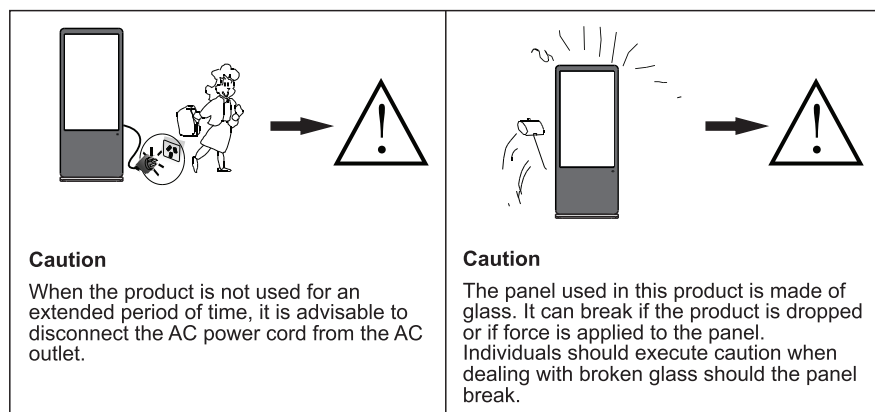 

## Exemptions

- SONIQ is not liable for any damage caused by fires, natural disaster(such as thunderstorms, earthquake, etc.), acts by the third parties, accidents, owner's misuse or use in other improper conditions.
- SONIQ is not liable for incidental damages(such as profit loss or interruption in business, modification or erasure of record data, etc.) caused by use or inability to use of product.
- SONIQ is not liable for any damage caused by neglect of the instructions described in the owner's manual.
- SONIQ is not liable for any damage caused by misuse or malfunction through simultaneous use of this product and the connected equipment.

## Introduction

Thank you for purchasing the unit. Your unit will bring you years of high-quality viewing enjoyment. The appliance is easy to operate and provides exceptionally high quality image. The manual will explain the operation of the unit, including its functions, features and other important features. Before installing or operating your unit, please take the time to thoroughly read this manual, particularly the sections on safety.

 
Thanks for purchasing the unit. Your unit integrates digital and analog tuner in the same unit. You can enjoy both digital and analog broadcasting under following set-up easily.

The latest news, software, utility, driver, product, manual and Q&A will be found at SONIQ website.

[Http://www.soniq.com](http://www.soniq.com)

## Stand Installation

Before performing work, please lay the appliance on the stand to prevent it from being damaged. Fix the stand and the unit together with screws. To remove the stand, reverse instruction as above  
Black Screws: M8X30mm(X8)

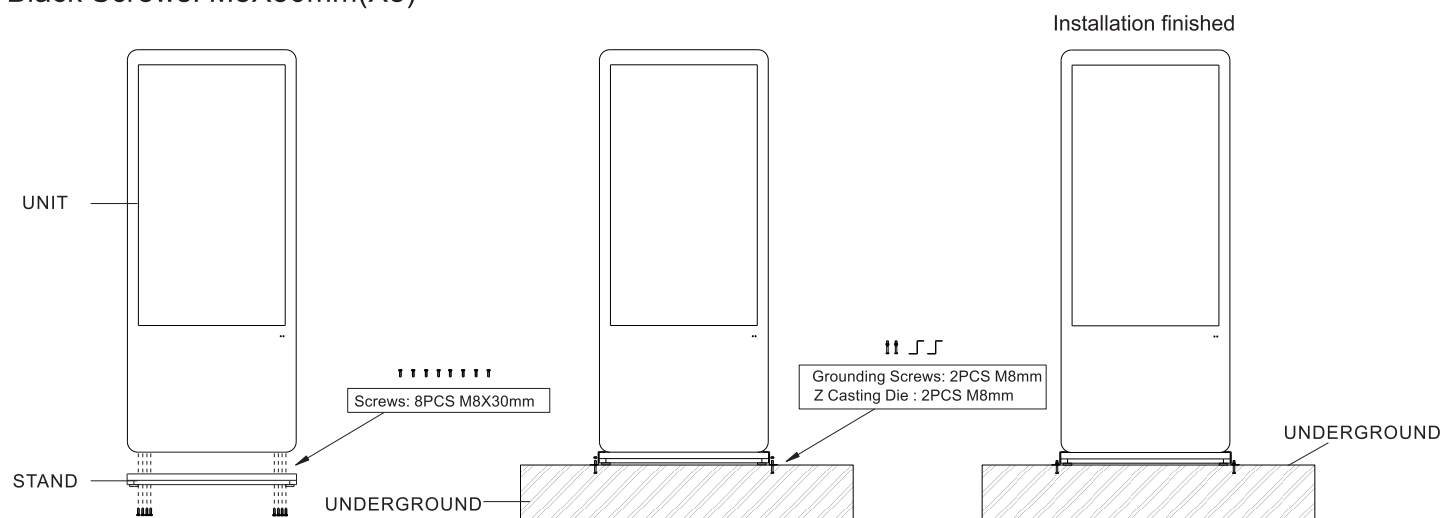

**Warning:** Improper installation may lead to serious accidents such as prototype topples over or personal injury.

Logging in

Login with your provided Cybercast account information. That includes a username and password.

Please login using your username and password

Username:

Password:

Login

Exit

Device Manager

This is where you will manage your new or unassigned devices and create locations for them.


Add Location


Location name


Assigned Devices


Devices assigned to this location


Unassigned Devices


 Kd1

 officedesk

 KTDongle







Cancel

Save

Start by entering a suitable name for the location of your digital display. Then press **Save**.


Device Manager

This list will allow you to organise and edit a

Locations①

All Devices④

Add Location



KT Office ①

Your new location will now display under the **Device Manager** section.

Click on the tab called - All Devices. Your digital displays should appear here. Simply click assign. Then simply select your location and apply.  
You have now assigned your digital display to your location.  
Please proceed to Media Manager on the left-hand side menu.

Media Manager

This is where you will manage your media files, such as an image or video file.

Media Manager

Folder Name

Add Folder

Media Folders

Original Promo

Wine promotion3

Cybercast MM

Start by entering a name for the Folder you wish to import your media to.  
Click **Add Folder**.

Media Folders

New Media Folder

+

Add File

Select the Folder in the Folder view.  
To add files to the folder click **Add File**.

Add File

File type:.jpg,.png,.mp3,.mp4

Browse

Size:51.92 KB of 256 MB

Close

Add

Select the files you want to import using the **Browse** button.  
To add files to the folder click **Add**.

Campaign Manager

This is where you will choose a template and attach media files to the template for your ads.

Start new campaign

Click the “Add Campaign” button to start a new campaign

 
Add Campaign

To start a new campaign, simply click on **Add Campaign**.

Campaign Creator

Campaign Name

Type in a name for your campaign in the field provided.

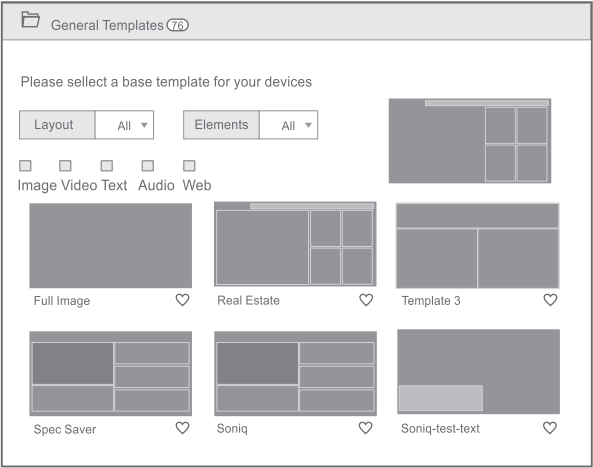


Then choose the template that best suits your advertisement.

Some templates can have sections allocated for videos or even scrolling text.


You can simply use the filter template options to find a suitable template.

\* Be aware that you have the right artwork dimensions when adding media files to your Template.

 Campaign Manager

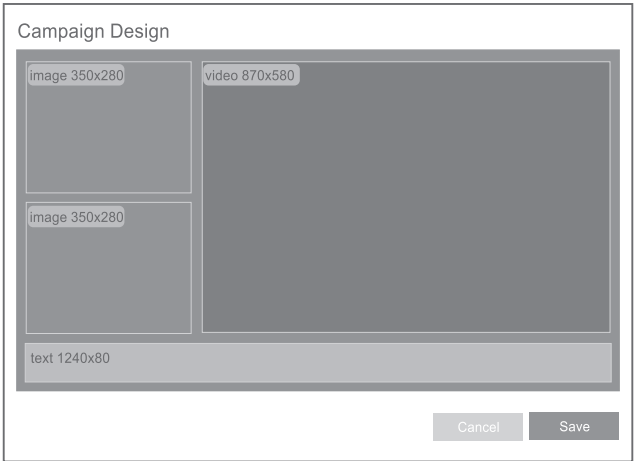


 Click on the template. You will now have the ability to upload files to the template. Click on the section you want to upload the media file.

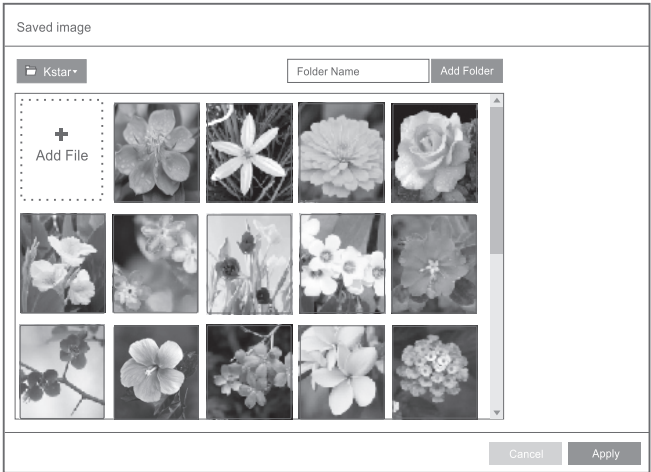


A popup will appear, where you'll be able to select your media files you have uploaded in Media Manager.

 
Campaign Manager

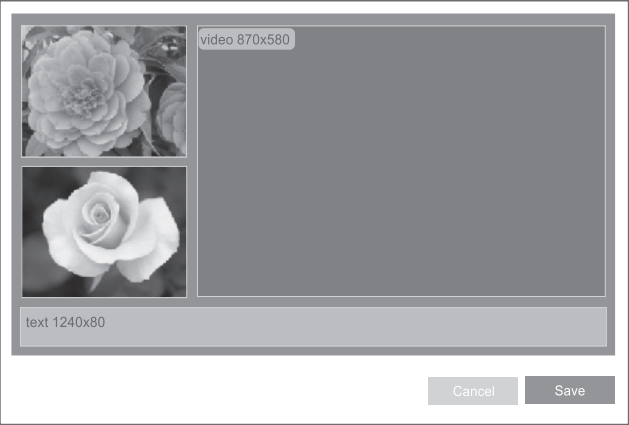

 Complete the rest of the sections and when you’re done, press **Save**.  
Or press **Cancel** if you want to choose another Template.

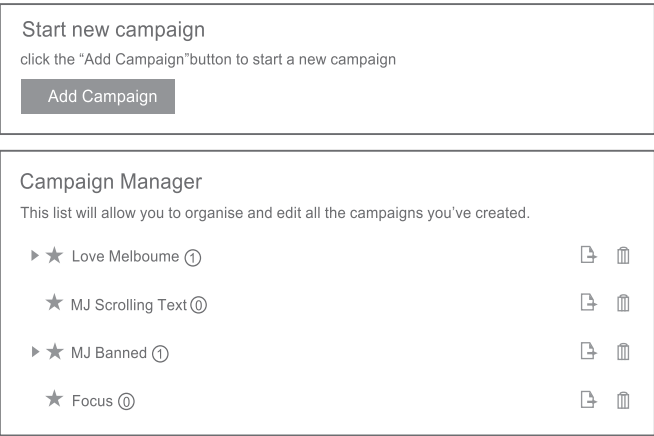

 Once saved, your campaign will be listed under **Campaign Manager**.

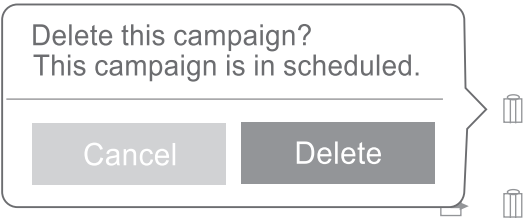

If you need to remove your campaign, click the bin icon to remove.

Schedule Campaign

After completing your first campaign, proceed to Schedule Manager on the left-hand side menu.

Package Contents



 
1pc Main Unit



1pc Stand



Screws: 8pcs M8x30mm

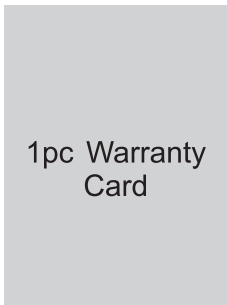

Grounding Screws: 2PCS M8mm



Z Casting Die : 2PCS M8mm



|                            |                               |                           |
|----------------------------|-------------------------------|---------------------------|
| Power Source               | 220-240V~ AC, 50Hz            |                           |
| Electric Current           | 0.6A                          |                           |
| Panel Spec                 | Effective Display Area        | 1209.6mm x 680.4mm        |
|                            | Panel Native Resolution       | 1920 x 1080 pixels        |
|                            | Brightness                    | 300cd/m <sup>2</sup>      |
|                            | Contrast Ratio                | 1200 : 1                  |
|                            | Color Depth                   | 8bit, 16.7 Million colors |
|                            | Expectation of Life           | around 50,000 hours       |
| Input/Output               | USB IN                        | USB X 2                   |
|                            | LAN                           | RJ45 x 1                  |
|                            | SD CARD                       | SD CARD SOCKET X 1        |
|                            | HDMI Out                      | HDMI X 1                  |
| Wireless LAN Specification | Standard                      | IEEE802.11 802.11b/g/n    |
|                            | Frequency Band                | 2.4~2.4835 GHz ISM Band   |
| Audio Power                | 5W + 5W                       |                           |
| Unit Dimension             | 790(L) x 463(W) x 1935.8(H)mm |                           |