


Steps to format USB drive for recording and set up timer recording


USB flash drive (<32GB) or USB hard disk drive with external AC adaptor (< 2TB) is recommended.




01 Press Menu button and go to Option Menu. Select PVR File System

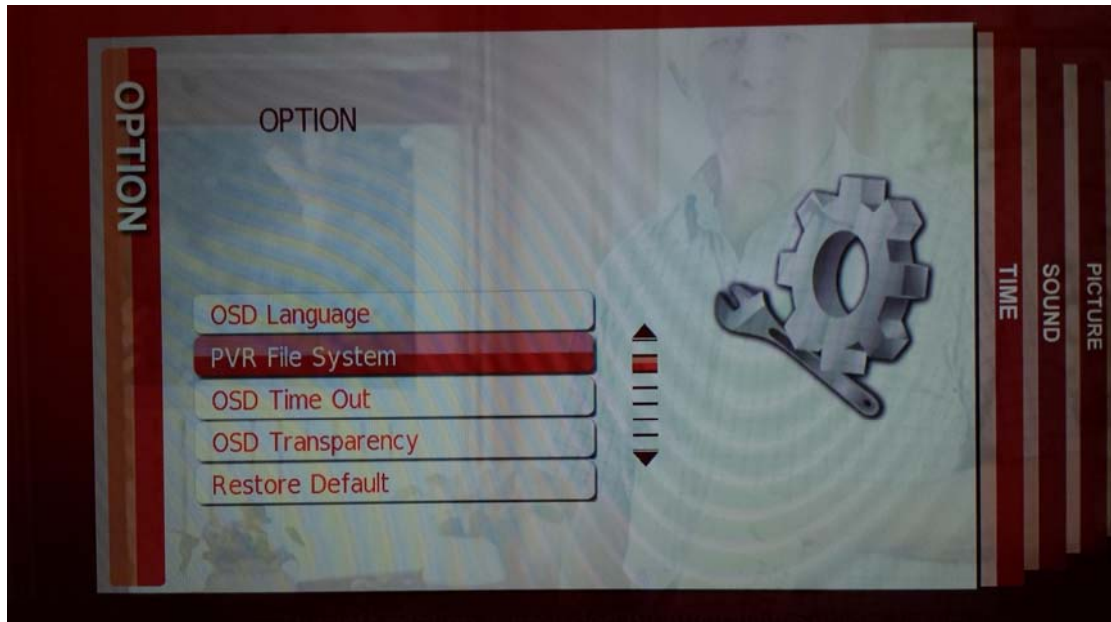


02 Select Format

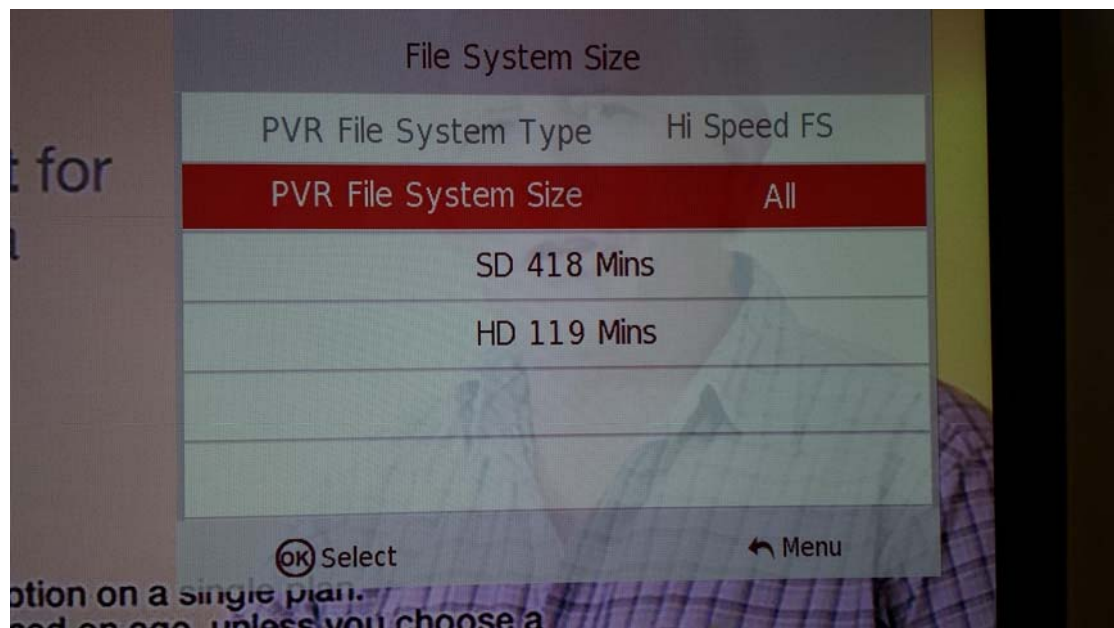


03 Select PVR File System Size All

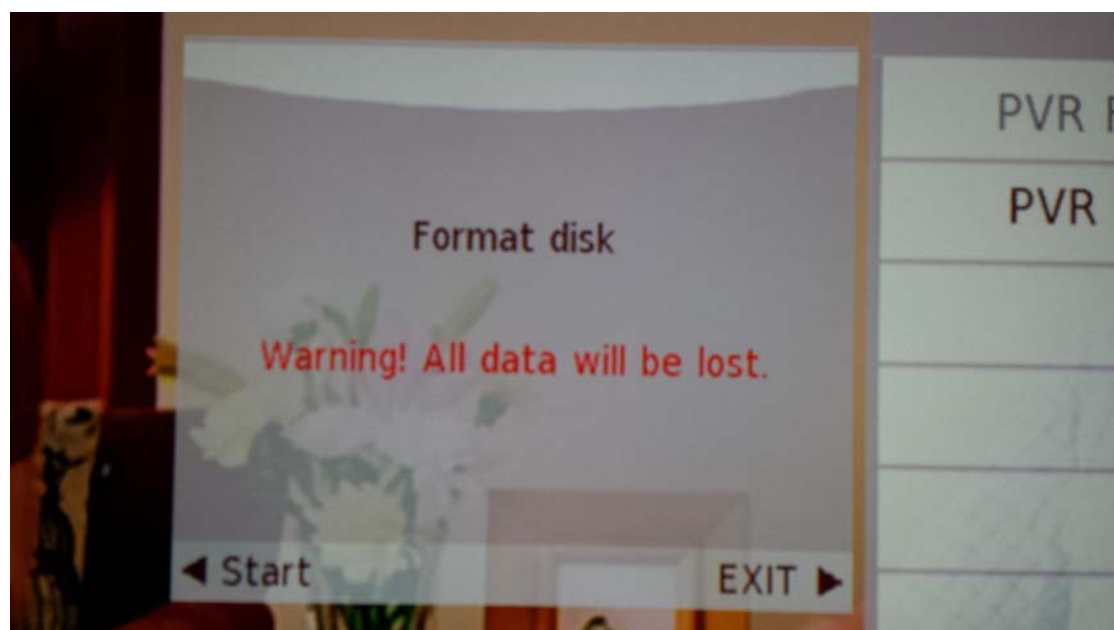


04 Press left arrow key to start format

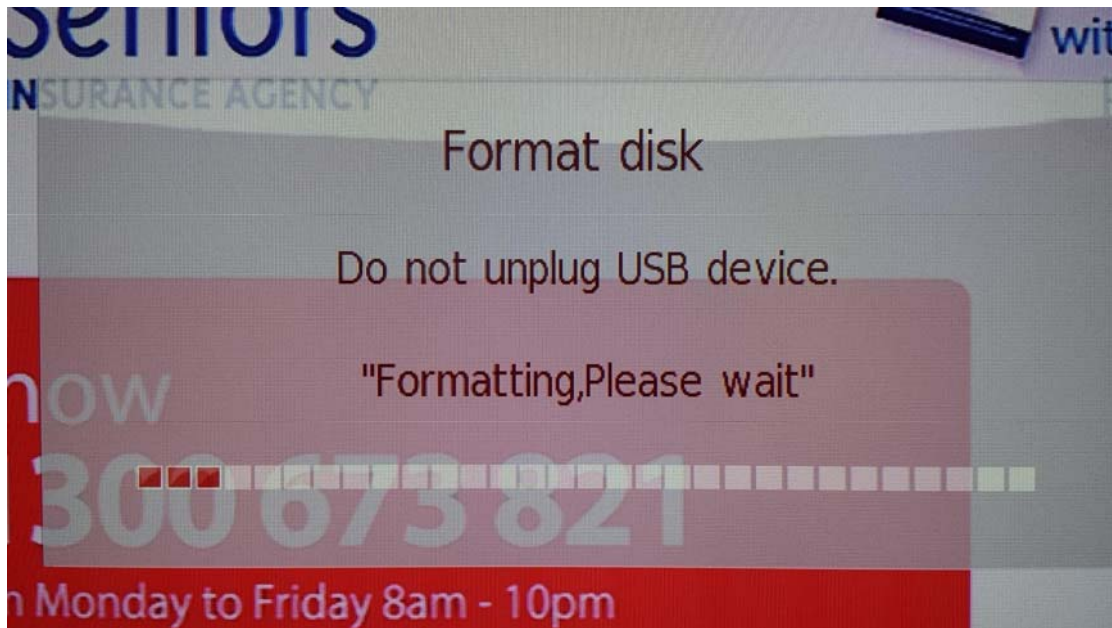


05 Disk formatting

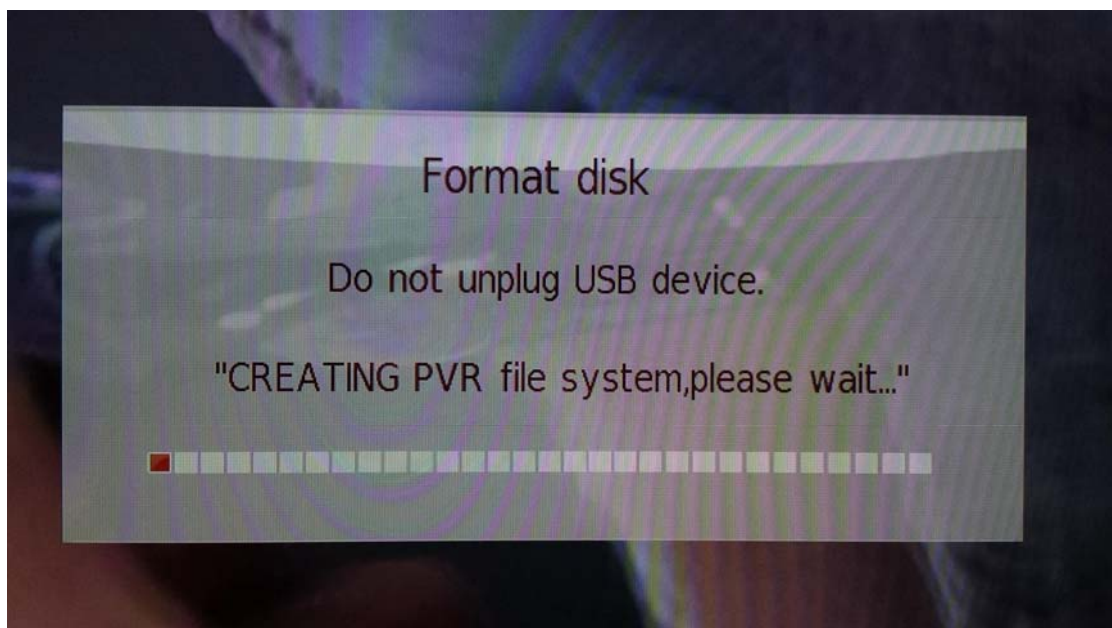


06 Creating PVR File System

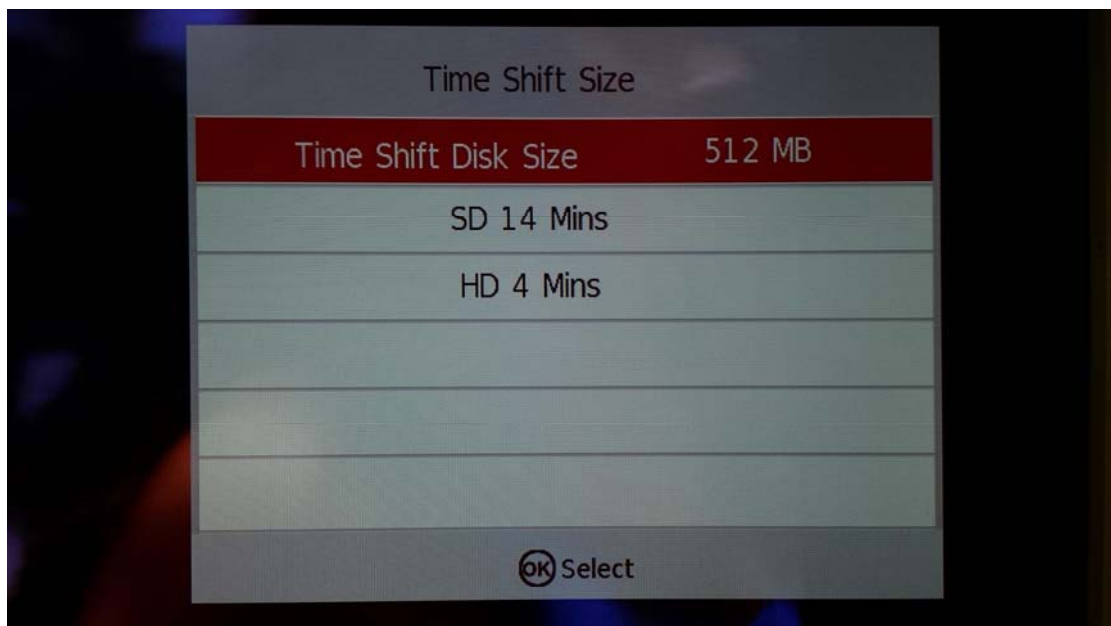


07 Press OK on Time Shift Disk Size

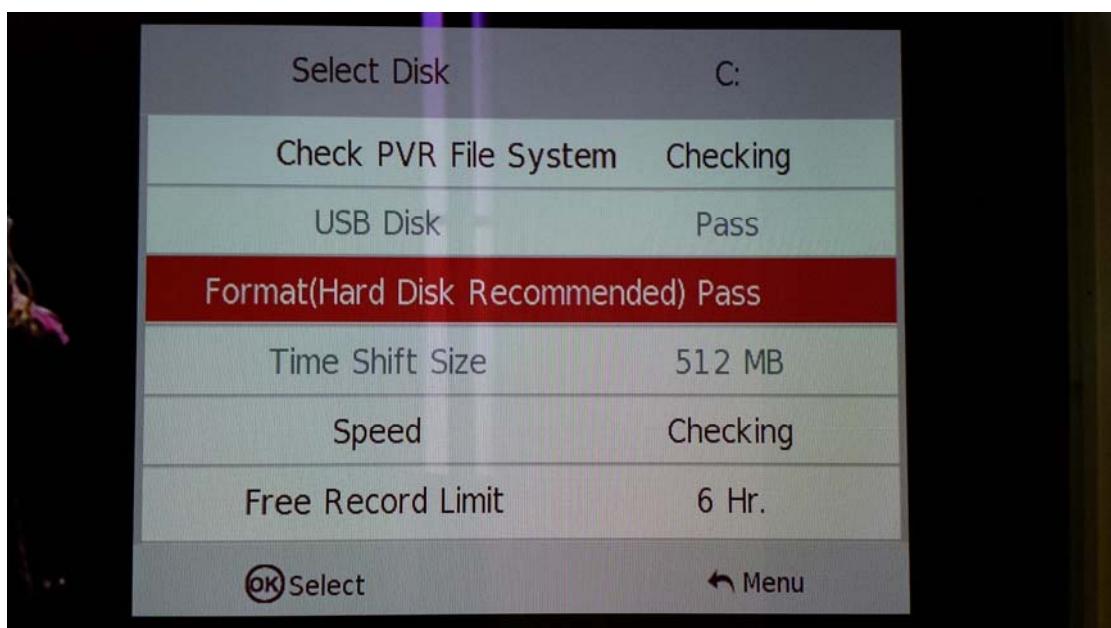


08 Speed Check on USB drive

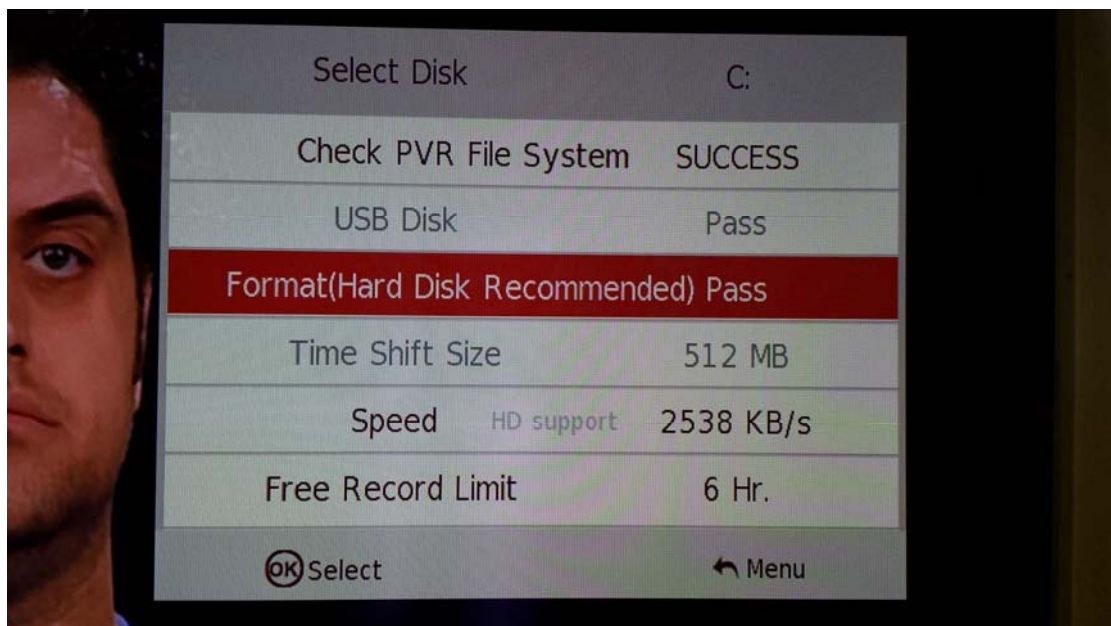

09 Disk Speed - HD Support

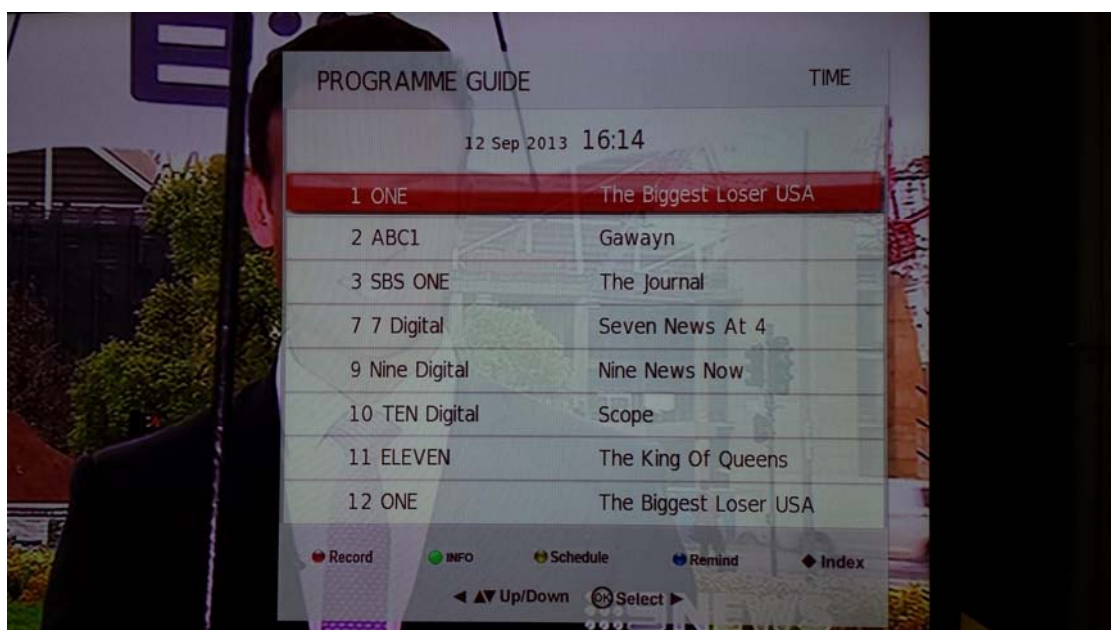


10 Press EPG button to bring up EPG

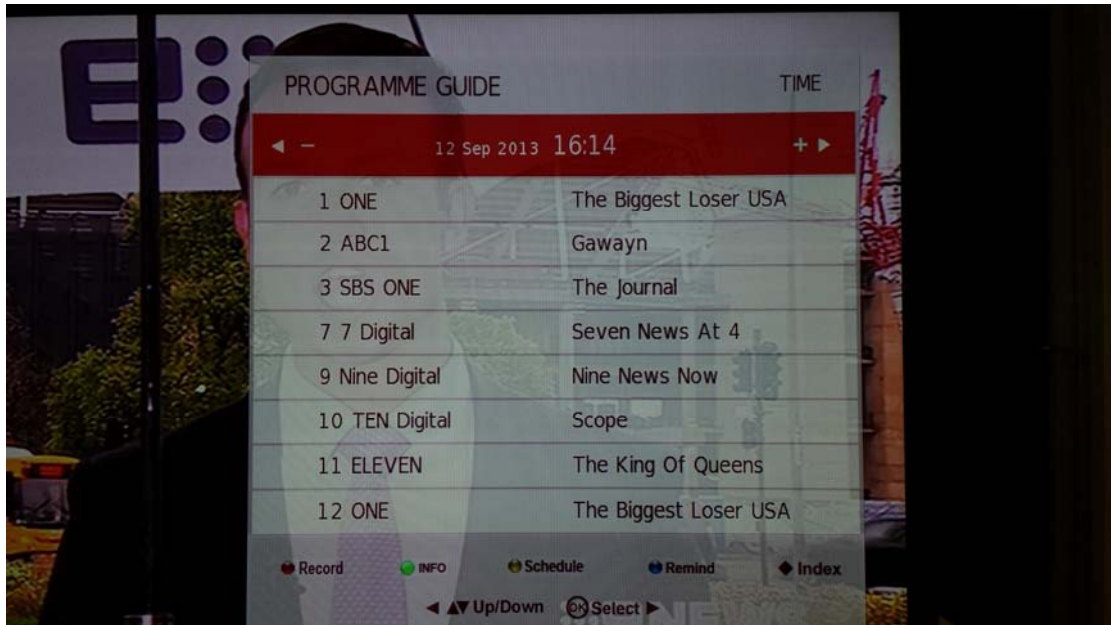

11 Press up arrow key to change time if needed. Left or right arrow to change




12 Select preferred channel and press OK

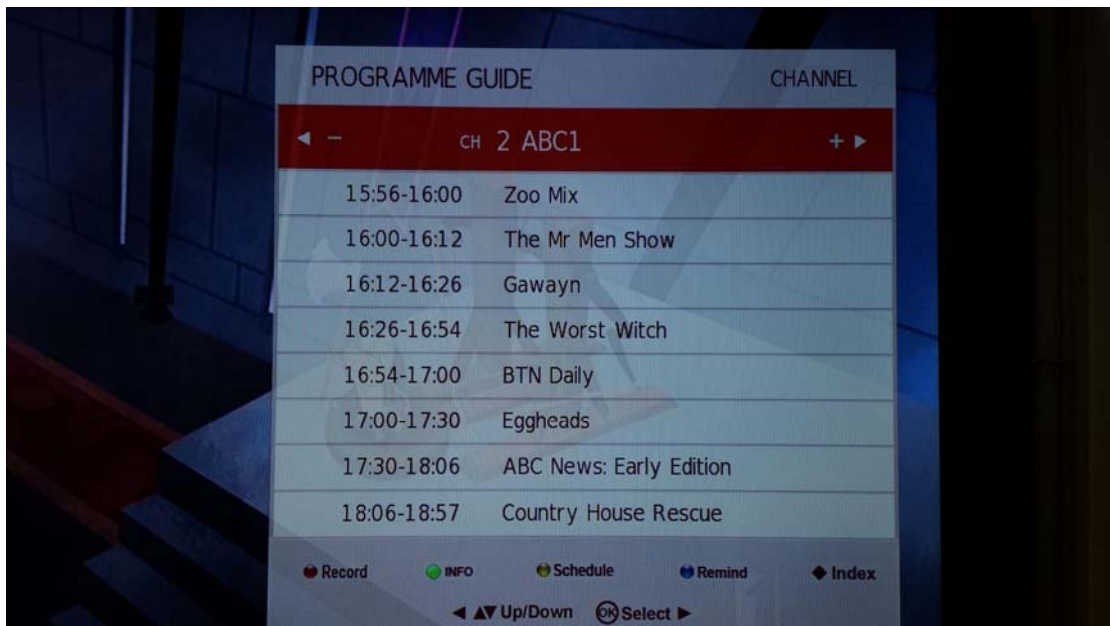


13 Press Index button to change to program list




14 Select preferred program to record. Press red button to record

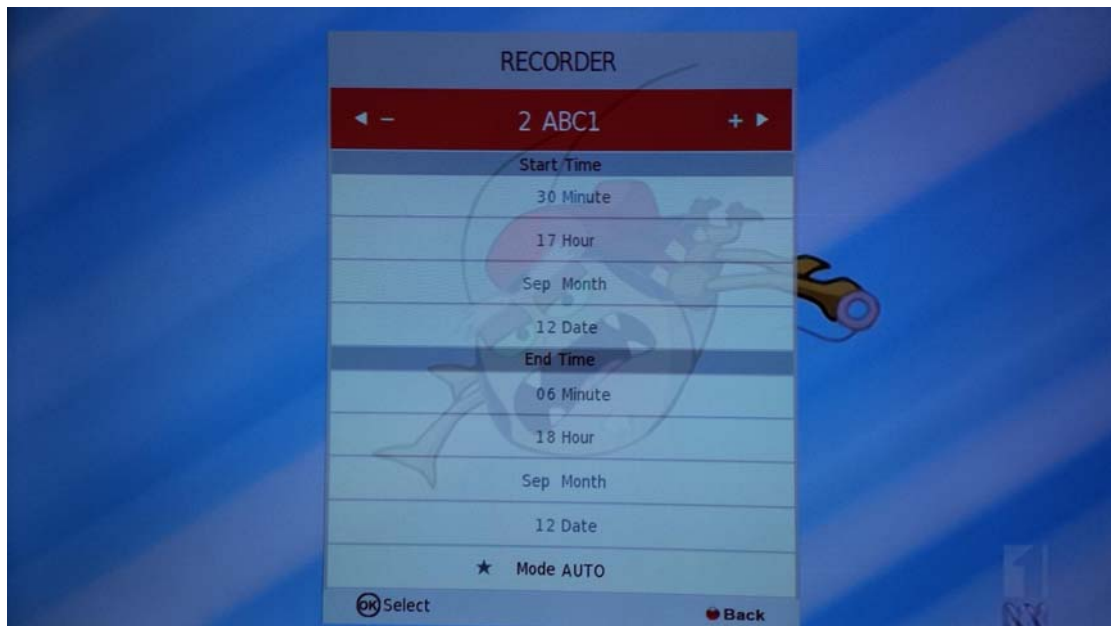


15 Recorder is shown

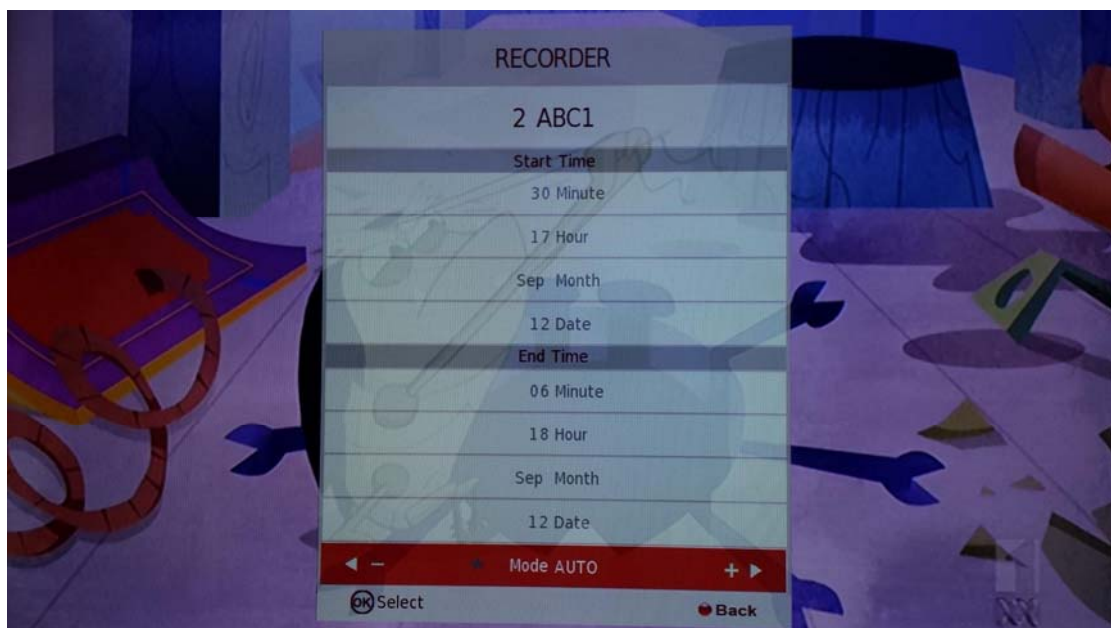


16 Go to Mode

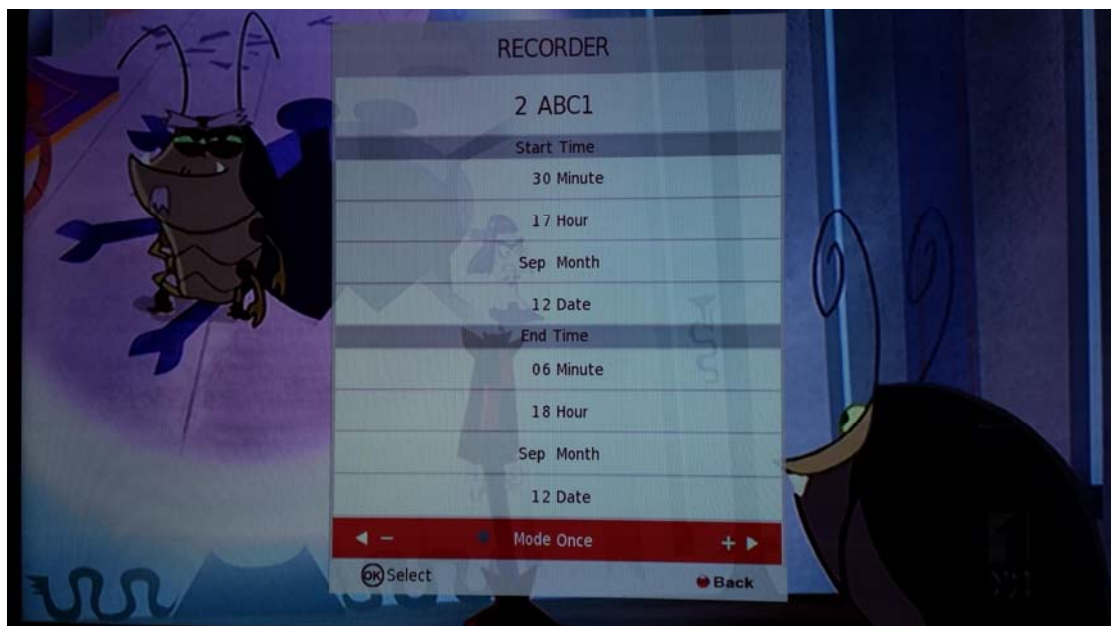

17 Change Mode to Once Daily or Weekly

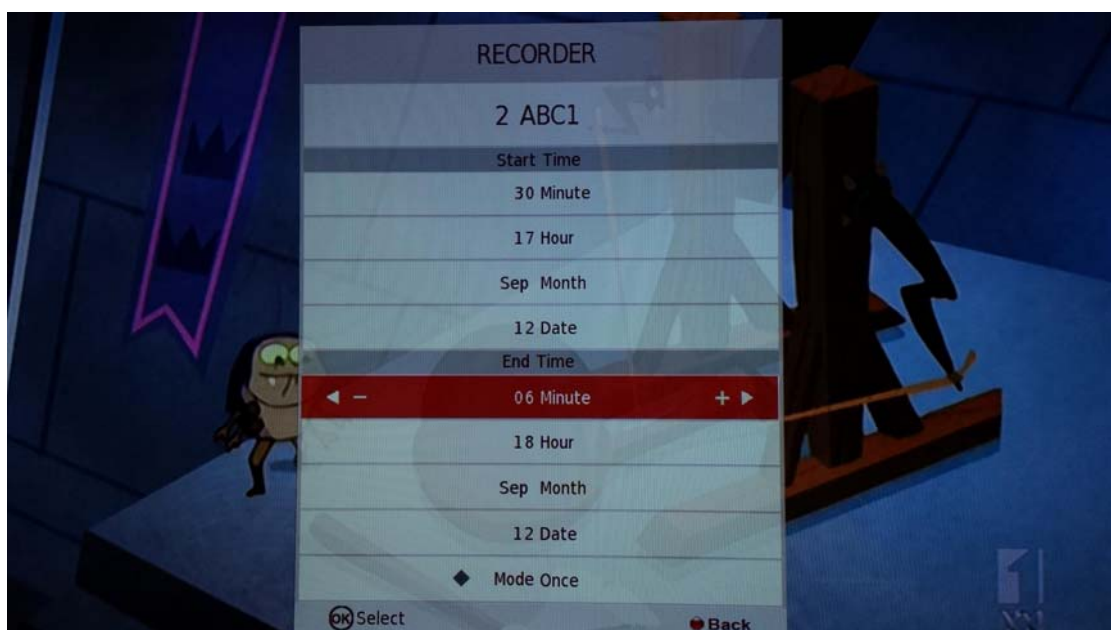

18 Adjust Start or End time if necessary

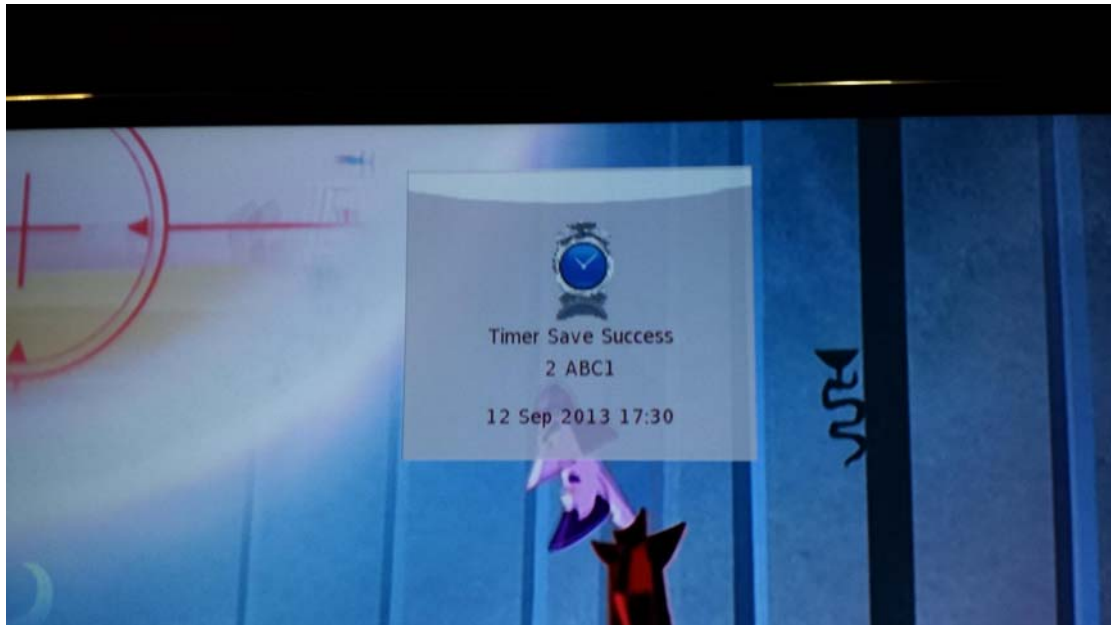


19 Press OK to save timer



20 Check Saved Timer. Press red button to delete if necessary



21 Exit to channel and press PVR.L button to show recorded files

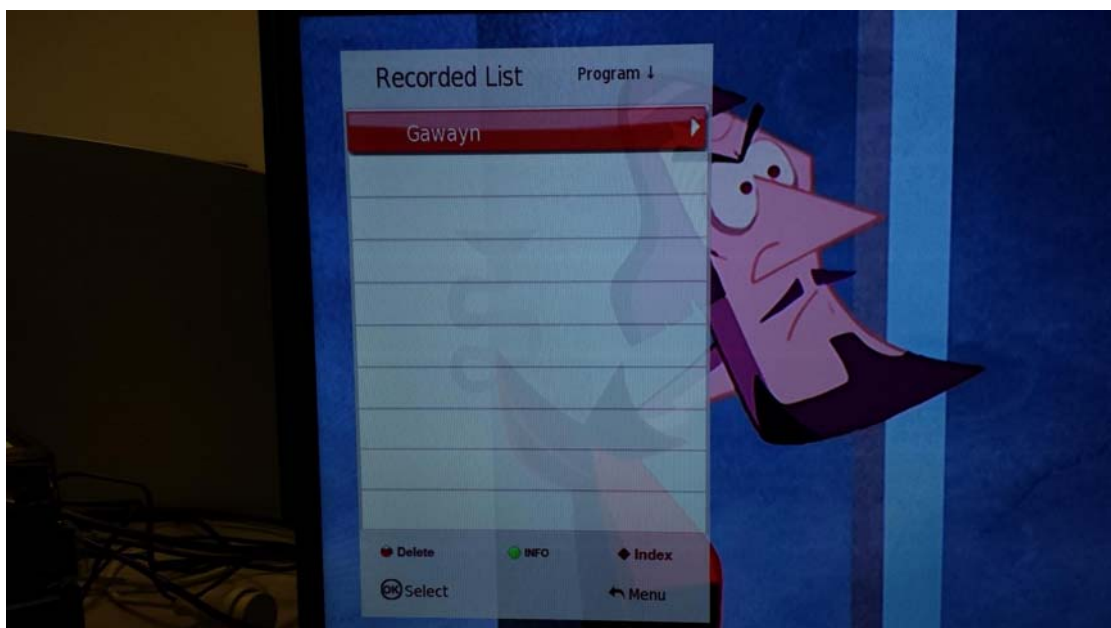

22 Press OK to play or press red button to delete recorded file



23 Recorded file is being played